 


The following catalog
has gaps in its page
numbers, or doesn't
have any numbers.
We have chosen to
leave the page
numbering in the
order that Acrobat
assigns it.

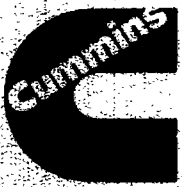

 
Parts Catalog

DNBA / DWBA

DNCA / DWCA

DNCB / DWCB

PMG Generator Set

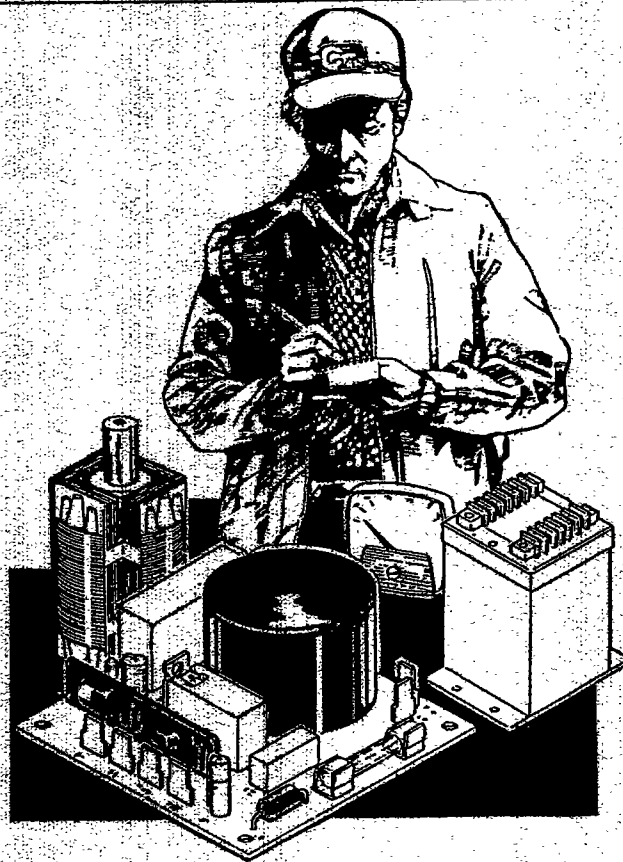

General Information

For part or service, contact the distributor from whom you purchased this equipment or refer to the nearest Authorized Cummins Distributor.

To avoid errors or delays in filling your parts order, always give the full MODEL, SERIAL and ID No. from the nameplate.

For handy reference, insert "YOUR" nameplate information in the spaces below.



AC Generator Set
Model _____

kw	kva	pf	phase
voltage	amps		
duty	overload		
rpm	hs		
class of insulation	pmg voltage		
field amp max	field voltage max		
generator model no.			
voltage regulator model no.			
ID no.			
generator set serial no.			
BS5000		NEMA	

TABLE OF CONTENTS

INDEX	1
INTRODUCTION	2
ENGINE COMPONENTS	3
EXHAUST SYSTEM	4
EXHAUST SYSTEM	5
AIR CLEANER (STANDARD) DNBA,DWBA	6
AIR CLEANER (STANDARD) DNCA,DNCB;DWCA,DWCB	7
AIR CLEANER (HEAVY DUTY) DNCA,DNCB;DWCA,DWCB	8
ELECTRONIC GOVERNOR	9
COOLING SYSTEM (RADIATOR)	11
CHASSIS.....	13
HEATER ENGINE COOLANT	14
GENERATOR	15
STATOR SECTION OF GENERATOR	17
STATOR SECTION OF GENERATOR [DNCB&DWCB EXT STACK CODE L&Z ONLY]	19
ROTOR SECTION OF GENERATOR	21
ROTOR SECTION OF GENERATOR [DNCB&DWCB EXT STACK CODE L&Z ONLY]	23
OVERSPEED SWITCH	24
OVERSPEED SENSOR	25
PERMANENT MAGNET EXCITER	26
CONTROL HEATER	27
GENERATOR SET CONTROL	29
ENGINE CONTROL	31
GENERATOR CONTROL	33
WATTMETER.....	34
POTENTIAL TRASNFORMER.....	35
NUMERICAL INDEX	36

Index

Actuator, Governor 9
Adapter, Exhaust 4,5
Bell, End - Generator 17,19
Cable, Battery 3
Cable, Pickup - Magnetic 25
Cap, Radiator 11
Cap, Rain - Exhaust 4,5
Chassis 13
Cleaner, Air 6,7,8
Control, Engine 31
Control, Generator 33
Control, Generator Set 29
Cooling System 11
Drain, Oil 3
Exhaust System 4, 5
Fan, Cooling 11
Filter, Air 6,7,8
Gasket, Drain - Oil 3
Gauge, Pressure - Oil 31
Gauge, Temperature - Oil 31
Gauge, Temperature - Water 31
Generator 15
Governor, Electronic 9
Guard, Belt 11
Guard, Fan 11
Harness, Wiring - Control (AC) 33
Harness, Wiring - Control (DC) 31
Harness, Wiring - Control To Engine 31
Heater, Control 27
Heater, Coolant - Engine 14
Hose, Drain - Oil 3
Hose, Radiator 11
Housing, Control 29
Indicator, Service - Air Cleaner 6,7,8
Light, Indicator 31
Line, Fuel - Flex 3
Meter, Ampere 33
Meter, Frequency 33
Meter, Tach 33
Meter, Time - Running 33
Pickup, Magnetic 25
Radiator 11
Rotor, Exciter 21,23
Rotor, Exciter - Components 21,23
Rotor, Generator 21,23
Sender, Pressure - Oil 3
Sender, Temperature - Lo Engine 3
Sender, Temperature - Oil 3
Sender, Temperature - Water 3
Silencer, Exhaust 4,5
Stator, Exciter 17,19
Stator, Generator 17,19
Switch, Overspeed 24
Switch, Pressure - Lo Oil 3
Switch, Push - Reset/Panel 31
Switch, Push - Run/Stop/Remote 31
Switch, Rotary - Generator Control 33
Switch, Temperature - Hi Water 3
Switch, Temperature - Pre Water 3
Thermostat, Heater - Water 14
Transformer, Current 29
Transformer, Potential 35
Valve, Drain - Oil 3
Voltmeter 31, 23
Wattmeter 34

Introduction

This Parts Manual applies to the Standard Gen Sets Listed below. The illustrations are arranged in groups of related items, and each part or assembly is identified by a Reference Number. All parts illustrated are typical, and unless otherwise mentioned in the description column the parts are interchangeable between models.

These typical illustrations are subject to change and reflect only the latest replacement parts arrangement. The Right and Left sides of the Set are determined by FACING the FRONT (Engine end) of the Set.

Set Data Table

MODEL IDENTIFICATION	RATING	RPM RATING	BATTERY VOLTAGE
35.0 DNBA/DWBA - */ # @	35,000 WATTS	1500 RPM	24 VDC
40.0 DNBA/DWBA - */ # @	40,000 WATTS	1800 RPM	24 VDC
40.0 DNCA/DWCA - */ # @	40,000 WATTS	1500 RPM	24 VDC
50.0 DNCA/DWCA - */ # @	50,000 WATTS	1800 RPM	24 VDC
50.0 DNCB/DWCB - */ # @	50,000 WATTS	1500 RPM	24 VDC
60.0 DNCB/DWCB - */ # @	60,000 WATTS	1800 RPM	24 VDC

Electrical Data Table

*VOLTAGE CODE	VOLTS	HERTZ	WIRE	PHASE	NOTES
H	347/600	60	4	3	
L	120/208	60	12	3	+
	127/220	60	12	3	
	139/240	60	12	3	
	240/416	60	12	3	
	254/440	60	12	3	
	277/480	60	12	3	
Z	110/190	50	12	3	+
	115/200	50	12	3	
	120/208	50	12	3	
	127/220	50	12	3	
	220/380	50	12	3	
	230/400	50	12	3	
	240/416	50	12	3	
	254/440	50	12	3	

* - Voltage Codes follow Model Letter designations.

- Specification Number: Number 1 is Standard, all others indicate variations.

 
@ - Specification Letter: Letter advances (A to B, B to C, etc) with major manufacturing changes.

+ - The Stators are Reconnectible.

Engine Replacement Parts


The Engine replacement parts can be ordered from the Cummins Engine Distributer except those parts modified or added during the Gen Set Assembly. When ordering engine parts, refer to the Engine Data plate and supply the Model, Serial, and CPL numbers. For assistance in ordering the Engine replacement parts, contact the nearest Cummins Engine Distributor or the Supplier from whom you purchased the Generator Set.

Engine Components (External)

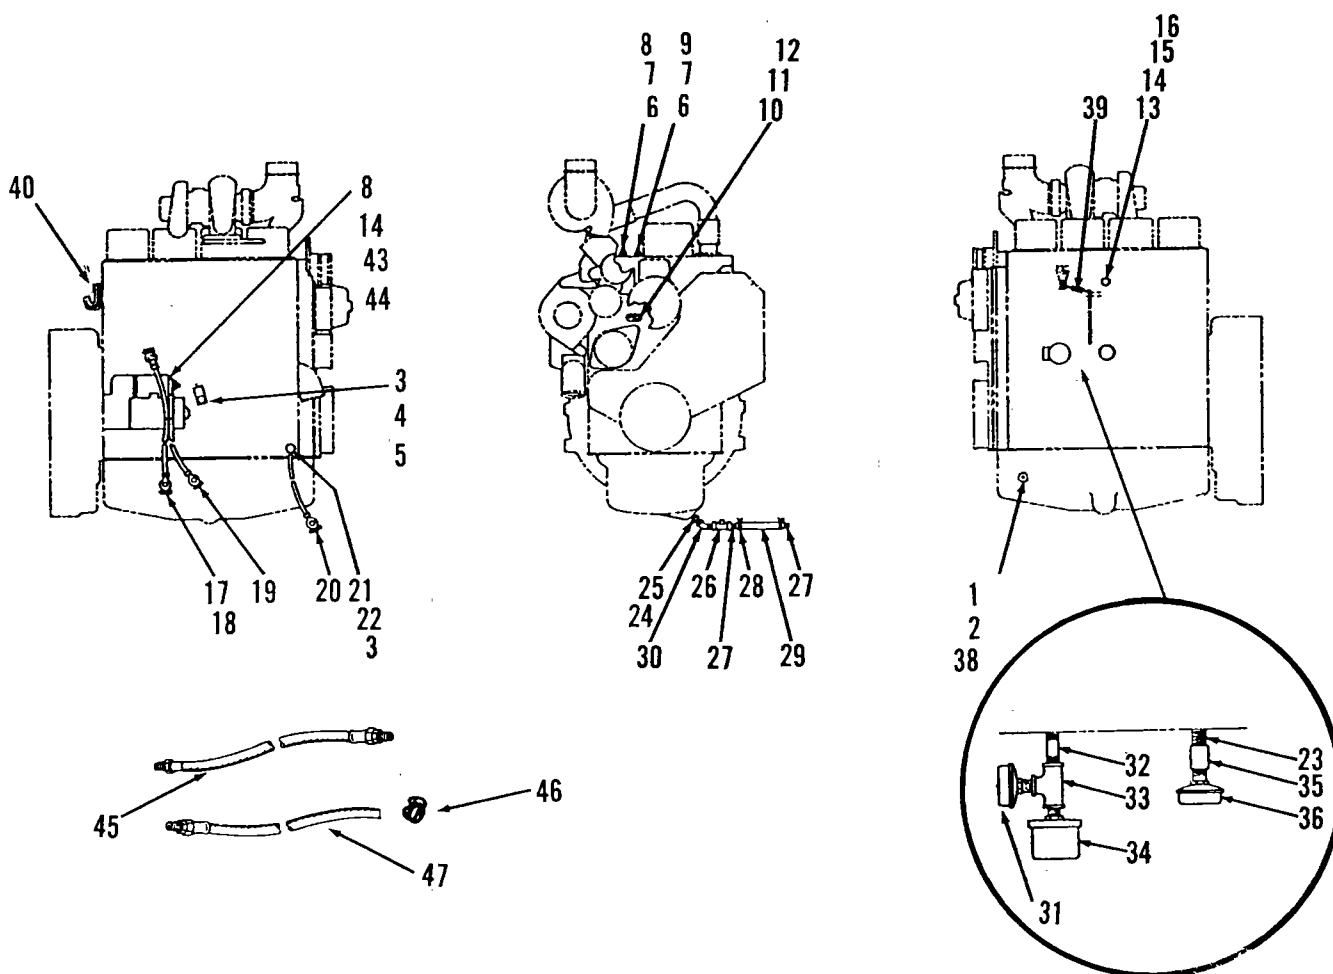

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193-0353	1	Sender, Temperature - Oil	22	850-2012	1	Washer, Lock (M12)
2	187-0146	1	Washer, Sealing	23	505-0098	1	Nipple, Close
3	856-0013	3	Washer, Lock - EIT (1/2")	24	102-1147	1	Gasket, Drain - Oil Pan
4	332-2739	1	Bracket Assembly, Terminal	25	102-1237	1	Adapter, Drain - Oil
5	800-2112	1	Screw, Cap - Hex Head (M12-1.75 x 30mm)	26	504-0011	1	Valve, Shutoff
6	309-0554	1	Switch, Temperature	27	505-0185	2	Nipple, Half
7	812-0075	1	Screw, Machine - Round Head (#8-32 x 1/4")	28	503-0197	2	Clamp, Hose
8	850-0025	2	Washer, Lock (#8)	29	503-0098	1	Hose, Drain (6")
9	309-0553	1	Switch, Temperature	30	505-0248	1	Elbow, Pipe - Street
10	800-2060	1	Screw, Cap - Hex Head (M8-1.25 x 35mm)	31	309-0169	1	Switch, Pressure - Oil
11	850-2008	1	Washer, Lock (M8)	32	505-0104	1	Nipple, Pipe - Short
12	309-0269	1	Switch, Temperature	33	505-0059	1	Tee, Pipe - Black
13	193-0375	1	Sender, Temperature	34	193-0244	1	Sender, Pressure - Oil
14	526-0008	2	Washer, Flat (#10)	35	505-0026	1	Coupling, Pipe
15	850-0030	1	Washer, Lock (#10)	36	309-0272	1	Switch, Pressure - Oil
16	871-0010	1	Nut, Cap - Hex Head (#10-32)	38	505-1373	1	Bushing, Reducer
17	416-0446	1	Cable, Battery (9")	39	145-0596	1	Spring, Extension - Throttle
18	332-0941	2	Tie, Cable	40	332-2921	2	Clamp, J
19	416-0619	1	Cable, Battery (18")	41	850-2006	1	Washer, Lock - Spring (M6)
20	416-0893	1	Cable, Battery (10")	42	860-2007	1	Nut, Hex (M6)
21	800-2110	1	Screw, Cap - Hex Head (M12-1.75 x 20mm)	43	871-0028	1	Nut, Hex (3/8-16)
				44	850-0050	1	Washer, lock - Spring (3/8")
				45	501-0441	1	Line, Fuel - Flex (Fuel In)
				46	503-0685	1	Clamp, Hose
				47	501-0502	1	Line, Fuel - Flex (Fuel Out)

 Exhaust System **DNBA, DWBA**

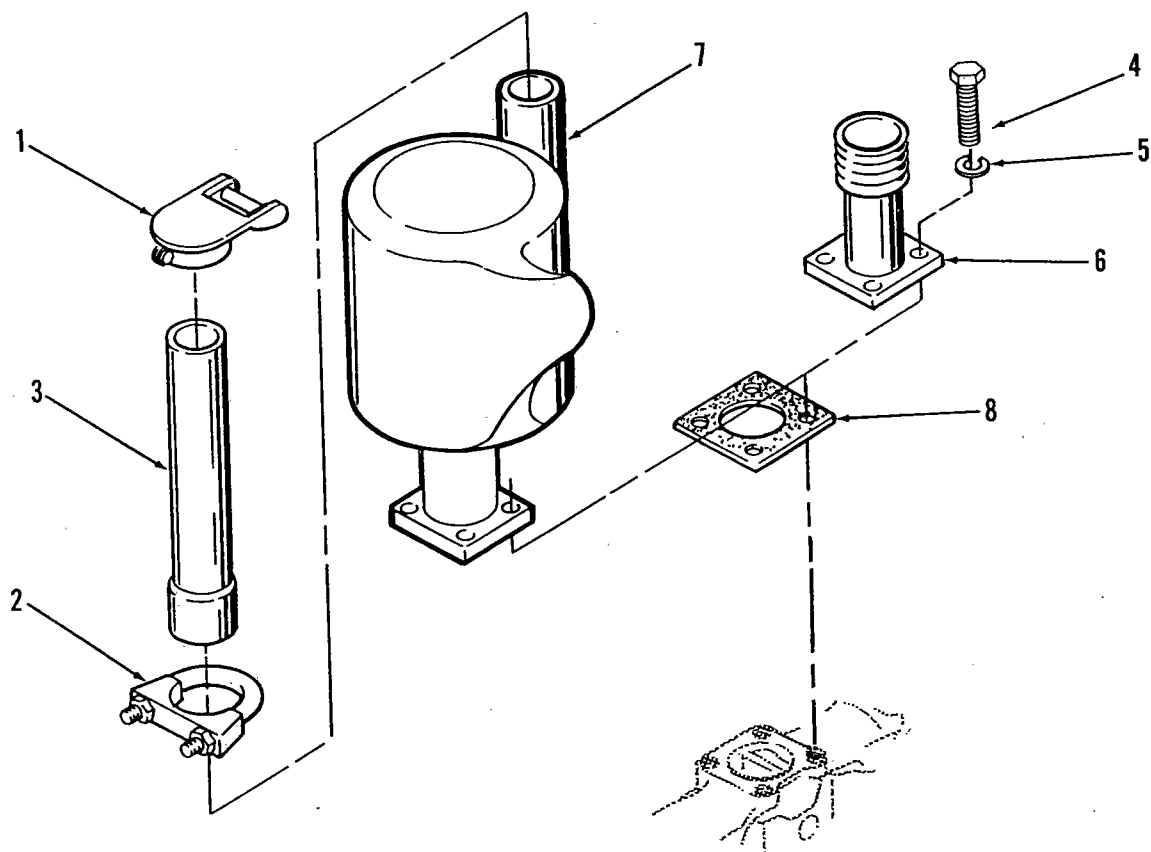


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155-2062-01	1	Cap, Rain
2	155-2080	1	Clamp, Muffler
3	154-2581	1	Tube, Exhaust
4	800-2086	4	Screw, Cap - Hex Head (M10-1.5 x 25mm)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	850-2010	4	Washer, Lock - Spring (M10)
6	154-2706	1	Adapter, Exhaust
7	155-2257	1	Silencer
8	154-2708	1	Gasket


Exhaust System

 DNCA, DNCB
DWCA, DWCB

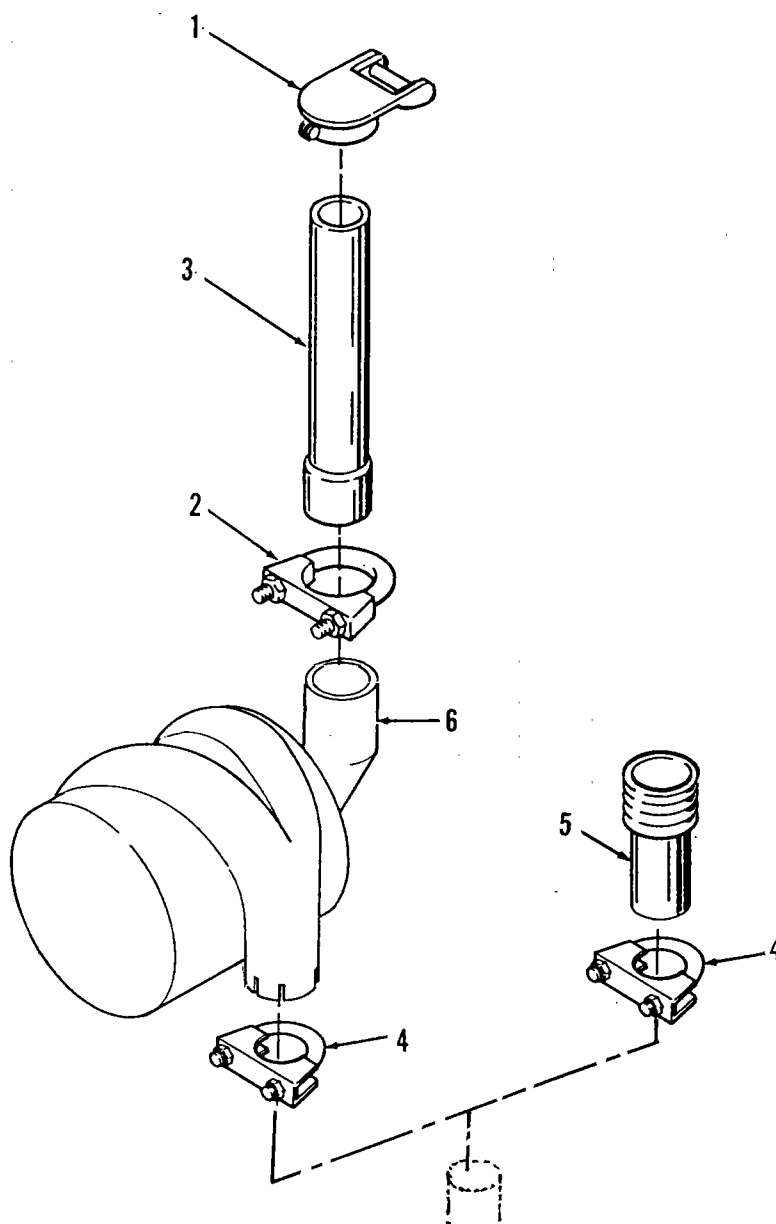

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155-2062-01	1	Cap, Rain	4	155-2175	1	Clamp, Muffler
2	155-2080	1	Clamp, Muffler	5	154-2253	1	Adapter, Exhaust
3	154-2581	1	Tube, Exhaust	6	155-2256	1	Silencer

 Air Cleaner - Standard DNBA, DWBA

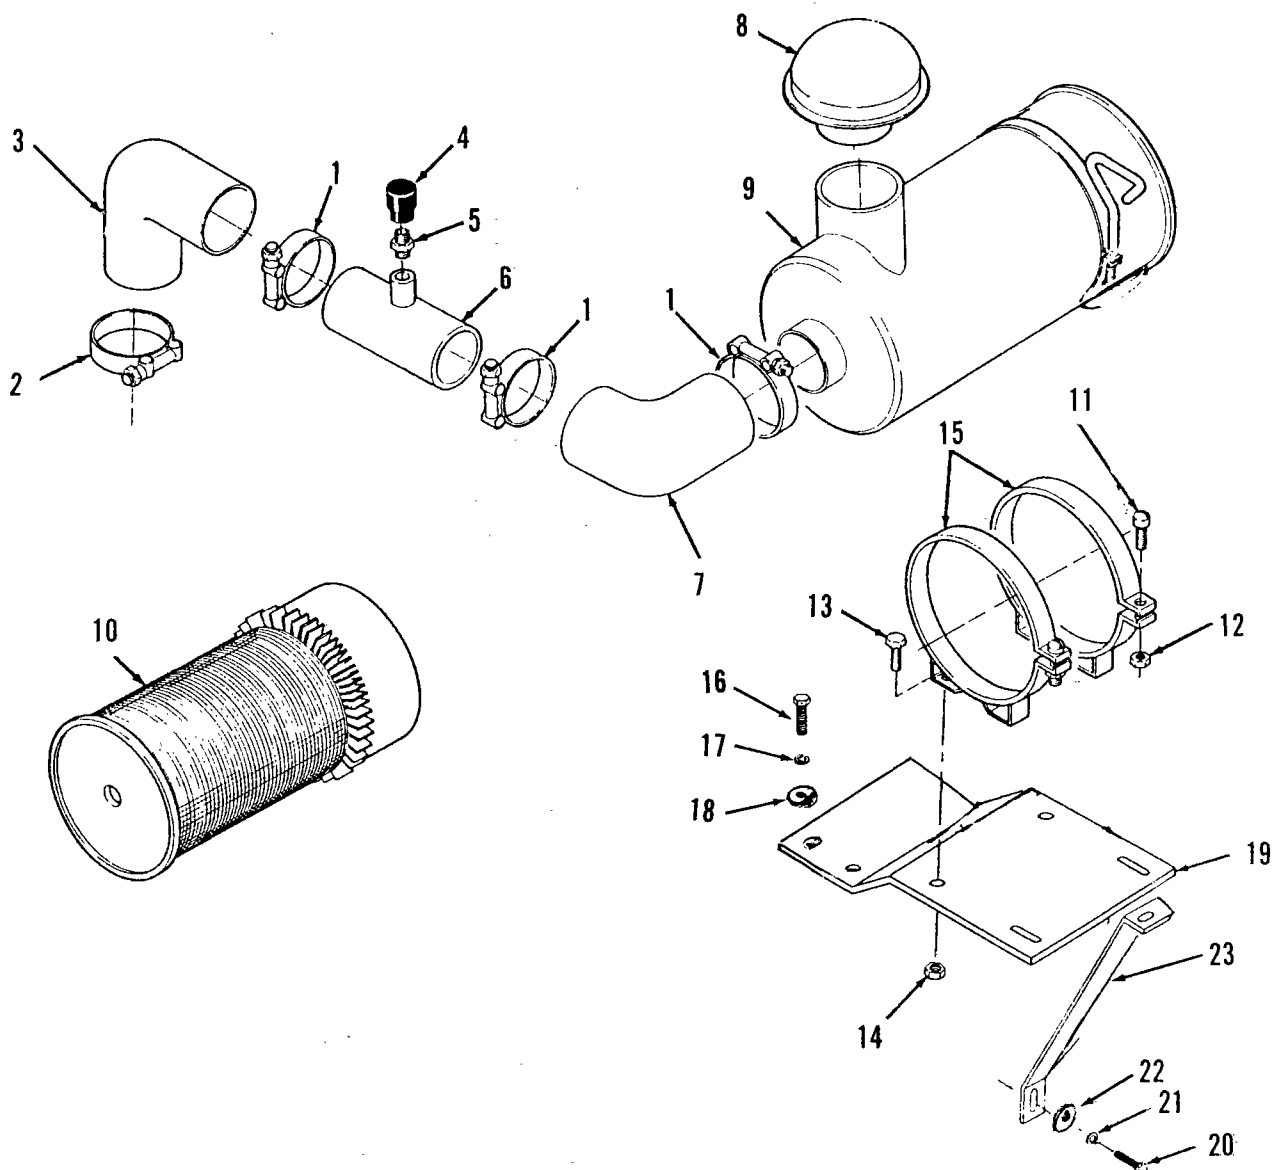


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0999	3	Clamp, Hose
2	503-0868	1	Clamp, Hose
3	503-1520	1	Elbow, Reducing
4	140-1548	1	Indicator, Service
5	140-1260	1	Adapter, Indicator
6	140-2177	1	Tube, Inlet - Air
7	140-1864	1	Elbow
8	140-2157	1	Cap, Air Cleaner
9	140-2158	1	Cleaner, Air (Includes Element)
10	140-2159	1	Element, Air Cleaner
11	815-0115	2	Screw, Machine - Filister Head (1/4-20 x 1")
12	863-0002	2	Nut, Square (1/4-20)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
13	821-0029	4	Screw, Self-locking - Hex Head (3/8-16 x 3/4")
14	870-0281	4	Nut, Self-locking - Hex (3/8-16)
15	140-0078	2	Band, Cleaner - Air
16	800-2084	2	Screw, Cap - Hex Head (M10 x 1.5 x 16mm)
17	850-2010	2	Washer, Lock (M10)
18	526-2120	2	Washer, Flat (M10)
19	140-2178	1	Bracket, Mounting
20	800-2110	1	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)
21	850-2012	1	Washer, Lock (M12)
22	526-2140	1	Washer, Flat (M12)
23	140-2179	1	Brace, Mounting

Air Cleaner - Standard

DNCA, DNCB

 
DWCA, DWCB

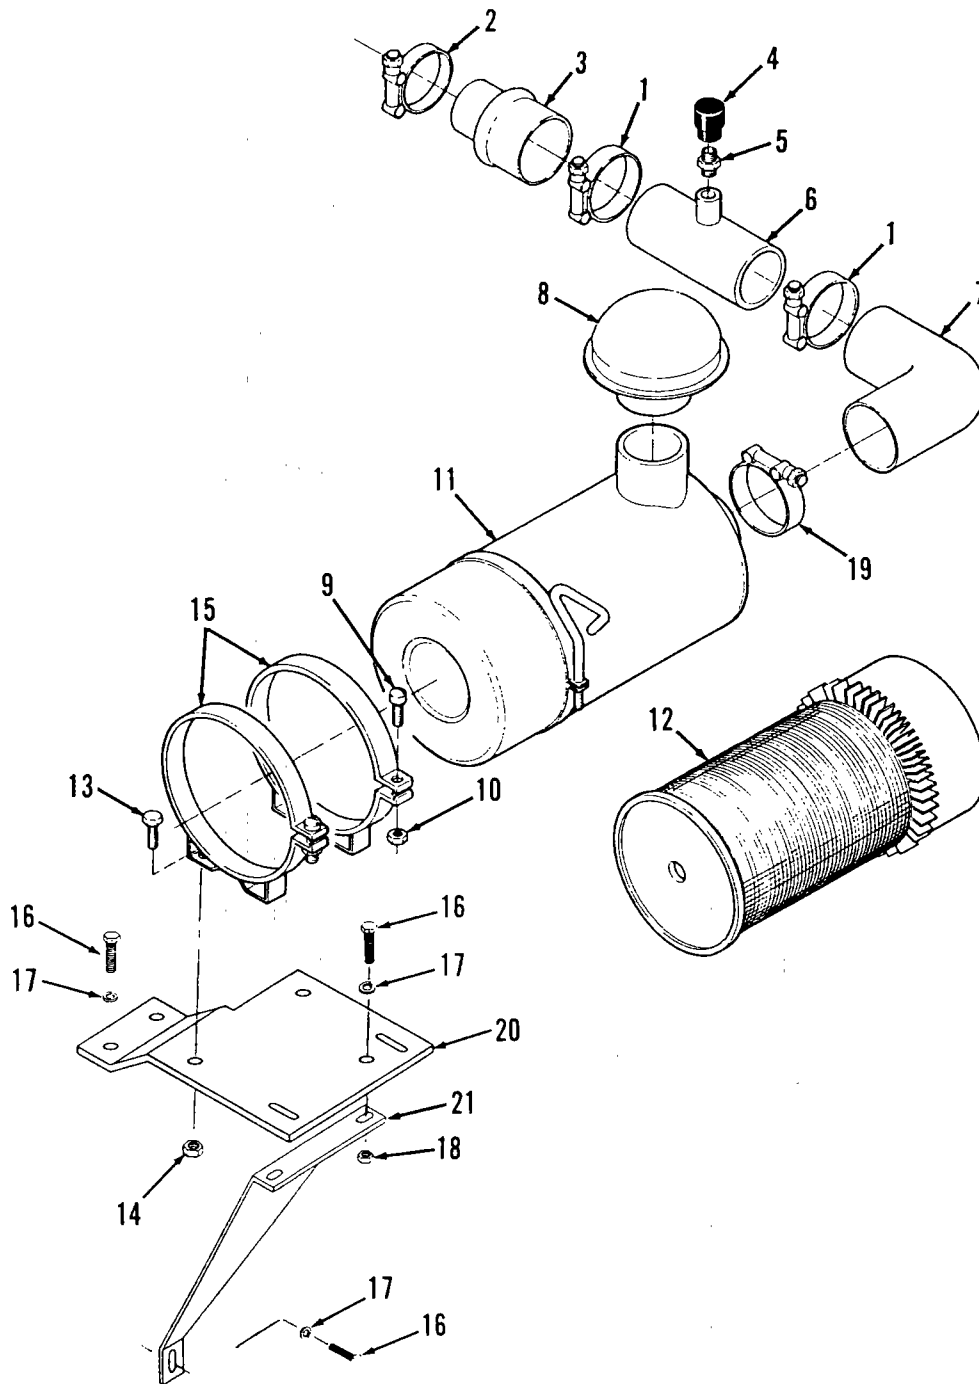

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0998	2	Clamp, Hose
2	503-0868	1	Clamp, Hose
3	503-1543	1	Hose, Reducing
4	140-1548	1	Indicator, Service
5	140-1260	1	Adapter, Indicator
6	140-2166	1	Tube, Inlet - Air
7	503-1542	1	Elbow, Hose - Reducing
8	140-2157	1	Cap, Air Cleaner
9	815-0115	2	Screw, Machine - Fillister Head (1/4-20 x 1")
10	863-0002	2	Nut, Square (1/4-20)
11	140-2158	1	Cleaner, Air (Includes Element)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
12	140-2159	1	Element, Air Cleaner
13	821-0029	4	Screw, Self-locking - Hex Head (3/8 - 16 x 3/4")
14	870-0281	4	Nut, Lock (3/8-16)
15	140-0078	2	Band, Mounting
16	800-2110	4	Screw, Cap - Hex Head (M12 x .8 x 20mm)
17	850-2012	4	Washer, Lock - Spring (M12)
18	750-1010	1	Nut, Hex (M12)
19	503-0999	1	Clamp, Hose
20	140-2164	1	Bracket, Mounting
21	140-2163	1	Brace, Mounting

 Air Cleaner - Heavy Duty
DNCA, DNCB
DWCA, DWCB

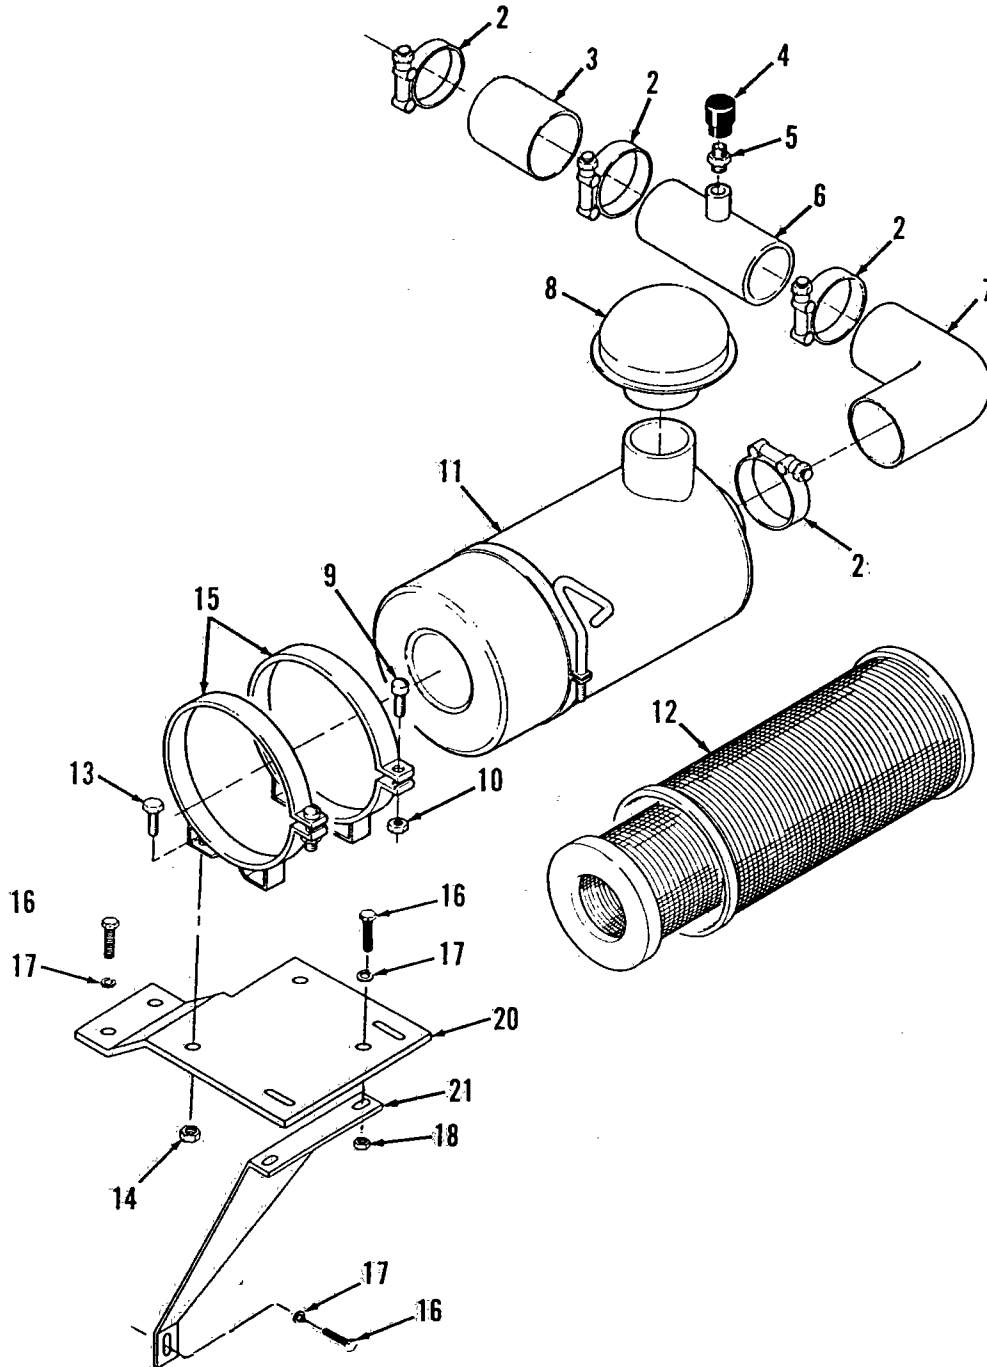

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	503-0868	4	Clamp, Hose	12	140-2161	1	Element, Air Cleaner Primary
3	503-1460	1	Hose, Reducing		140-2162	1	Element, Air Cleaner Secondary
4	140-1548	1	Indicator, Service	13	821-0016	4	Screw, Self-locking - Hex Head (5/16-18 x 3/4")
5	140-1260	1	Adapter, Indicator	14	870-0257	4	Nut, Lock (5/16-18)
6	140-2168	1	Tube, Inlet - Air	15	140-0317	2	Band, Mounting
7	503-1467	1	Elbow, Reducing	16	800-2110	4	Screw, Cap - Hex Head (M12 x .8 x 20mm)
8	140-1435	1	Cap, Air Cleaner	17	850-2012	4	Washer, Lock - Spring (M12)
9	815-0115	2	Screw, Machine - Fillister Head (1/4-20 x 1")	18	750-1010	1	Nut, Hex (M12)
10	863-0002	2	Nut, Square, (1/4-20)	20	140-2164	1	Bracket, Mounting
11	140-2160	1	Cleaner, Air (Includes Element)	21	140-2163	1	Brace, Mounting

 
Electronic Governor

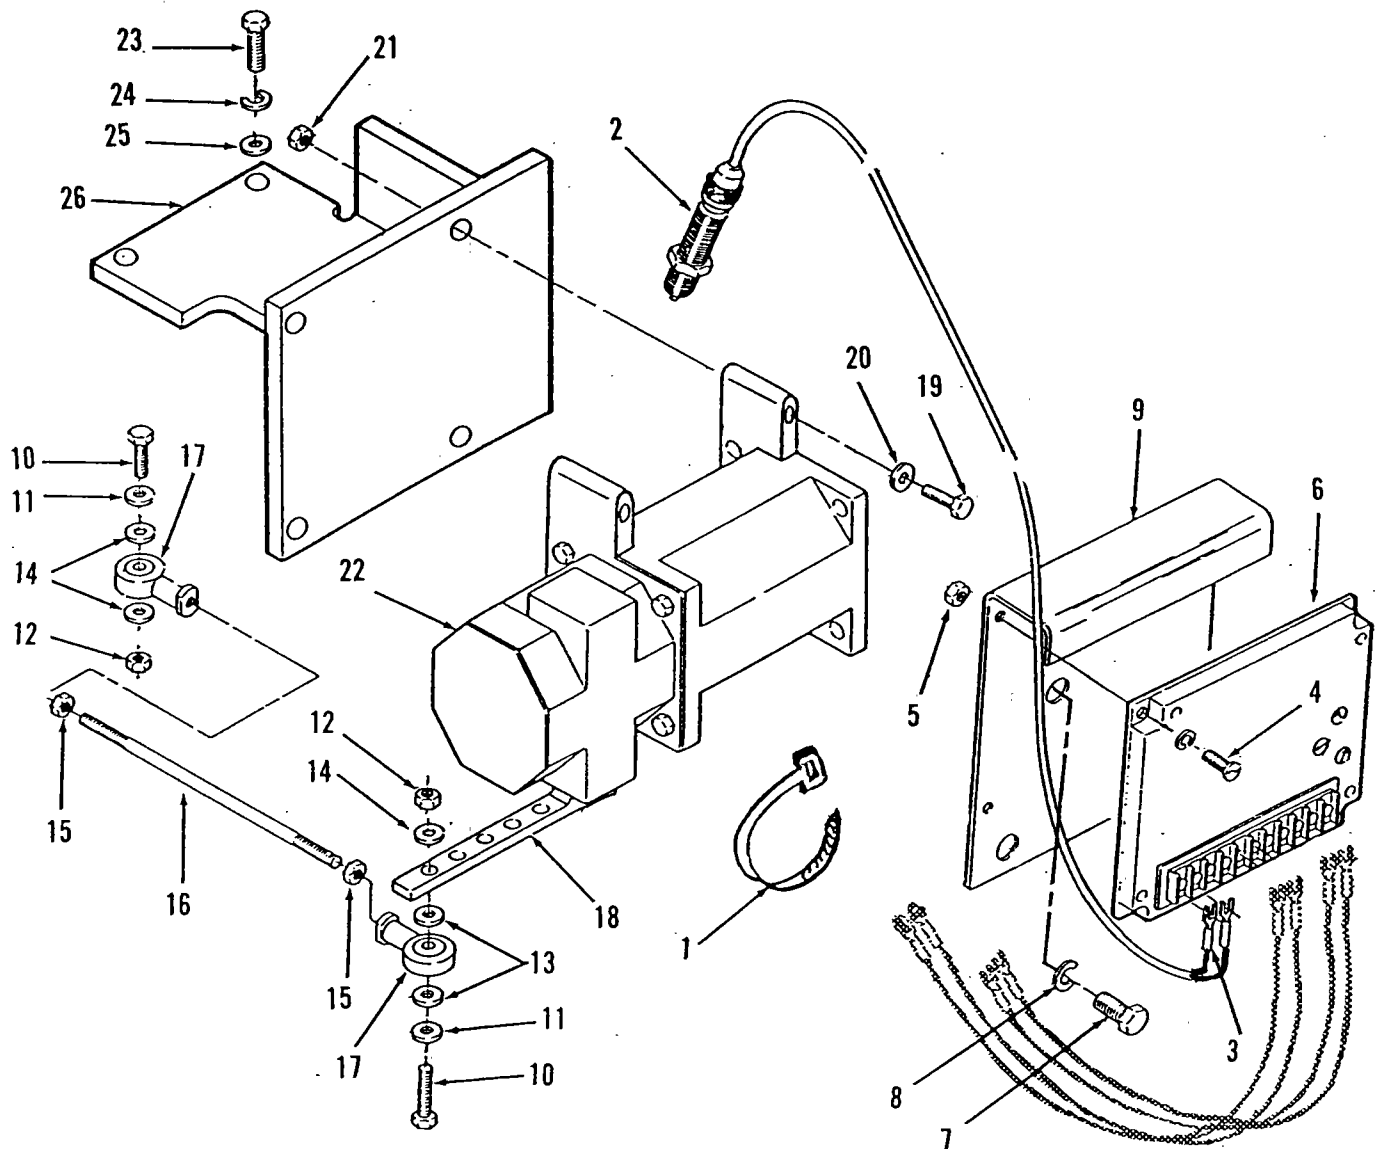

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-1445	5	Tie, Cable
2	150-2201	1	Sensor, Speed - Includes Leads, Less Terminals
3			Terminal, Electrical (For all Electrical Leads)
	332-1279	8	Spade, #6
	332-0325	1	Ring, #10
	332-1087	1	Ring, 1/2"
4	813-0103	4	Screw, Machine - Round Head (#10-32 x 3/4")
5	870-0131	4	Nut, Hex - W/ET (#10-32) (Not used all installations)
6	151-0611	1	Control, Governor
7	800-2110	2	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)
8	850-2012	2	Washer, Flat (M12)
9	150-2007	1	Bracket, Mounting
10	815-0172	2	Screw, Machine - Hex Head (#10-32 x 1")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	526-0327	2	Washer, Flat (13/64)
12	870-0131	2	Nut, Hex - W/ET (#10-32)
13	526-0008	2	Washer, Flat (#10)
14	526-0196	3	Washer, Flat - Aluminum
15	870-0053	2	Nut, Hex (#10-32)
16	150-2218-01	1	Rod - Governor
17	150-2200	2	Joint, Ball
18	150-2203	1	Lever, Actuator - Governor
19	800-0012	4	Screw, Cap - Hex Head (1/4-20 x 2 1/4")
20	526-0018	4	Washer, Flat (1/4)
21	870-0212	4	Nut, Self-locking - Hex (1/4-20)
22	151-0632	1	Actuator, Governor (24VDC)
23	800-2060	3	Screw, Cap - Hex Head (M8 x 1.25 x 35mm)
24	850-2008	3	Washer, Lock (M8)
25	526-0115	3	Washer, Flat (M8)
26	150-2187	1	Bracket, Governor

 
Cooling System (Radiator)

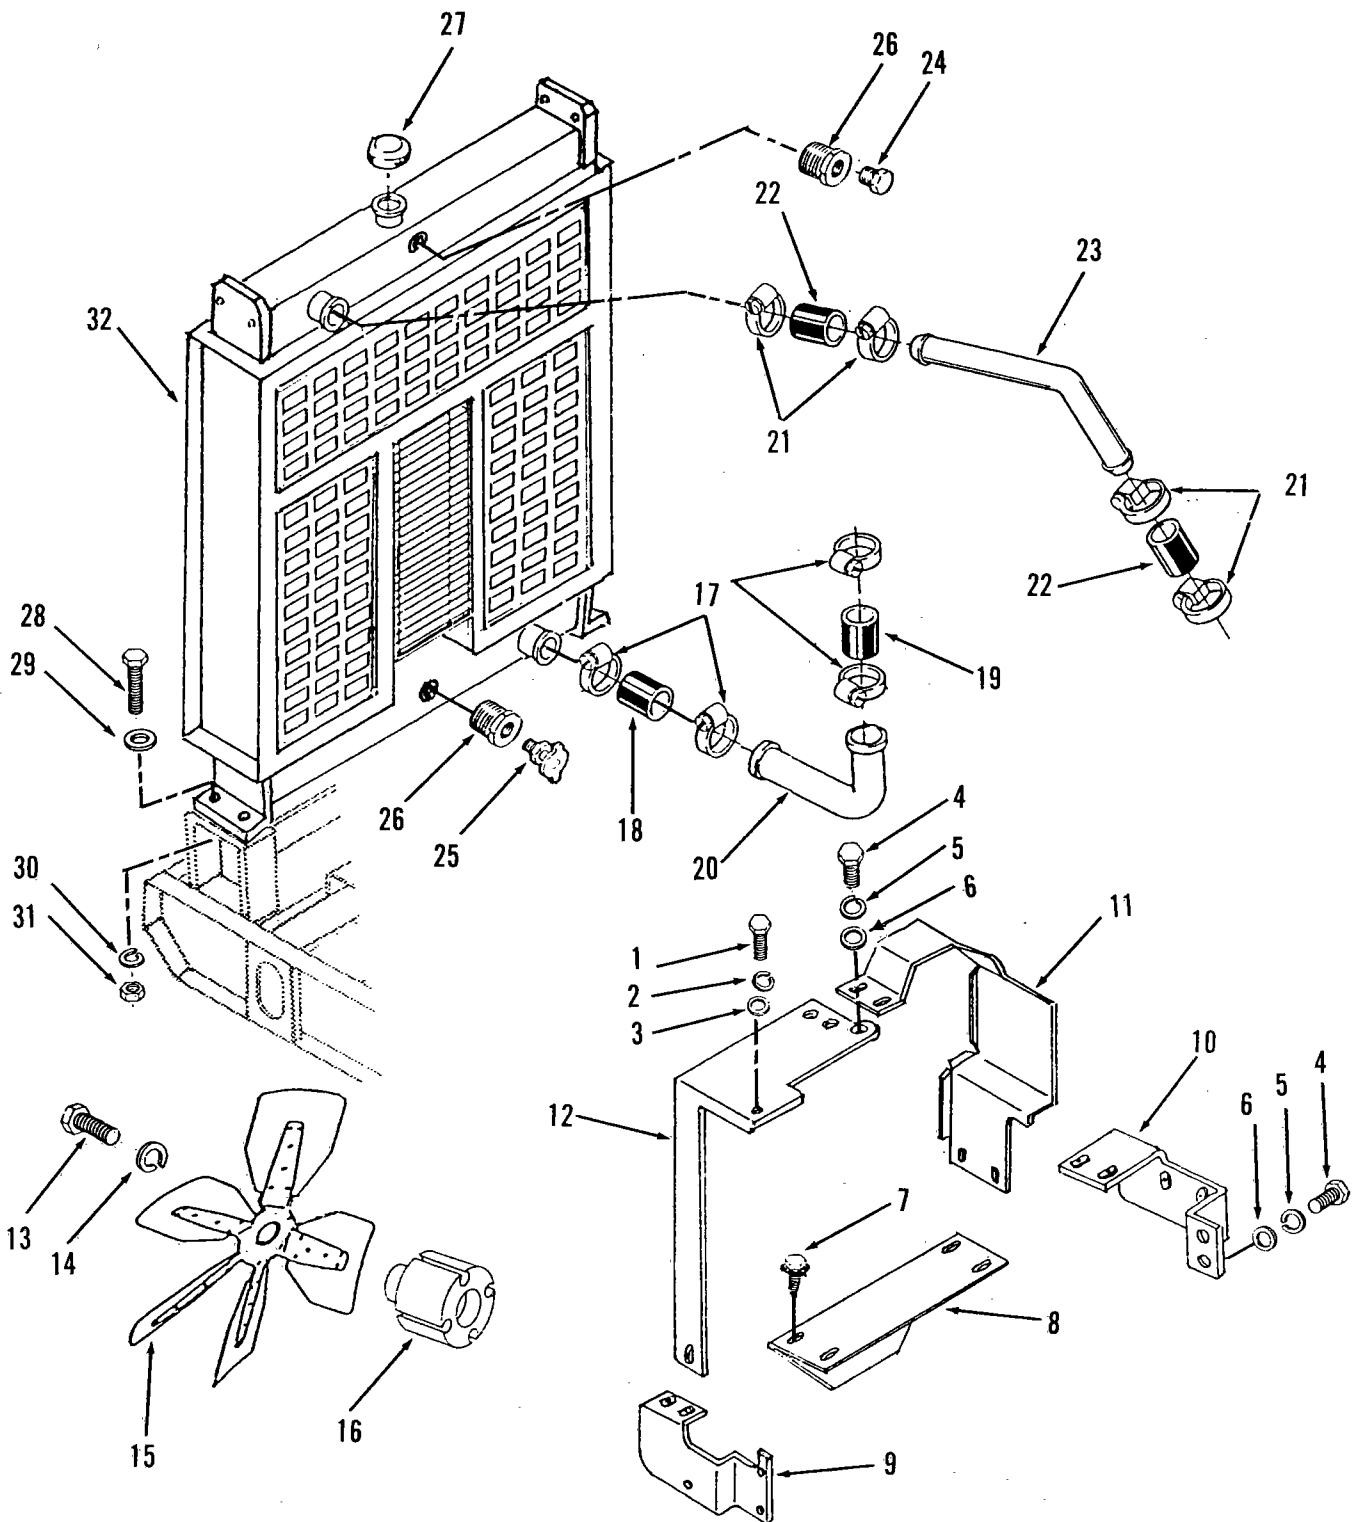

Cooling System (Radiator)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-2084	1	Screw, Cap - Hex Head (M10 x 1.5 x 16mm)	15	130-3116	1	Fan, Radiator
2	526-2120	1	Washer, Flat (M10)	16	130-3114	1	Spacer, Fan
3	850-2010	1	Washer, Lock - Spring (M10)	17	503-0354	4	Clamp, Hose
4	800-2110	5	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)	18	503-1379-02	1	Hose, Radiator
5	526-2140	5	Washer, Flat (M12)	19	503-1379-03	1	Hose, Radiator
6	850-2012	5	Washer, Lock - Spring (M12)	20		1	Tube, Outlet - Radiator
7	821-0009	9	Screw, Self-locking - Hex (1/4-20 x 3/8")	21	503-0365	4	Clamp, Hose
8	130-3121	1	Plate, Bottom	22	503-1391-01	2	Hose, Radiator
9	130-3122	1	Guard, Belt (Right Side)	23		1	Tube, Inlet - Radiator
10	130-3123	1	Guard, Belt (Left Side)	24	502-0153	1	Plug, Hex Head (1/4 NPT)
11	130-3127	1	Guard, Belt - Alternator	25	504-0003	1	Cock, Drain
12	130-3126	1	Guard, Belt - Alternator	26	502-1033	2	Adapter, Metric To NPT
13	718-1044	4	Screw, Cap - Hex Head (M8 x 1.25 x 60mm)	27		1	Cap, Radiator
14	850-2008	4	Washer, Lock - Spring (M8)	28	800-0028	4	Screw, Cap - Hex Head (5/16-18 x 1")
				29	526-0022	4	Washer, Flat (5/16)
				30	850-0045	4	Washer, Lock - Spring (5/16)
				31	862-0015	4	Nut, Hex (5/16-18)
				32	130-3277	1	Radiator

 
Chassis

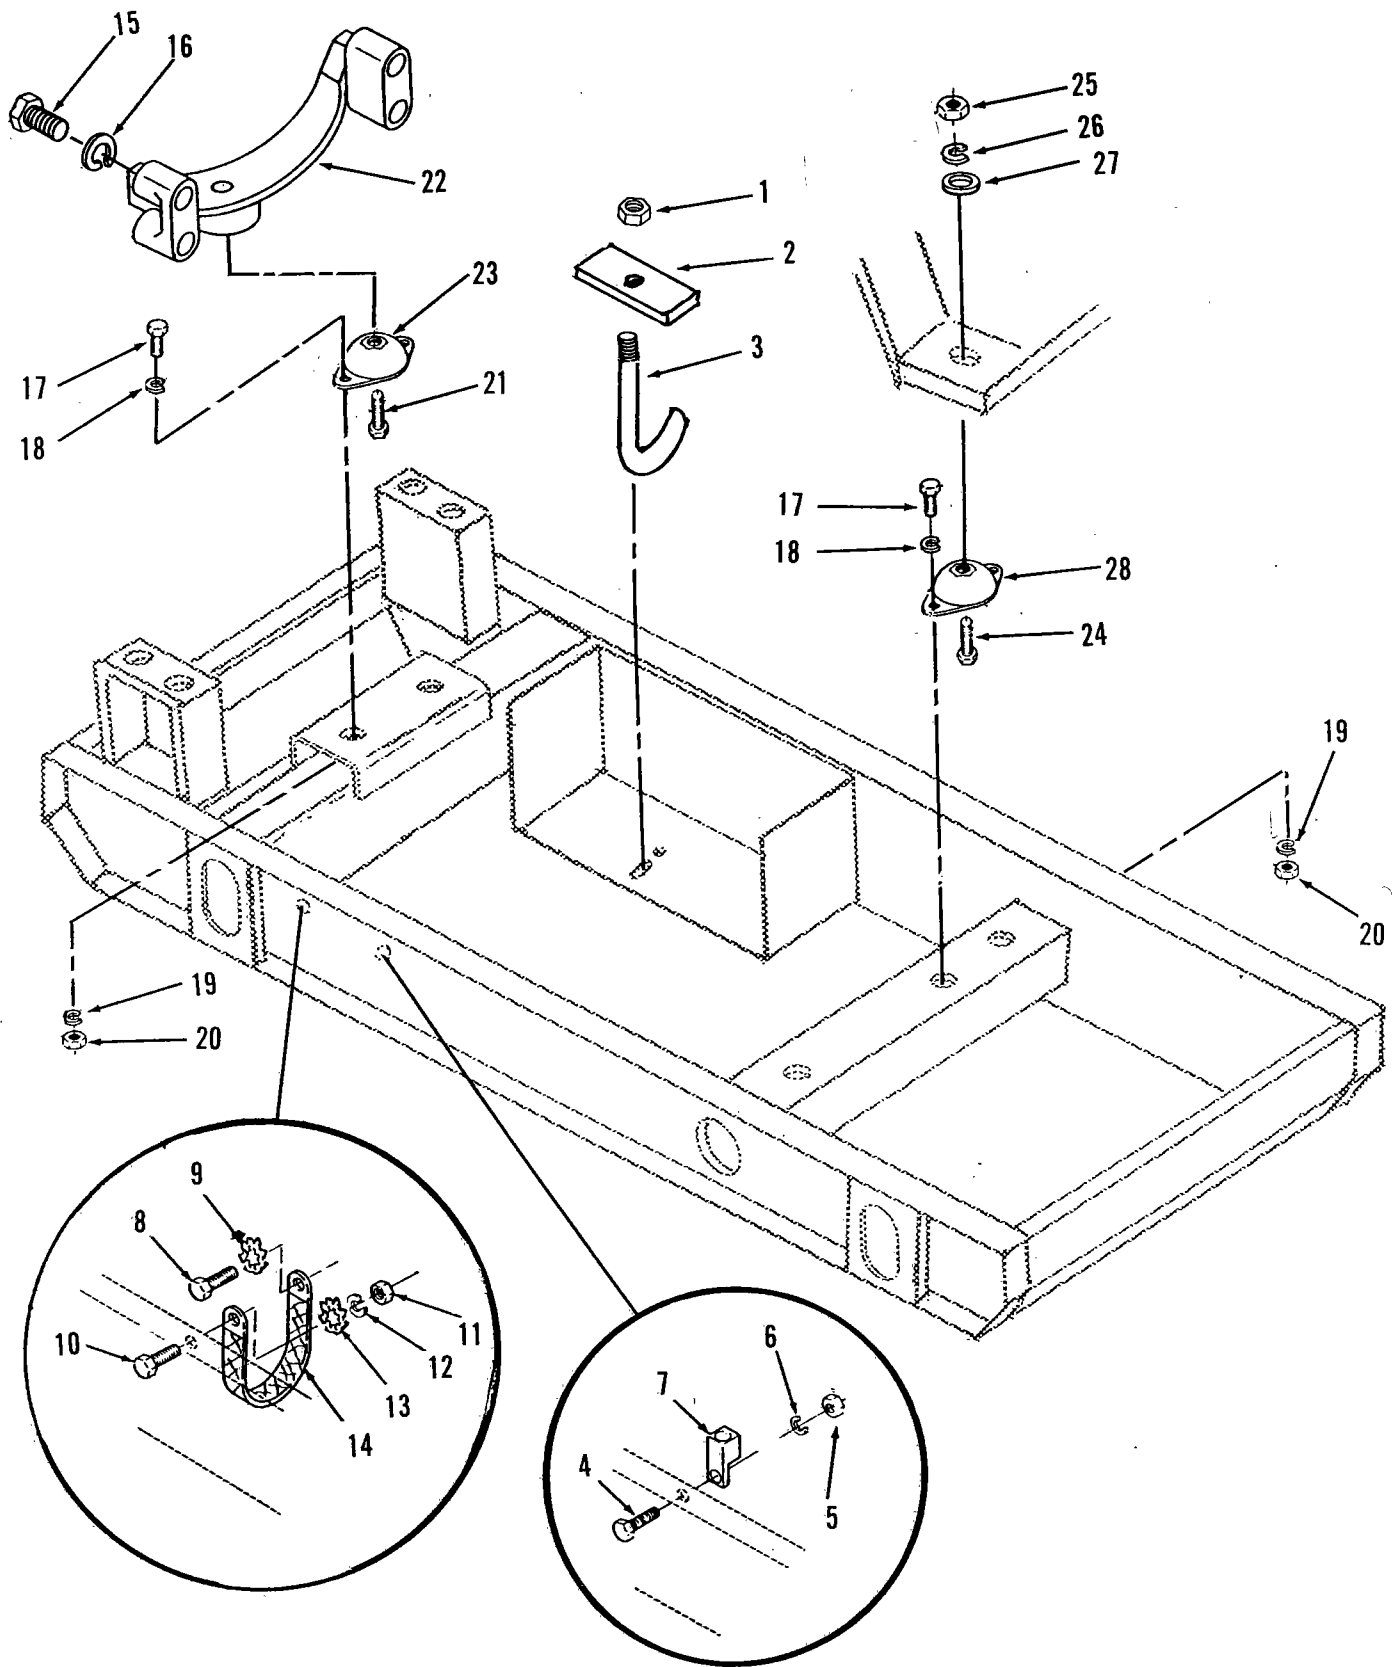

Chassis

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0212	1	Nut, Lock (1/4-20)	15	800-2120	4	Screw, Cap - Hex Head (M12 x 1.75 x 70mm)
2	416-0854	1	Bracket, Mounting - Battery	16	850-2012	5	Washer, Lock (M12)
3	416-0853	1	Holddown, Battery	17	800-0092	6	Screw, Cap - Hex Head (1/2-13 x 1-1/2")
4	800-0026	1	Screw, Cap - Hex Head (5/16-18 x 3/4")	18	850-0060	6	Washer, Lock - Spring (1/2")
5	856-0008	1	Washer, Lock - EIT (5/16)	19	526-0219	6	Washer, Flat (1/2")
6	870-0257	1	Nut, Lock (5/16-18)	20	862-0016	6	Nut, Hex (1/2-13)
7	332-1473	1	Lug, Solderless	21	800-0520	3	Screw, Cap - Hex Head (3/4-10 x 1")
8	800-2111	1	Screw, Cap - Hex Head (M12 x 1.75 x 25mm)	22	403-2567	1	Support, Engine
9	856-0013	1	Washer, Lock - EIT (1/2")	23	402-0568	1	Mout, Vibration
10	800-0092	1	Screw, Cap - Hex Head (1/2-13 x 1-1/2")	24	800-0092	2	Screw, Cap - Hex Head (1/2-13 x 1-1/2")
11	862-0016	1	Nut, Hex (1/2-13)	25	862-0016	2	Nut, Hex (1/2-13)
12	850-0060	1	Washer, Lock - Spring (1/2")	26	850-0060	2	Washer, Lock - Spring (1/2")
13	856-0013	1	Washer Lock - EIT (1/2")	27	526-0219	2	Washer, Flat (1/2)
14	337-0090	1	Strap, Electrical	28	402-0466	2	Mount, Vibration

 
Engine Coolant Heater

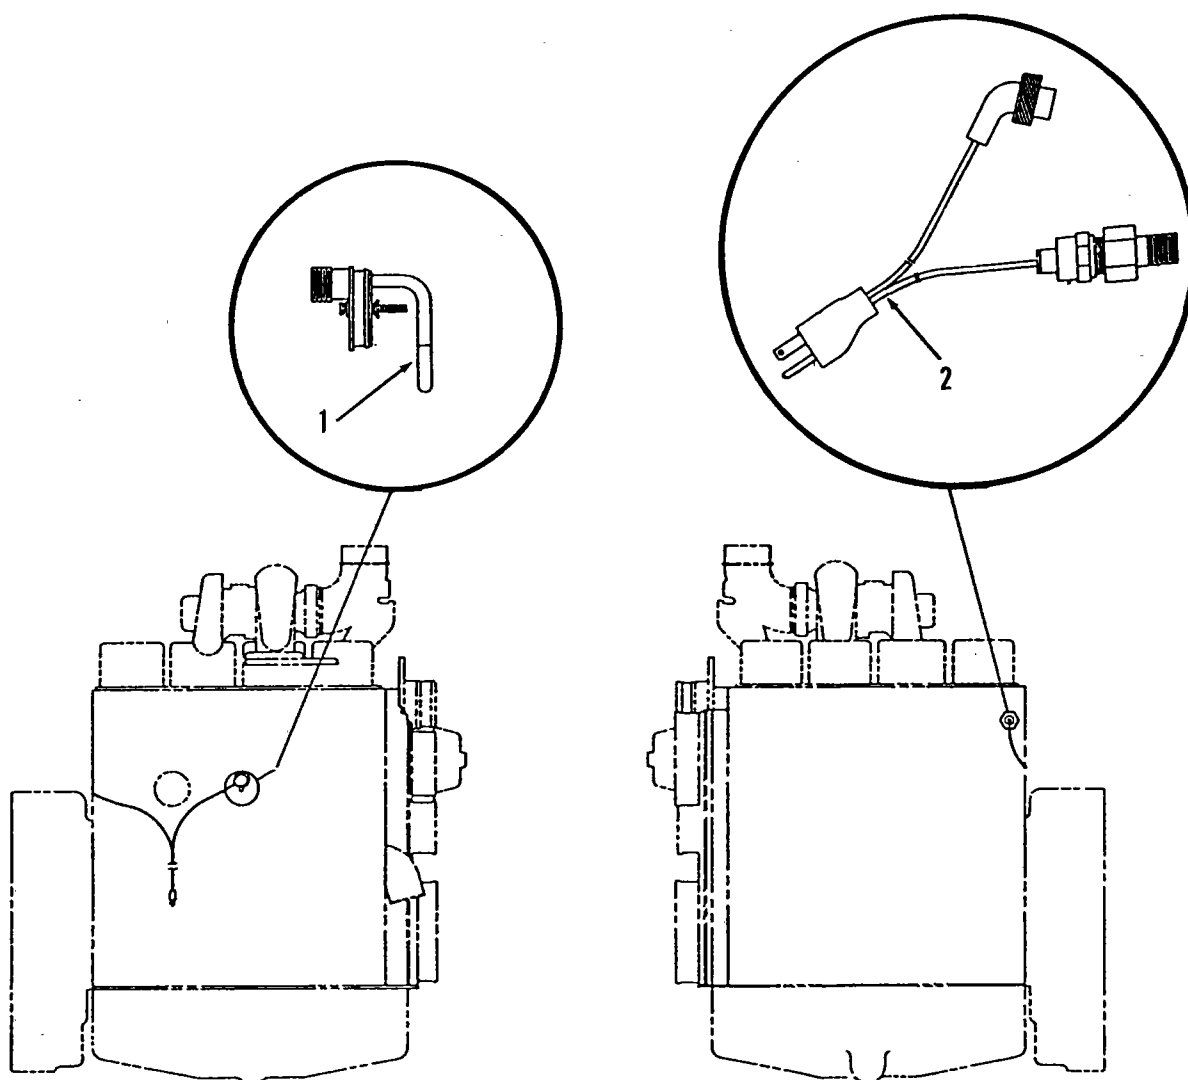

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater, Engine Coolant
	333-0291-01	1	120 VAC
	333-0291-02	1	240 VAC

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2			Cable, Electrical (Includes Thermostat Switch)
	333-0292-01	1	120 VAC
	333-0292-02	1	240 VAC

 
GENERATOR

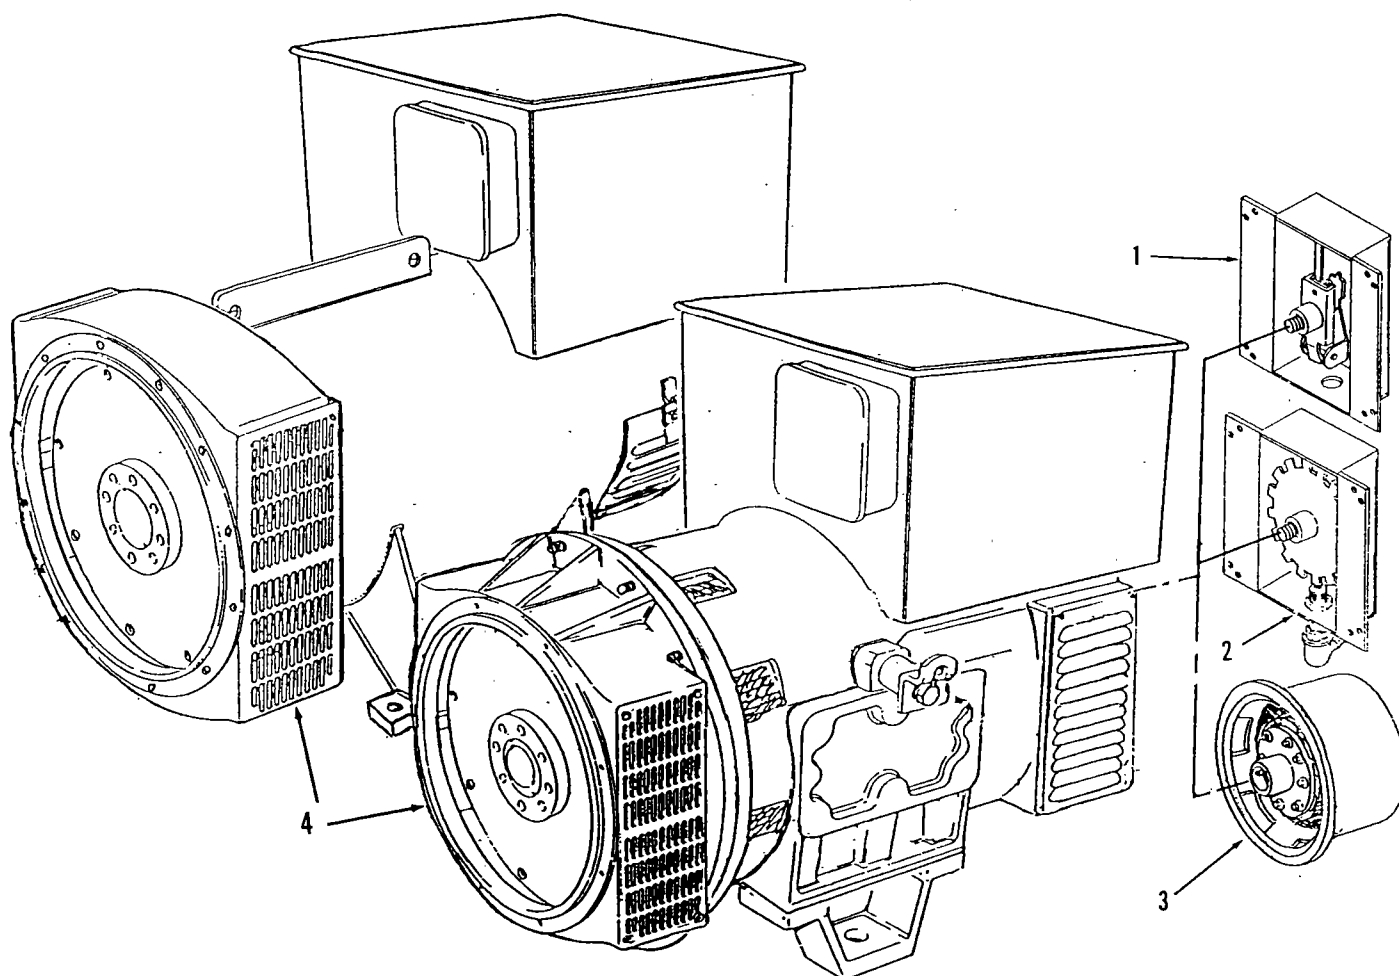

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1		1	Module, Overspeed Switch (See Separate Page for Components)	4	Note 1		Generator (See Separate Pages for Stator and Rotor Components)
	821-2045	4	Attaching Parts Screw, Self-locking - Hex Hd (M8 x 1.25 x 16mm)				Attaching Parts Generator to Chassis (Quantity four each may be required for some Extended Stack Sets)
2		1	Module, Overspeed Sensor (See Separate Page for Components)		800-0092	2	Screw, Cap - Hex Head (1/2-13 x 1-1/2")
	821-2045	4	Attaching Parts Screw, Self-locking - Hex Hd (M8 x 1.25 x 16mm)		850-0060	2	Washer, Lock - Spring (1/2")
					526-0219	2	Washer, Flat (1/2")
3		1	Module, Permanent Magnet Exciter (See Separate Page for Components)		862-0016	2	Nut, Hex (1/2-13)
			Attaching Parts		800-2088	12	Adapter to Flywheel Housing Screw, Cap - Hex Head (M10 x 1.5 x 35mm)
	249-0298	4	Screw, Cap - Hex Head (M8 x 16mm)		850-2010	12	Washer, Lock - Spring (M10)
	249-0218	4	Washer, Lock (M8)		805-0015	8	Drive Disc to Flywheel Bolt - Hex Head (3/8-16 x 3/4", Grade 8)
	249-0315	4	Clamp, Retaining		526-0124	8	Washer, Flat (1-1/2"OD x 13/32"ID)

Note 1: For replacement Generator please supply the complete Gen Set nameplate and Generator nameplate data. The Replacement Generator will be shipped from closest warehouse or the factory. The replacement will not include PMG Exciter Module, Generator to Flywheel Housing Adapter, Drive Discs and Terminal Box.

 GENERATOR STATOR SECTION

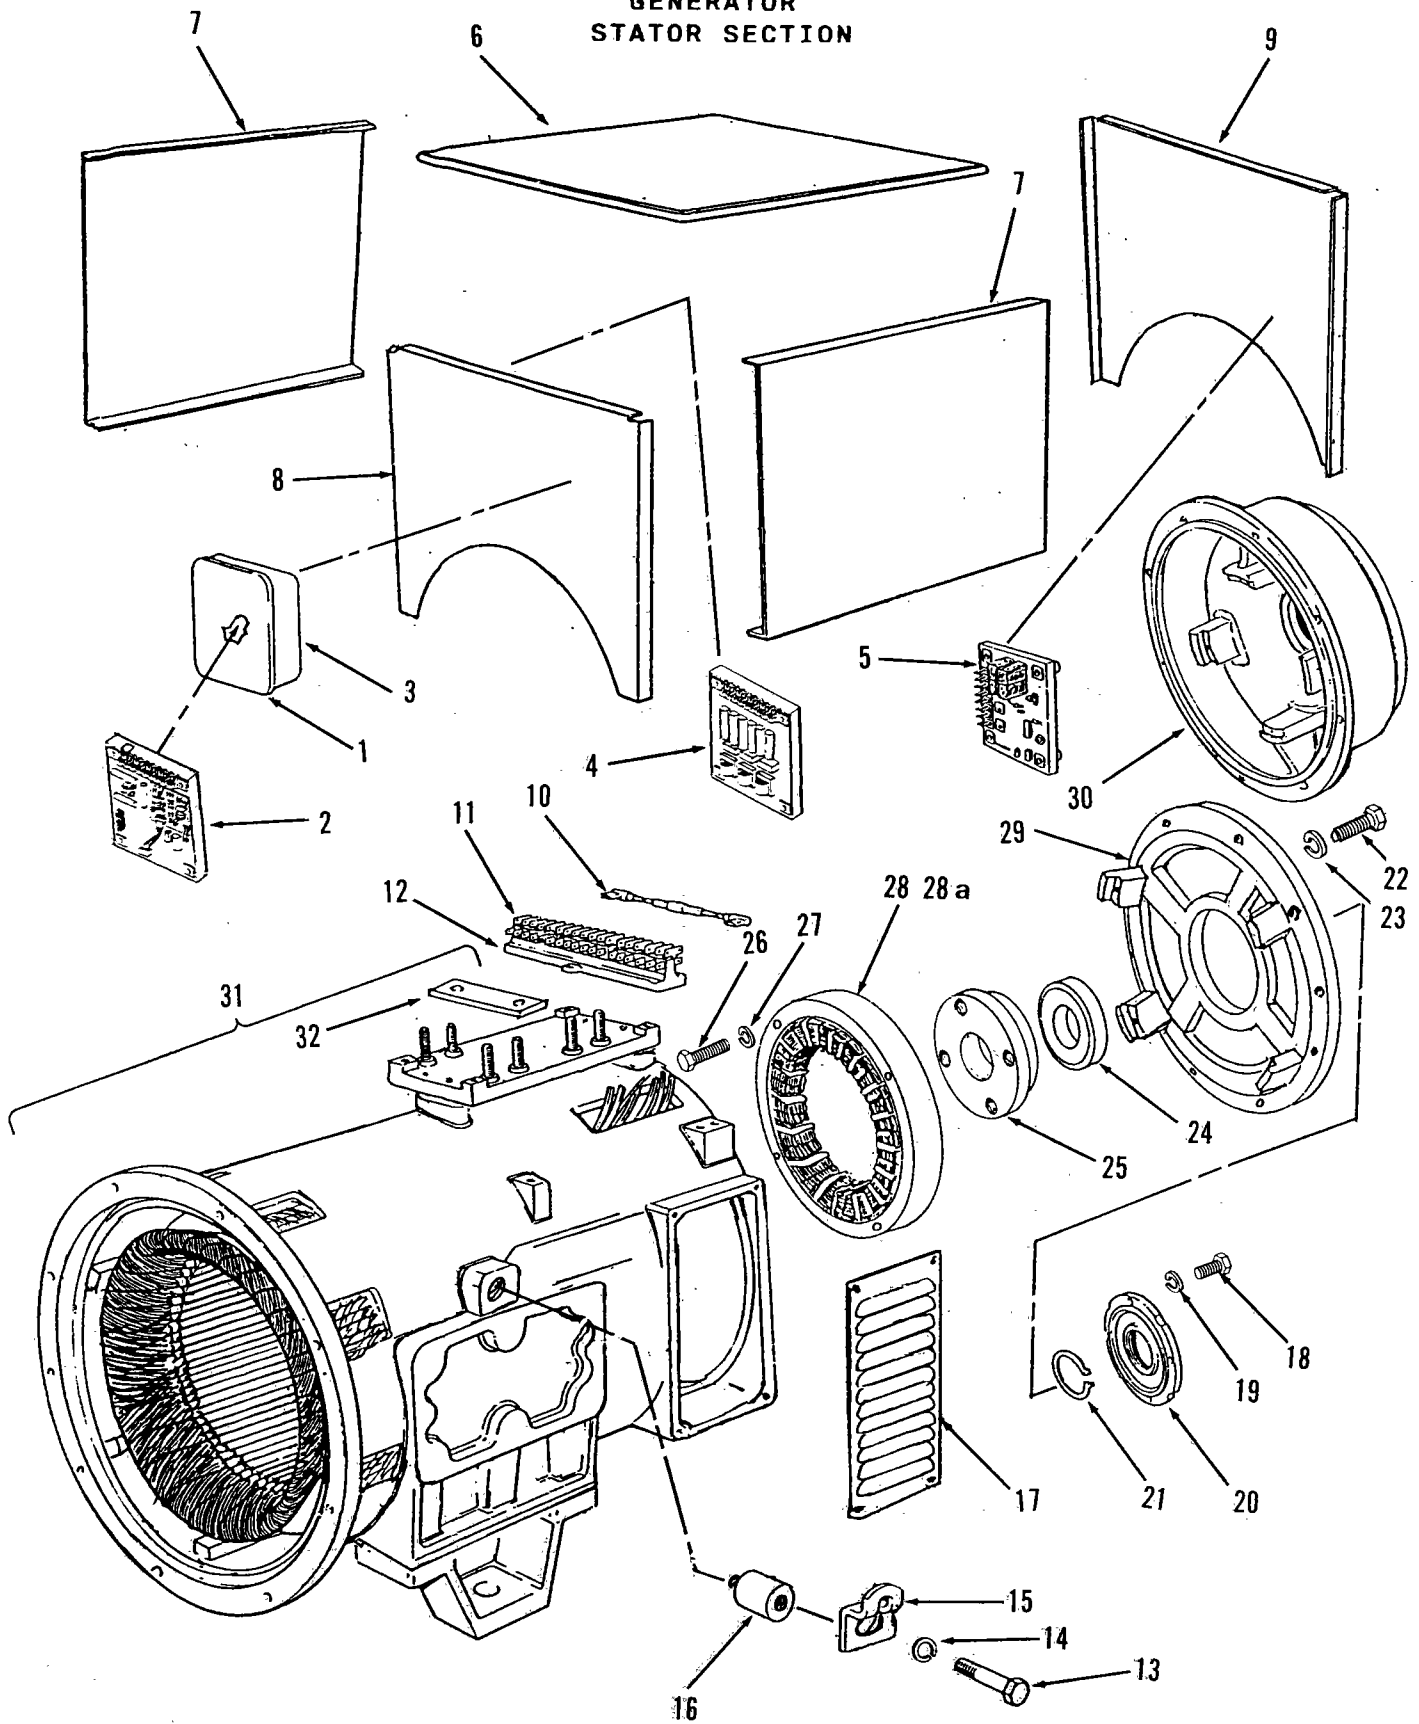


Generator Stator Section

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0401	1	Lid	23	249-0218	6	Washer, Lock - Spring (M8)
			Attaching Parts	24	249-0311	1	Bearing, Ball
	249-0304	4	Screw, Captive	25	249-0317	1	Cap, Bearing - Inner
2			Regulator, Voltage	26			Screw, Cap - Hex Head
	305-0779	1	Standard				(Select length as required)
	305-0778	1	3 Phase (Used with		249-0296	4	M6 x 45mm
			PMG Exciter & 3 Phase		249-0297	4	M6 x 55mm
			Sensing Module)	27	249-0212	4	Washer, Lock - Spring (M6)
			Attaching Parts	28	249-0333	1	Stator, Exciter
	249-0398	4	Pillar, Threaded				DNBA, DWBA Volt Codes H,L,Z
3	249-0564	1	Module, 3 Phase Sensing				DNBA, DWBA Voltage Code H
			Attaching Parts				with Extended Stack
	249-0398	4	Pillar, Threaded				DNCA, DWCA Volt Codes H,L,Z
4	249-0395	1	Box				DNCB, DWCB Voltage Code H
5	300-3209-02	1	Module, Frequency Detection	28a	249-0334	1	Stator, Exciter
			Attaching Parts				DNBA, DWBA Volt Codes L,Z
	249-0295	4	Screw, Cap - Hex Head				with Extended Stack
			(M5 x 35mm)				DNCA, DWCA Volt Codes H,L,Z
	249-0288	4	Washer, Plastic (M5)				with Extended Stack
	249-0287	4	Nut, Hex - Nylon (M5)				DNCB, DWCB Volt Codes L,Z
6	NFS	1	Lid				DNCB, DWCB Volt Code H
7	NFS	2	Panel, Side				with Extended Stack
8	NFS	1	Panel, Front	29	249-0324	1	Bracket, End
9	NFS	1	Panel, Rear				DNBA, DWBA Volt Codes H,L,Z
10	249-0428	1	Resistor (Voltage Code				DNBA, DWBA Voltage Code H
			H Only)				with Extended Stack
11	249-0289	3	Block, Terminal				DNCA, DWCA Volt Codes H,L,Z
12	249-0424	1	Base, Terminal				DNCB, DWCB Voltage Code H
13	249-0303	2	Screw, Cap - Hex Head	30	249-0325	1	Bracket, End
			(M12 x 55mm)				DNBA, DWBA Volt Codes L,Z
14	249-0205	2	Washer, Lock - Spring (M12)				with Extended Stack
15	249-0318	2	Lug, lifting				DNCA, DWCA Volt Codes H,L,Z
16	249-0329	2	Spacer, Sleeve				with Extended Stack
17	249-0319	2	Grille, Inlet - Air				DNCB, DWCB Volt Codes L,Z
			Attaching Parts				DNCB, DWCB Volt Code H
	249-0294	8	Screw, Cap - Hex Head				with Extended Stack
			(M5 x 12mm)	31	NFS	1	Stator, Generator (Includes
	249-0307	8	Washer, lock - Spring (M5)				Terminal Studs and Links)
	249-0308	8	Washer, Flat (M5)				Attaching Parts Stator to
18	249-0301	3	Screw, Cap - Hex Head				Adapter
			(M8 x 60mm)		249-0300	8	Screw, Cap - Hex Head
19	249-0218	3	Washer, Lock - Spring (M8)				(M8 x 30mm)
20	249-0326	1	Cap, Bearing - Outer		249-0218	8	Washer, Lock - Spring (M8)
21	249-0309	1	Circlip	32	249-0403	4	Link, Terminal
22	249-0299	6	Screw, Cap - Hex Head				
			(M8 x 25mm)				

NFS - Not For Sale

 Generator
Stator Section
DNCB & DWCB Extended Stack Volt Code L & Z Only

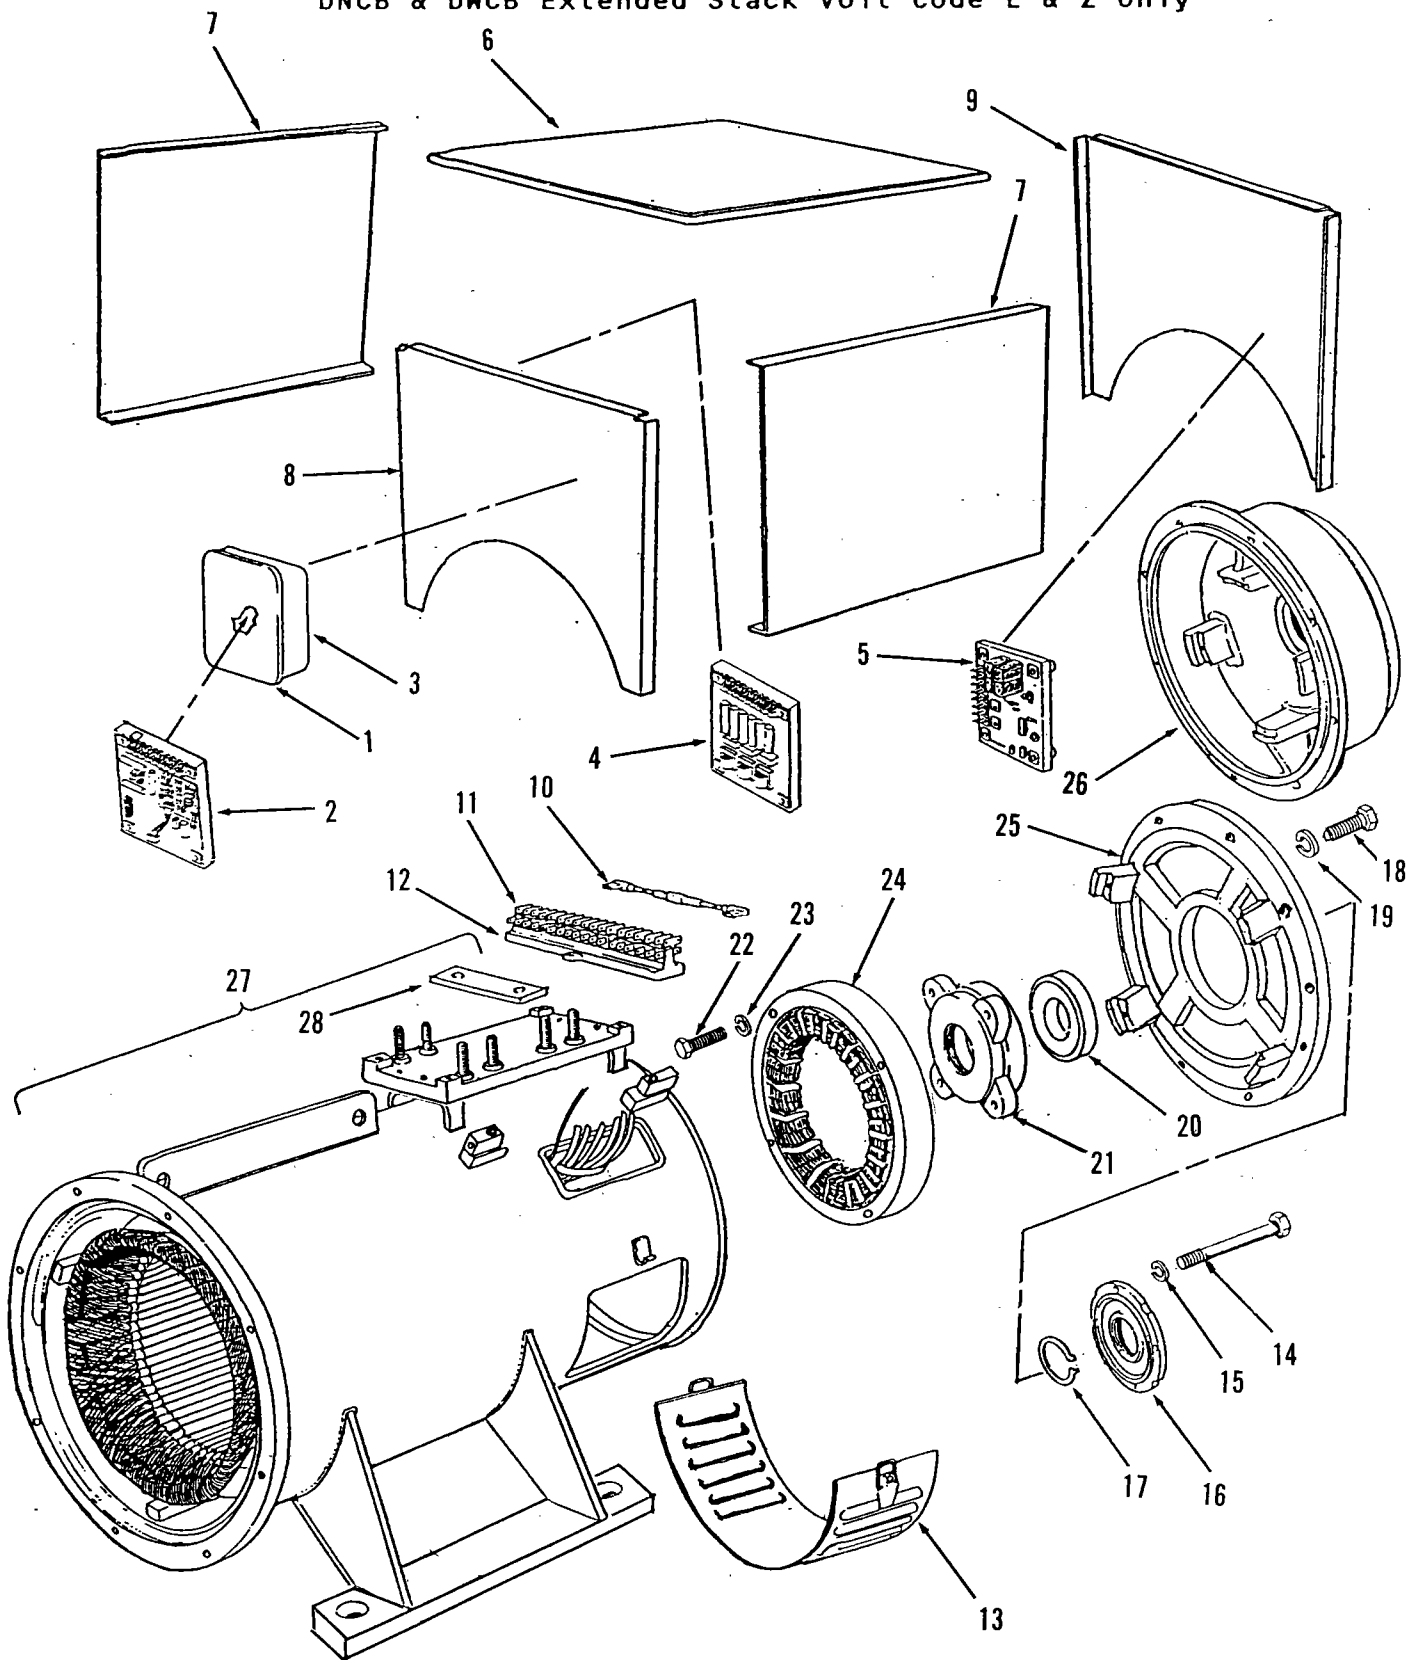


**Generator
Stator Section
DNCB & DWCB Extended Stack Volt Code L & Z Only**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0401	1	Lid	11	249-0289	3	Block, Terminal - AUX
	249-0304	4	Attaching Parts Screw, Captive	12	249-0424	1	Base, Terminal - AUX
2			Regulator, Voltage	13	249-0368	2	Grille, Inlet - Air
	305-0779	1	Standard	14	249-0302	4	Screw, Cap - Hex Head (M10 x 65mm)
	305-0778	1	3 Phase (Used with PMG Exciter & 3 Phase Sensing Module)	15	249-0202	4	Washer, Lock - Spring (M10)
			Attaching Parts	16	249-0362	1	Cap, Bearing - Outer
	249-0398	4	Pillar, Threaded	17	249-0444	1	Circlip
3	249-0564	1	Module, 3 Phase Sensing	18	249-0201	8	Screw, Cap - Hex Head (M10 x 35mm)
			Attaching Parts	19	249-0202	8	Washer, Lock - Spring (M10)
	249-0398	4	Pillar, Threaded	20	249-0312	1	Bearing, Ball
4	249-0395	1	Box	21	249-0361	1	Cap, Bearing - Inner
5	300-3209-02	1	Module, Frequency Detection	22	249-0297	4	Screw, Cap - Hex Head (M6 x 55mm)
			Attaching Parts	23	249-0212	4	Washer, Lock - Spring (M6)
	249-0295	4	Screw, Cap - Hex Head (M5 x 35mm)	24	249-0334	1	Stator, Exciter
	249-0288	4	Washer, Plastic (M5)	25	249-0354	1	Bracket, End
	249-0287	4	Nut, Hex - Nylon (M5)	27	NFS	1	Stator, Generator (Includes Terminal Studs and Links)
6	NFS	1	Lid				Attaching Parts Stator to Adapter
7	NFS	2	Panel, Side		249-0201	8	Screw, Cap - Hex Head (M10 x 35mm)
8	NFS	1	Panel, Front		249-0202	8	Washer, Lock - Spring (M10)
9	NFS	1	Panel, Rear	28	249-0404	4	Link, Terminal
10	249-0428	1	Resistor (Voltage Code H Only)				

NFS - Not For Sale

 GENERATOR
ROTOR SECTION

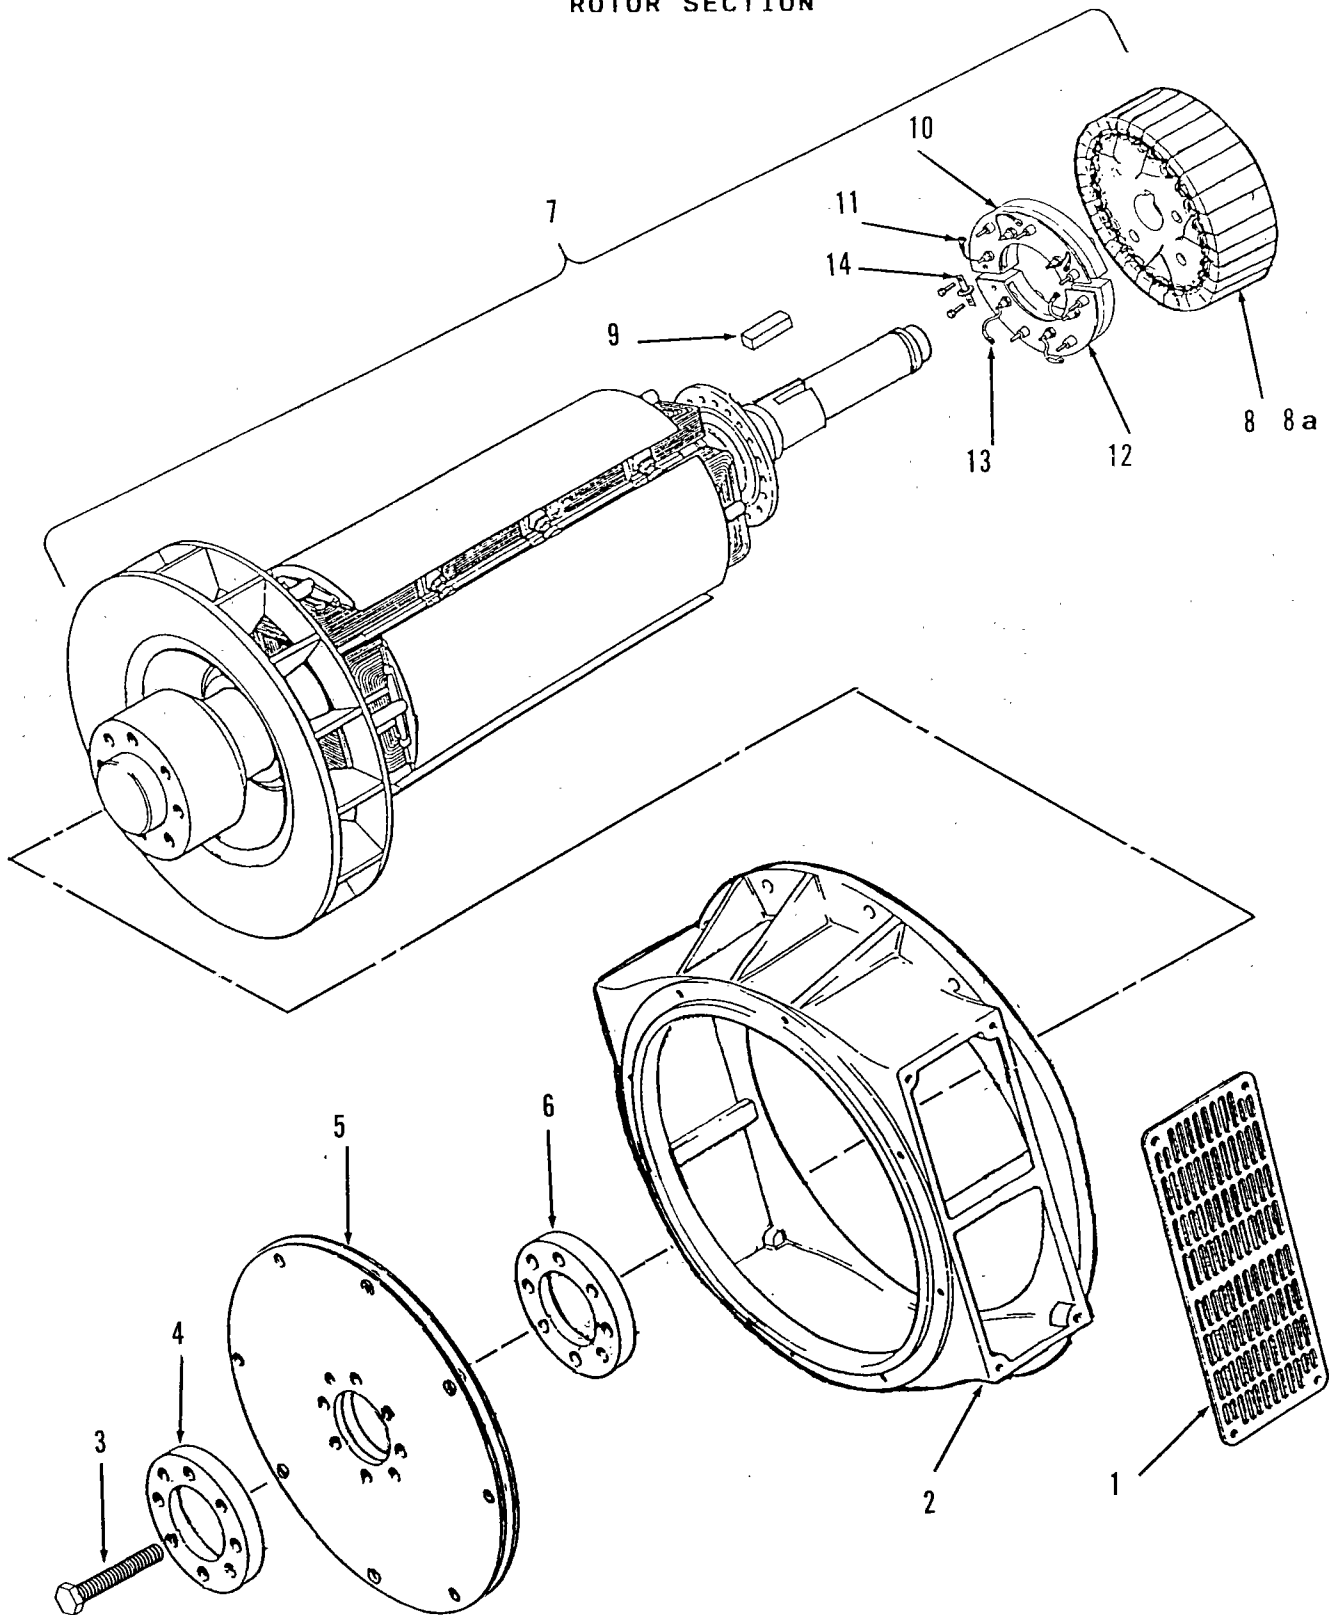


Generator Rotor Section

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0338	2	Screen, Air - Adapter	8a	249-0336	1	Rotor, Exciter (Does Not Include Rectifier Assy)
	249-0294	8	Attaching Parts Screw, Cap - Hex Head (M5 x 12mm)				DNBA, DWBA Volt Codes L,Z with Extended Stack
	249-0307	8	Washer, Lock - Spring (M5)				DNCA, DWCA Volt Codes H,L,Z with Extended Stack
	249-0308	8	Washer, Flat (M5)				DNCB, DWCB Volt Codes L,Z with Extended Stack
2	249-0337	1	Adapter, Generator				DNCB, DWCB Volt Code H
3	249-0290	8	Screw, Cap - Hex Head (M16 x 75mm)	9	249-0271	1	Key
4	249-0402	1	Plate, Pressure	10	249-0340	1	Rectifier Assy, Forward (Includes Item 11 Diodes)
5	249-0327	2	Disc, Drive	11	249-0281	1	Set, Forward Polarity Diode
6	249-0320	1	Spacer	12	249-0341	1	Rectifier Assy, Reverse (Includes Item 13 Diodes)
7	NFS	1	Rotor, Generator (Includes Exciter, Key, and Rectifier Assemblies)	13	249-0282	1	Set, Reverse Polarity Diode
8	249-0335	1	Rotor, Exciter (Does Not Include Rectifier Assy) DNBA, DWBA Volt Codes H,L,Z DNBA, DWBA Voltage Code H with Extended Stack DNCA, DWCA Volt Codes H,L,Z DNCB, DWCB Voltage Code H	14	249-0283	1	Varister
					249-0294	2	Attaching Parts Screw, Cap - Hex Head (M5 x 12mm)

NFS - Not For Sale

 Generator
Rotor Section
DNCB & DWCB Extended Stack Volt Code L & Z Only

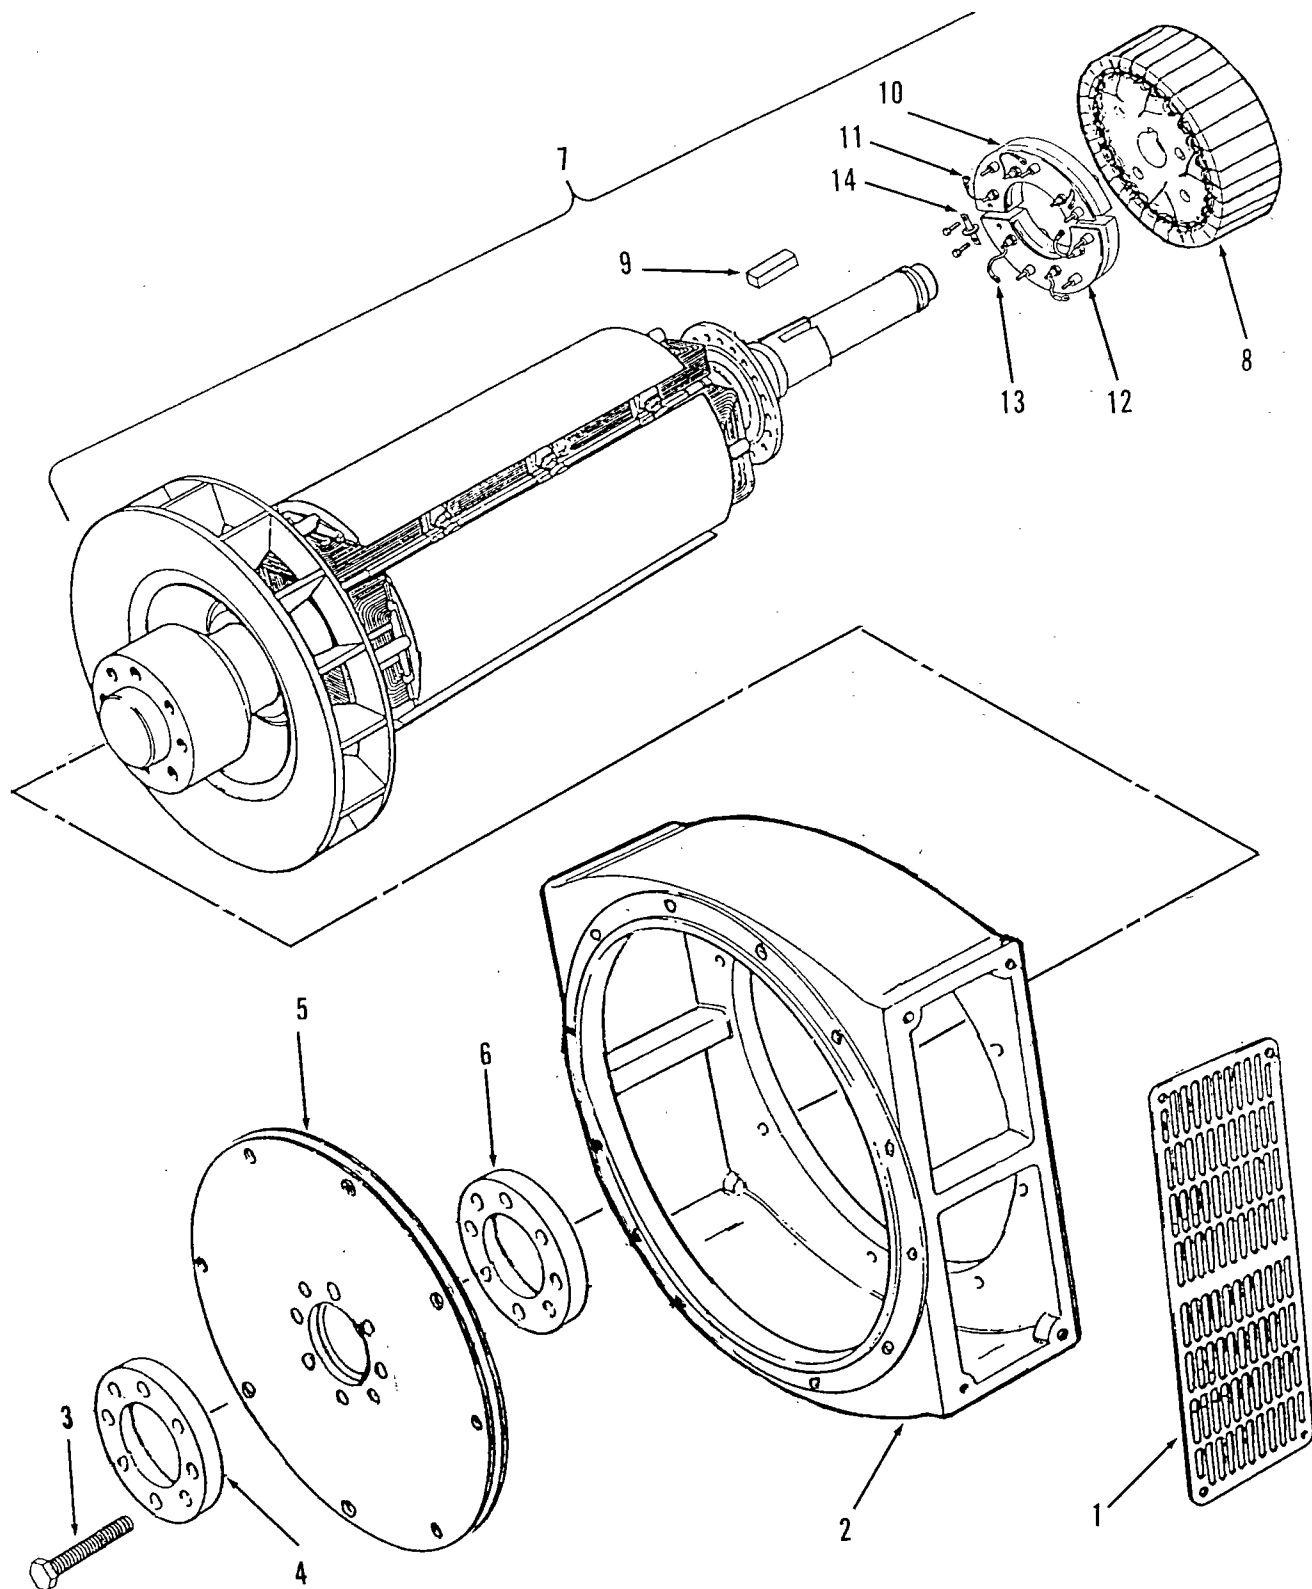


**Generator
Rotor Section
DNCB & DWCB Extended Stack Volt Code L & Z Only**

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0341	2	Screen, Air - Adapter	8	249-0336	1	Rotor, Exciter (Does Not Include Rectifier Assy)
	249-0294	8	Attaching Parts Screw, Cap - Hex Head (M5 x 12mm)	9	249-0271	1	Key
	249-0307	8	Washer, Lock - Spring (M5)	10	249-0340	1	Rectifier Assy, Forward (Includes Item 11 Diodes)
	249-0308	8	Washer, Flat (M5)	11	249-0281	1	Set, Forward Polarity Diode
2	249-0370		Adapter, Generator	12	249-0341	1	Rectifier Assy, Reverse (Includes Item 13 Diodes)
3	249-0290	8	Screw, Cap - Hex Head (M16 x 75mm)	13	249-0282	1	Set, Reverse Polarity Diode
4	249-0402	1	Plate, Pressure	14	249-0283	1	Varister
5	249-0327	3	Disc, Drive				Attaching Parts
6	249-0364	1	Spacer		249-0294	2	Screw, Cap - Hex Head (M5 x 12mm)
7	NFS	1	Rotor, Generator (Includes Exciter, Key, and Rectifier Assemblies)				

NFS - Not For Sale

 
Generator Overspeed Switch

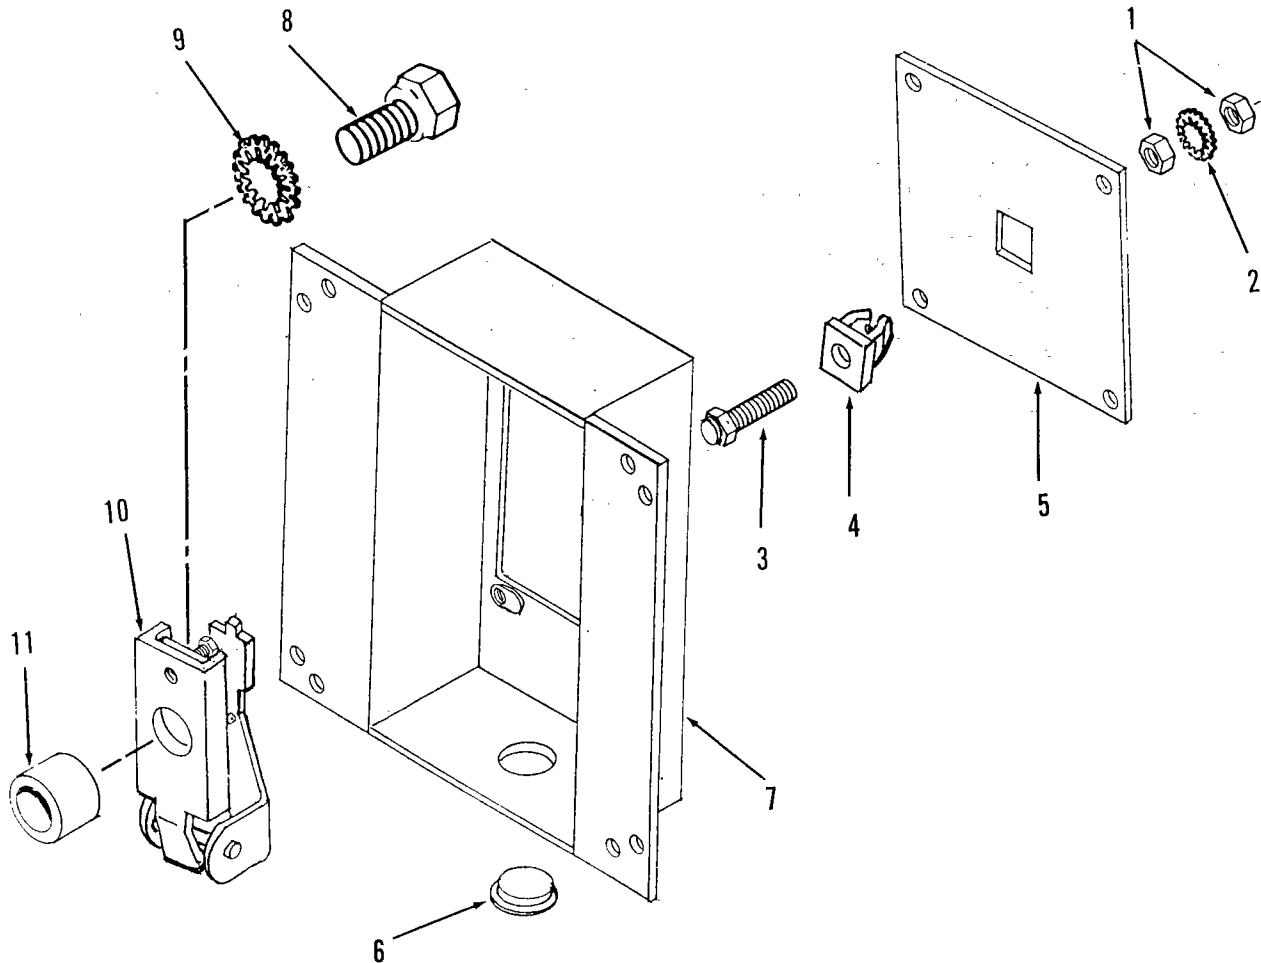

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	862-0001	2	Nut, Hex (1/4-20)
2	853-0013	1	Washer, Lock - EIT (1/4")
3	150-0723	1	Point, Overspeed
4	870-0250	1	Nut, Insulated
5	150-2206	1	Plate, Mounting
	821-0005	4	Screw, Self-locking - Hex (#10-32 x 1/2")


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	517-0136	1	Plug, Plastic
7	150-2207	1	Cover, Overspeed Switch
8	718-1058	1	Screw, Cap - Hex Head (M10 x 1.5 x 45mm)
9	856-0010	1	Washer, Lock - EIT (3/8")
10	150-0956	1	Switch, Overspeed
11	370-4032	1	Spacer, Sleeve

 Generator Overspeed Sensor

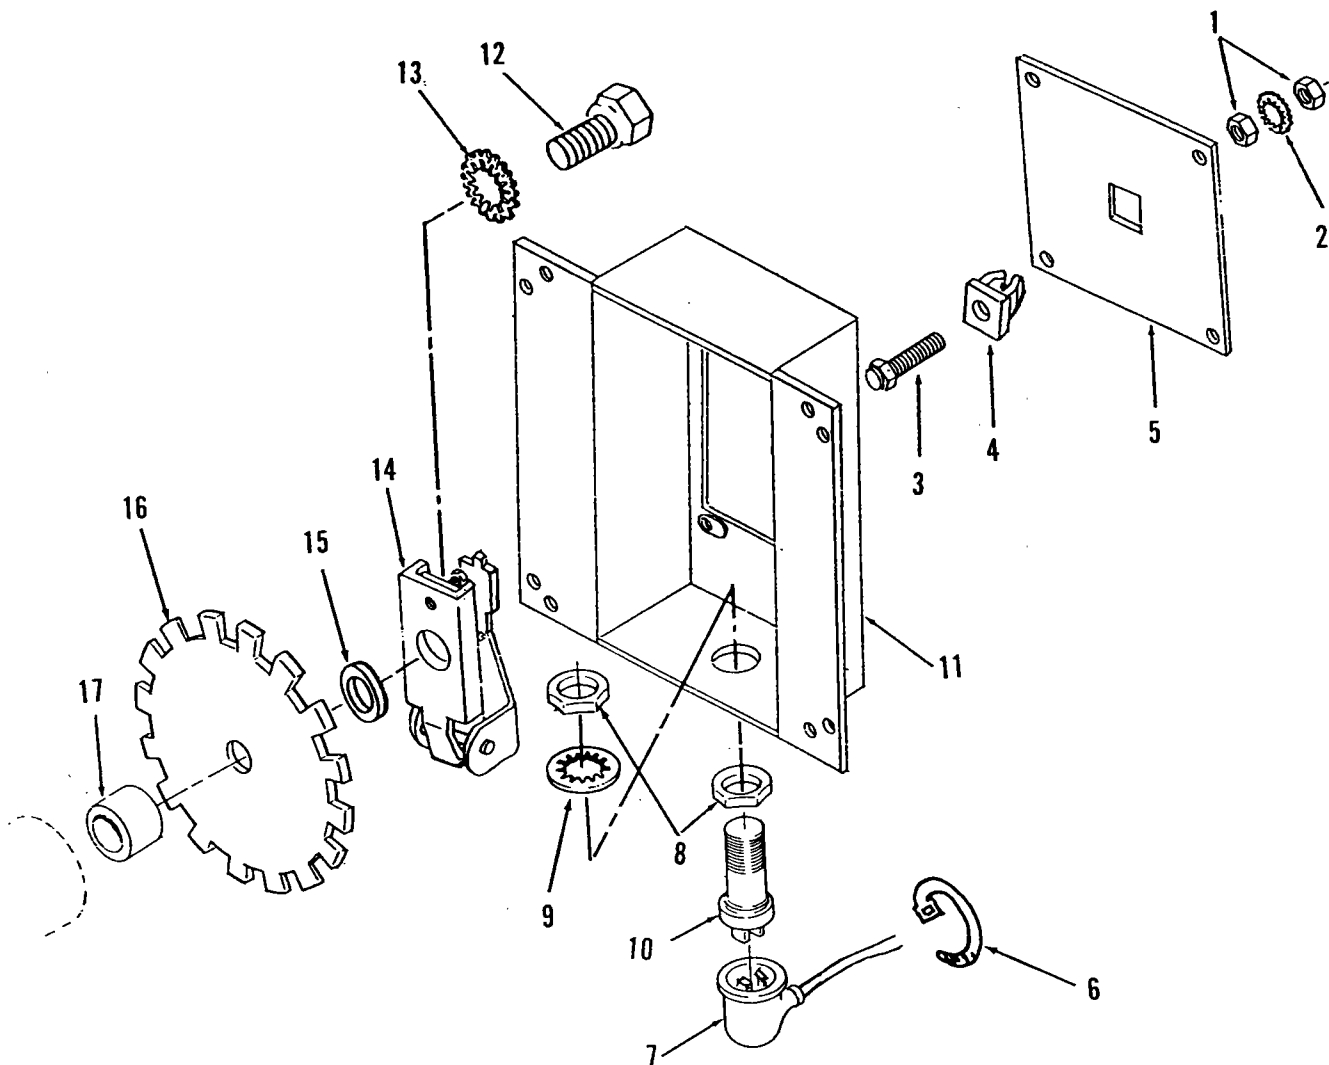

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	862-0001	2	Nut, Hex (1/4-20)	9	854-0031	1	Washer, Lock - IT (3/4")
2	853-0013	1	Washer, Lock - EIT (1/4")	10	150-1406	1	Sensor, Speed
3	150-0723	1	Point, Overspeed	11	150-2207	1	Cover, Overspeed Switch
4	870-0250	1	Nut, Insulated	12	718-1058	1	Screw, Cap - Hex Head (M10 x 1.5 x 45mm)
5	150-2206	1	Plate, Mounting	13	856-0010	1	Washer, Lock - EIT (3/8")
	821-0005	4	Screw, Self-locking - Hex (#10-32 x 1/2")	14	150-0956	1	Switch, Overspeed
6	332-1445	5	Tie, Cable	15	370-4031	1	Spacer, Sleeve
7	338-2189-02	1	Harness, Wiring	16	150-2204	1	Wheel - Speed Sensor
8	868-0011	2	Nut, Jam - Hex (3/4-16)	17	370-4032	1	Spacer, Sleeve

 
Generator Permanent Magnet Exciter

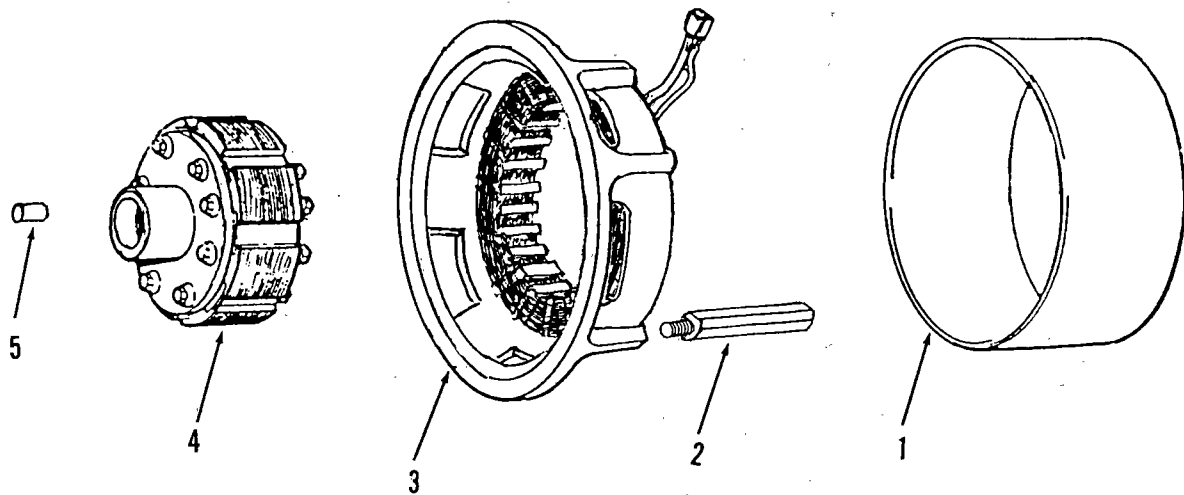

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0422	1	Cover
	249-0294	3	Screw, Cap - Hex Head (M5 x 12mm)
	249-0307	3	Washer, Lock (M5)
2	249-0423	3	Pillar, Threaded

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3	249-0426	1	Stator, Exciter with Frame
4	249-0427	1	Rotor, Exciter
	249-0399	1	Bolt
	249-0202	1	Washer, Lock (M10)
5	249-0313	1	Pin, Dowel

 
Control Heater

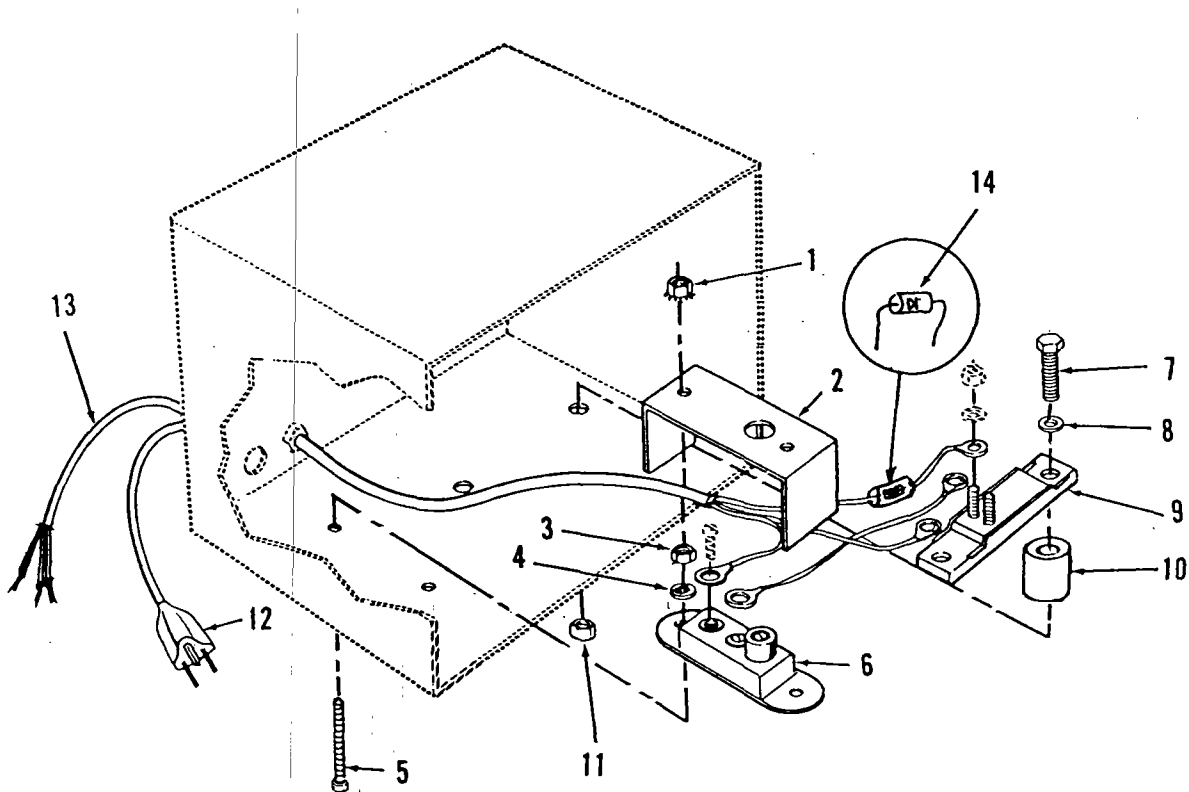

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0183	2	Nut, Self-locking - Hex (#6-32)
2	301-1886	1	Cover
3	860-0006	1	Nut, Hex (#6-32)
4	854-0006	2	Washer, Lock - IT (#6)
5	812-0070	2	Screw, Machine - Round Head (#6-32 x 1-1/4")
6	309-0128	1	Thermostat, Adjustable
7	800-0034	2	Screw, Cap - Hex Head (5/16-18 x 2-1/4")
8	526-0113	2	Washer, Flat (5/16")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
9	333-0151	1	Heater, Electrical 120VAC
	333-0378	1	240VAC
10	130-1107	2	Spacer
11	870-0257	2	Nut, Self-locking - Hex (5/16-18)
12	335-0161	1	Cable, Electrical (120VAC Application)
13	338-2121	1	Harness Wiring with Diode, less plug (240VAC Application)
14	357-0013	1	Diode
15	98-3232	1	Decal, Warning - Shock Hazard (Not illustrated)

 Generator Set Control

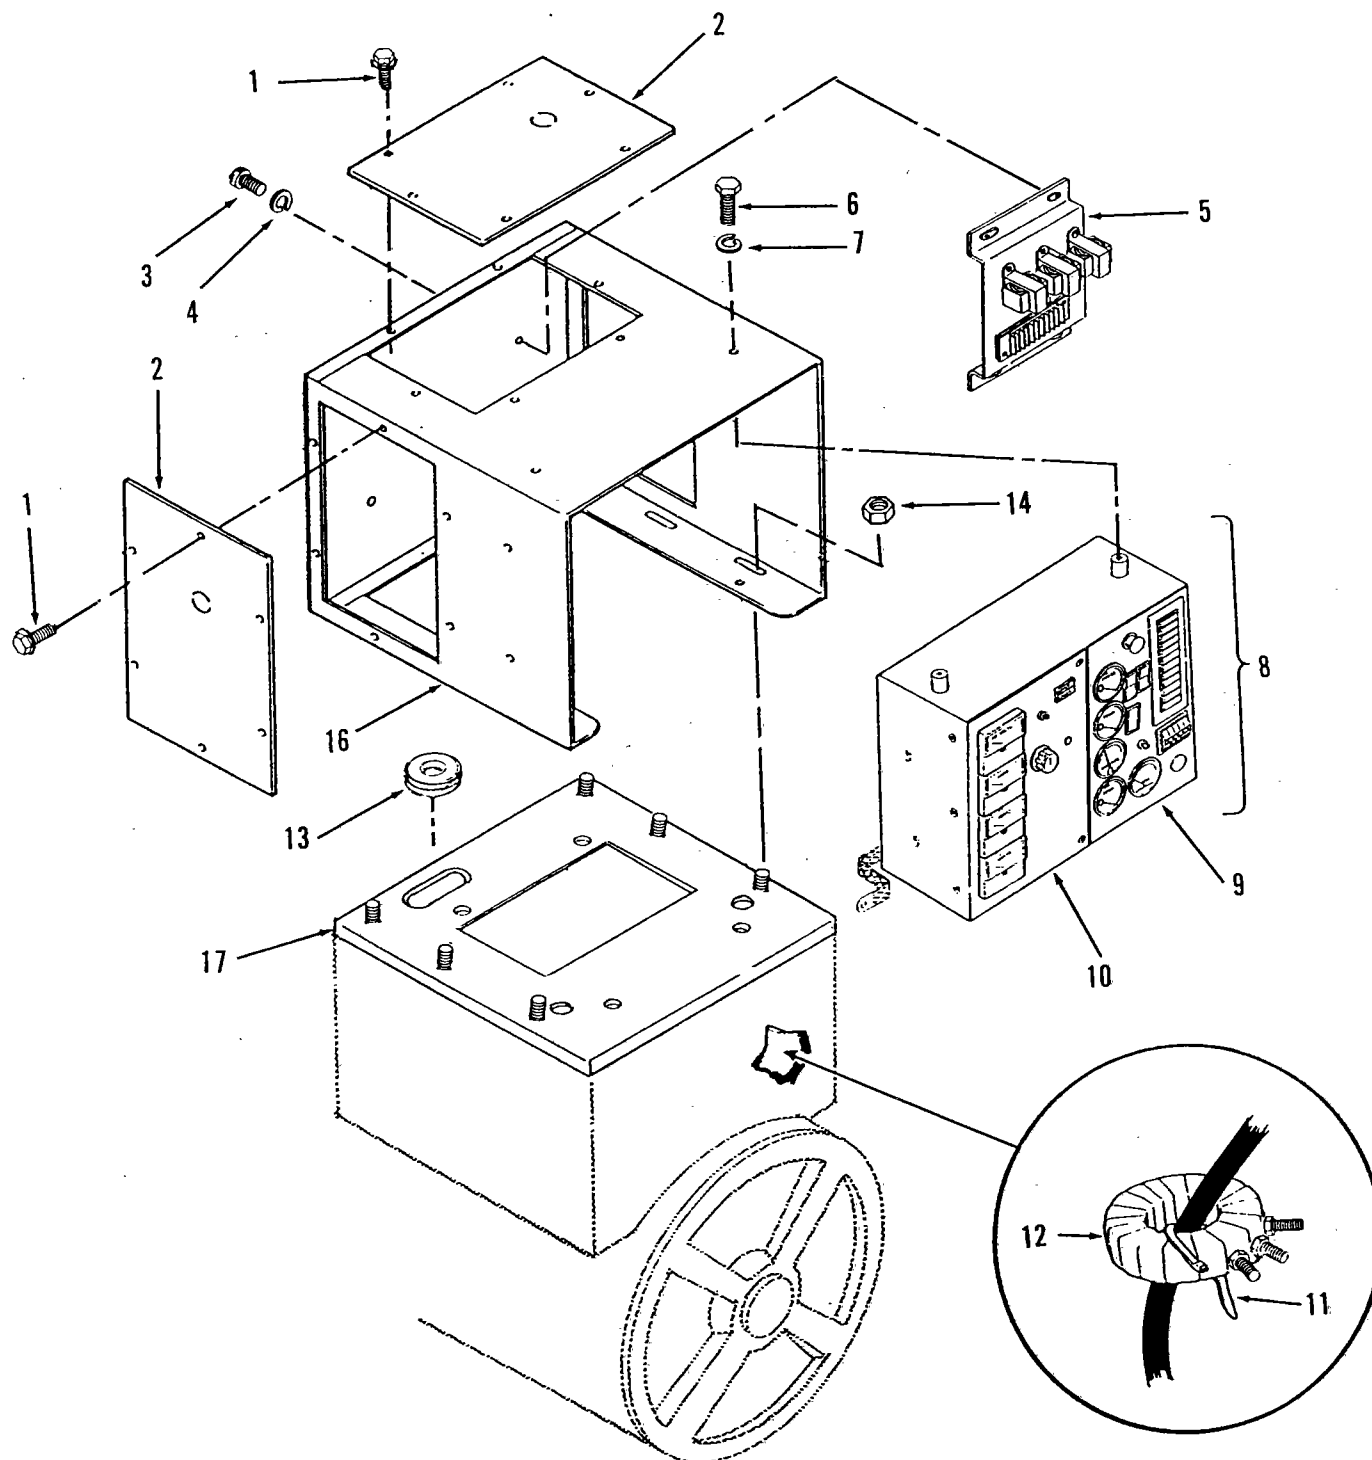


Generator Set Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0005	18	Screw, Self-locking - Hex (#10-32 x 1/2")	10	NFS	1	Control, Generator (See Separate Page for Components)
2	NFS	3	Panel, Box - Control	11	332-0941	6	Tie, Cable
3	812-0156	4	Screw, Machine - Round Head (1/4-20 x 1/2")	12	302-1794-01	3	Transformer, Current
4	850-0040	4	Washer, lock - Spring (1/4")				35 & 40 kW Voltage Code L,
5	NFS	1	Transformer Assy, Potential (See Separate Page for Components)		302-1794-02	3	35 & 40 kW Voltage Code Z,
							50 & 60 kW Voltage Code H,
6	800-0051	4	Screw, Cap - Hex Head (5/16-18 x 1/2")				50 & 60 kW Voltage Code L,
7	850-0045	4	Washer, Lock - Spring (5/16")				50 & 60 kW Voltage Code Z,
8	NFS	1	Control, Set (See item 9 & 10 for Components)	13	508-0051	1	35 & 40 kW Voltage Code H.
9	NFS	1	Control, Engine (See Separate Page for Components)	14	870-0212	6	Grommet
				16	NFS	1	Nut, Self-locking - Hex (1/4-20)
				17	NFS	1	Housing, Control
							Adapter, Housing to Terminal Box

NFS - Not For Sale

 Engine Control

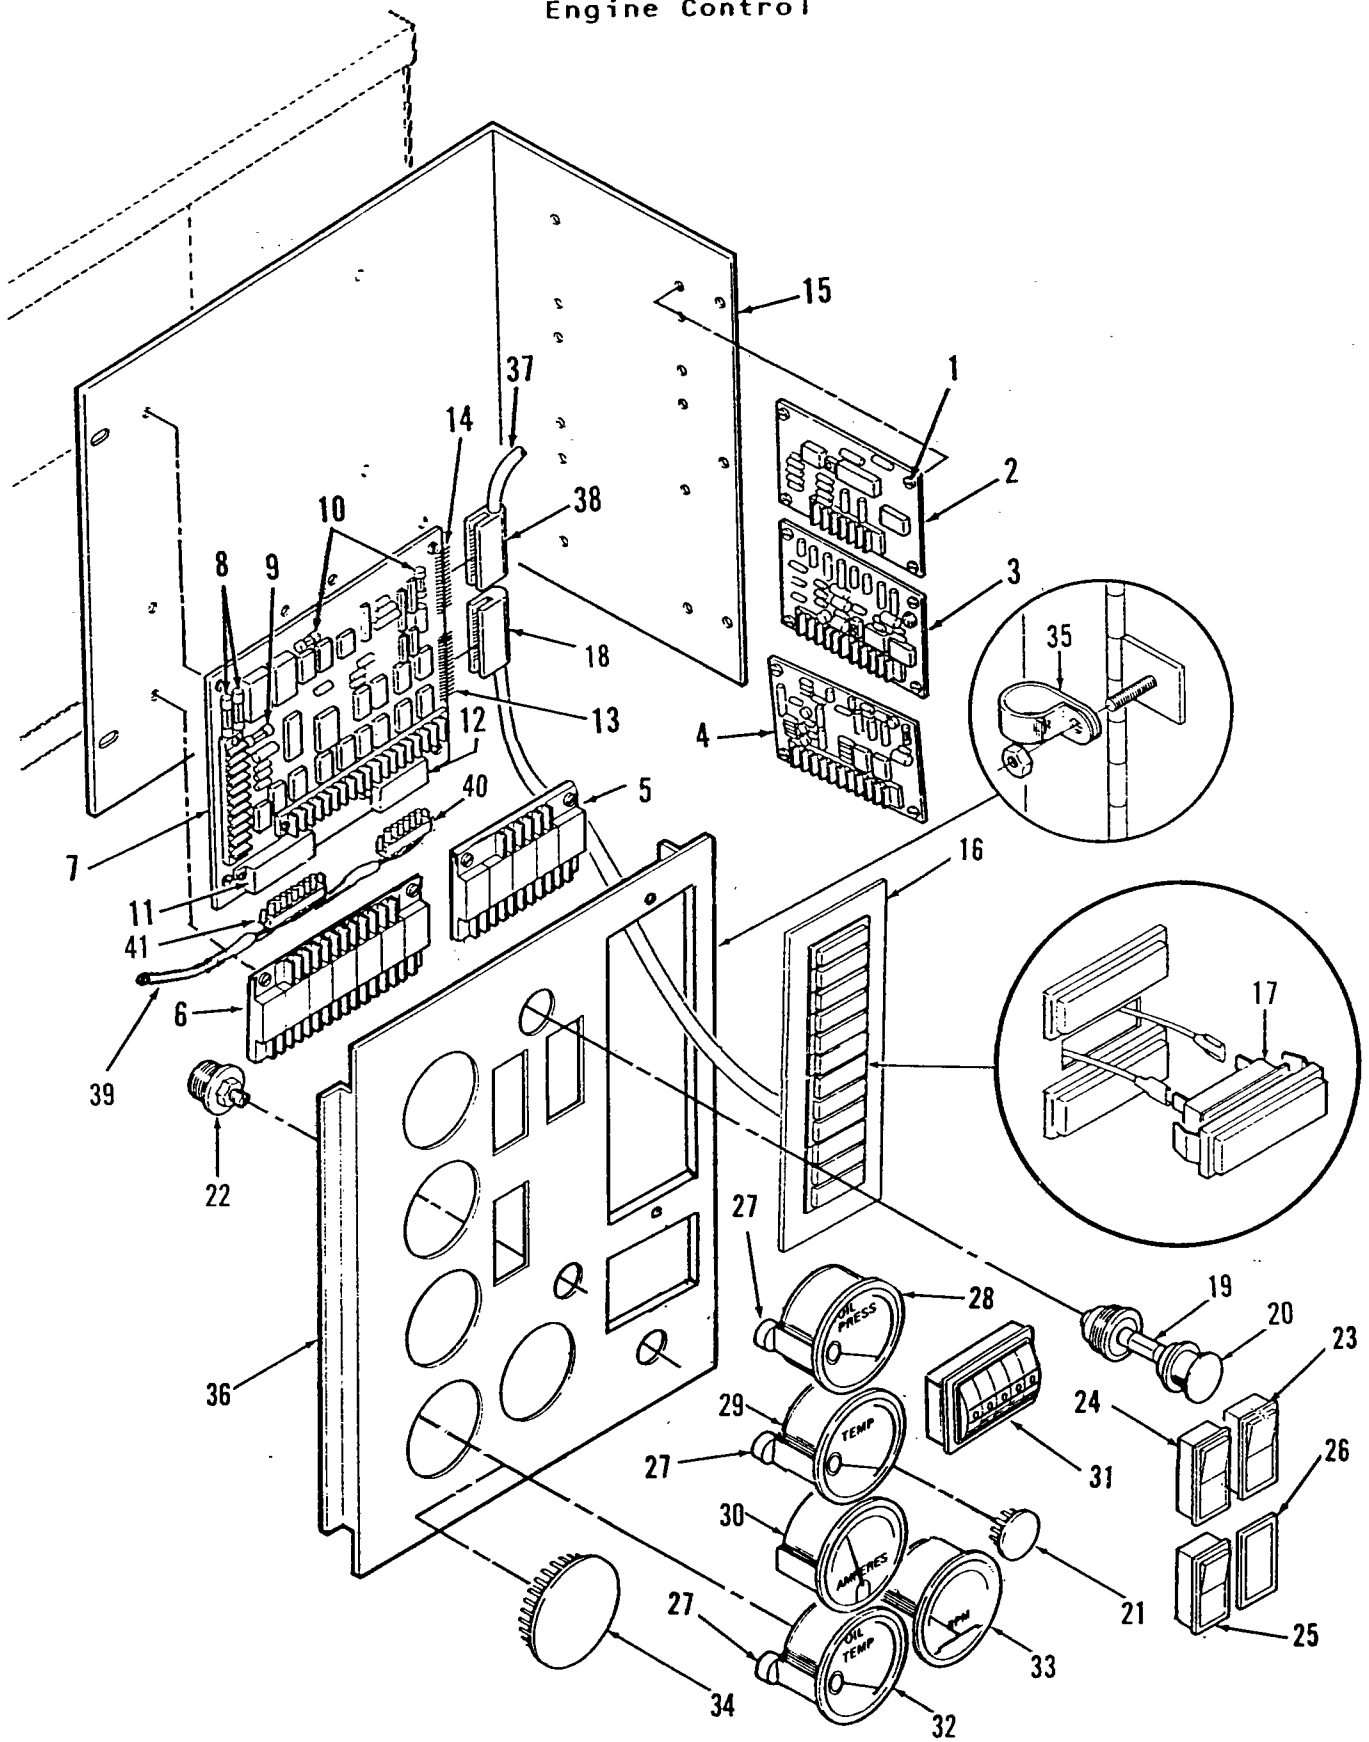


Engine Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815-0544	24	Screw, Machine - Round Head With IT Lock Washer (#6-32 x 1/2")	17	322-0369-02	12	Lamp, Incandescent - 1/3 Watt 28 VDC
2	300-2899	1	Board, Time Delay, Start/Stop - 24 VDC (A15)	18	323-1310	1	Housing, 13 Pin (J3)
3			Board, Magnetic Sensor, Start Disconnect/Over Speed Sensor (A16)	19	322-0017	1	Contact, Pin
	300-2903	1	Standard	20	322-0361	1	Lamp, Incandescent - 28 VDC (DS11)
	300-2904	1	Precision	21	517-0131	1	Holder, Lamp
4	300-2906	1	Board, Over-Under Voltage Sensor - 24 VDC (A17)	22	303-0280	1	Plug, Button
5	300-2856	1	Board, Relay - 24 VDC (A13)	23	308-0785	1	Potentiometer (R11)
6	300-2863	1	Board, Relay - 24 VDC (A14)	24	308-0784	1	Switch, Push (S11)
7			Board, Engine Monitor (A11) (Includes Fuses and Connectors)	26	301-6257	1	Switch, Push (S12)
	300-2808	1	24 VDC, 2 Light	27	193-0250	3	Cover
	300-2812	1	24 VDC, 12 Light	28	193-0352	1	Resistor, Gauge (R12)
8	321-0270	2	Fuse, Cartridge - 20 Amp (F1, F2)	29	193-0351	1	Gauge, Pressure - Oil (M11)
9	321-0231	1	Fuse, Cartridge - 15 Amp (F3)	30	302-1790	1	Gauge, Temperature - Water (M12)
10	321-0094	2	Fuse, Cartridge - 5 Amp (F4, F5)	31	302-0885	1	Ammeter (M13)
11	323-1305	1	Connector, 8 Pin (P1)		815-0385	2	Meter, Totalizing - Time (M14)
12	323-1303	1	Connector, 6 Pin (P2)		870-0183	2	Screw, Machine - Round Head (#6-31 x 1/2")
13	323-1309	1	Connector, 13 Pin (P3)	32	193-0330	1	Nut, Hex with ET Lockwasher (#6-32)
14	323-1307	1	Connector, 12 Pin (P4)	33	302-1715	1	Gauge, Temperature - Oil (M15)
15	NFS	1	Bracket, Mounting [301-8851]	34	517-0221	1	Tachometer (M16)
	821-0004	4	Screw, Self-locking - Hex Hd (#10-32 x 5/16")	35	322-0052	1	Plug, Button
16			Module, Indicator - Fault (Includes replaceable lamps, Harness with connector housing & contact pins) (A12)		870-0131	1	Clamp, Loop
	322-0358-02	1	24 VDC, 2 Light	36	NFS		Nut, Hex with ET Lockwasher (#10-32 x 1/2")
	322-0360-02	1	24 VDC, 12 Light	37	338-1817	1	Door, Control [301-9055-01]
	815-0385	2	Screw, Machine - Round Head (#6-32 x 1/2")	38	323-1308	1	Harness, Wiring - DC Meter (Includes Connector & Pins)
	870-0183	2	Nut, Self-locking - Hex (#6-32)	39	323-1302	12	Housing, 12 Pin (J4)
					323-1302	12	Contact, Pin
					338-2166	1	Harness, Wiring - Control to Engine (Includes Connectors and Pins)
				40	323-1304	1	Housing, 6 Pin
					323-1200	6	Contact, Pin
				41	323-1306	1	Housing, 8 Pin
					323-1200	8	Contact, Pin

NFS - Not For Sale

 Generator Control

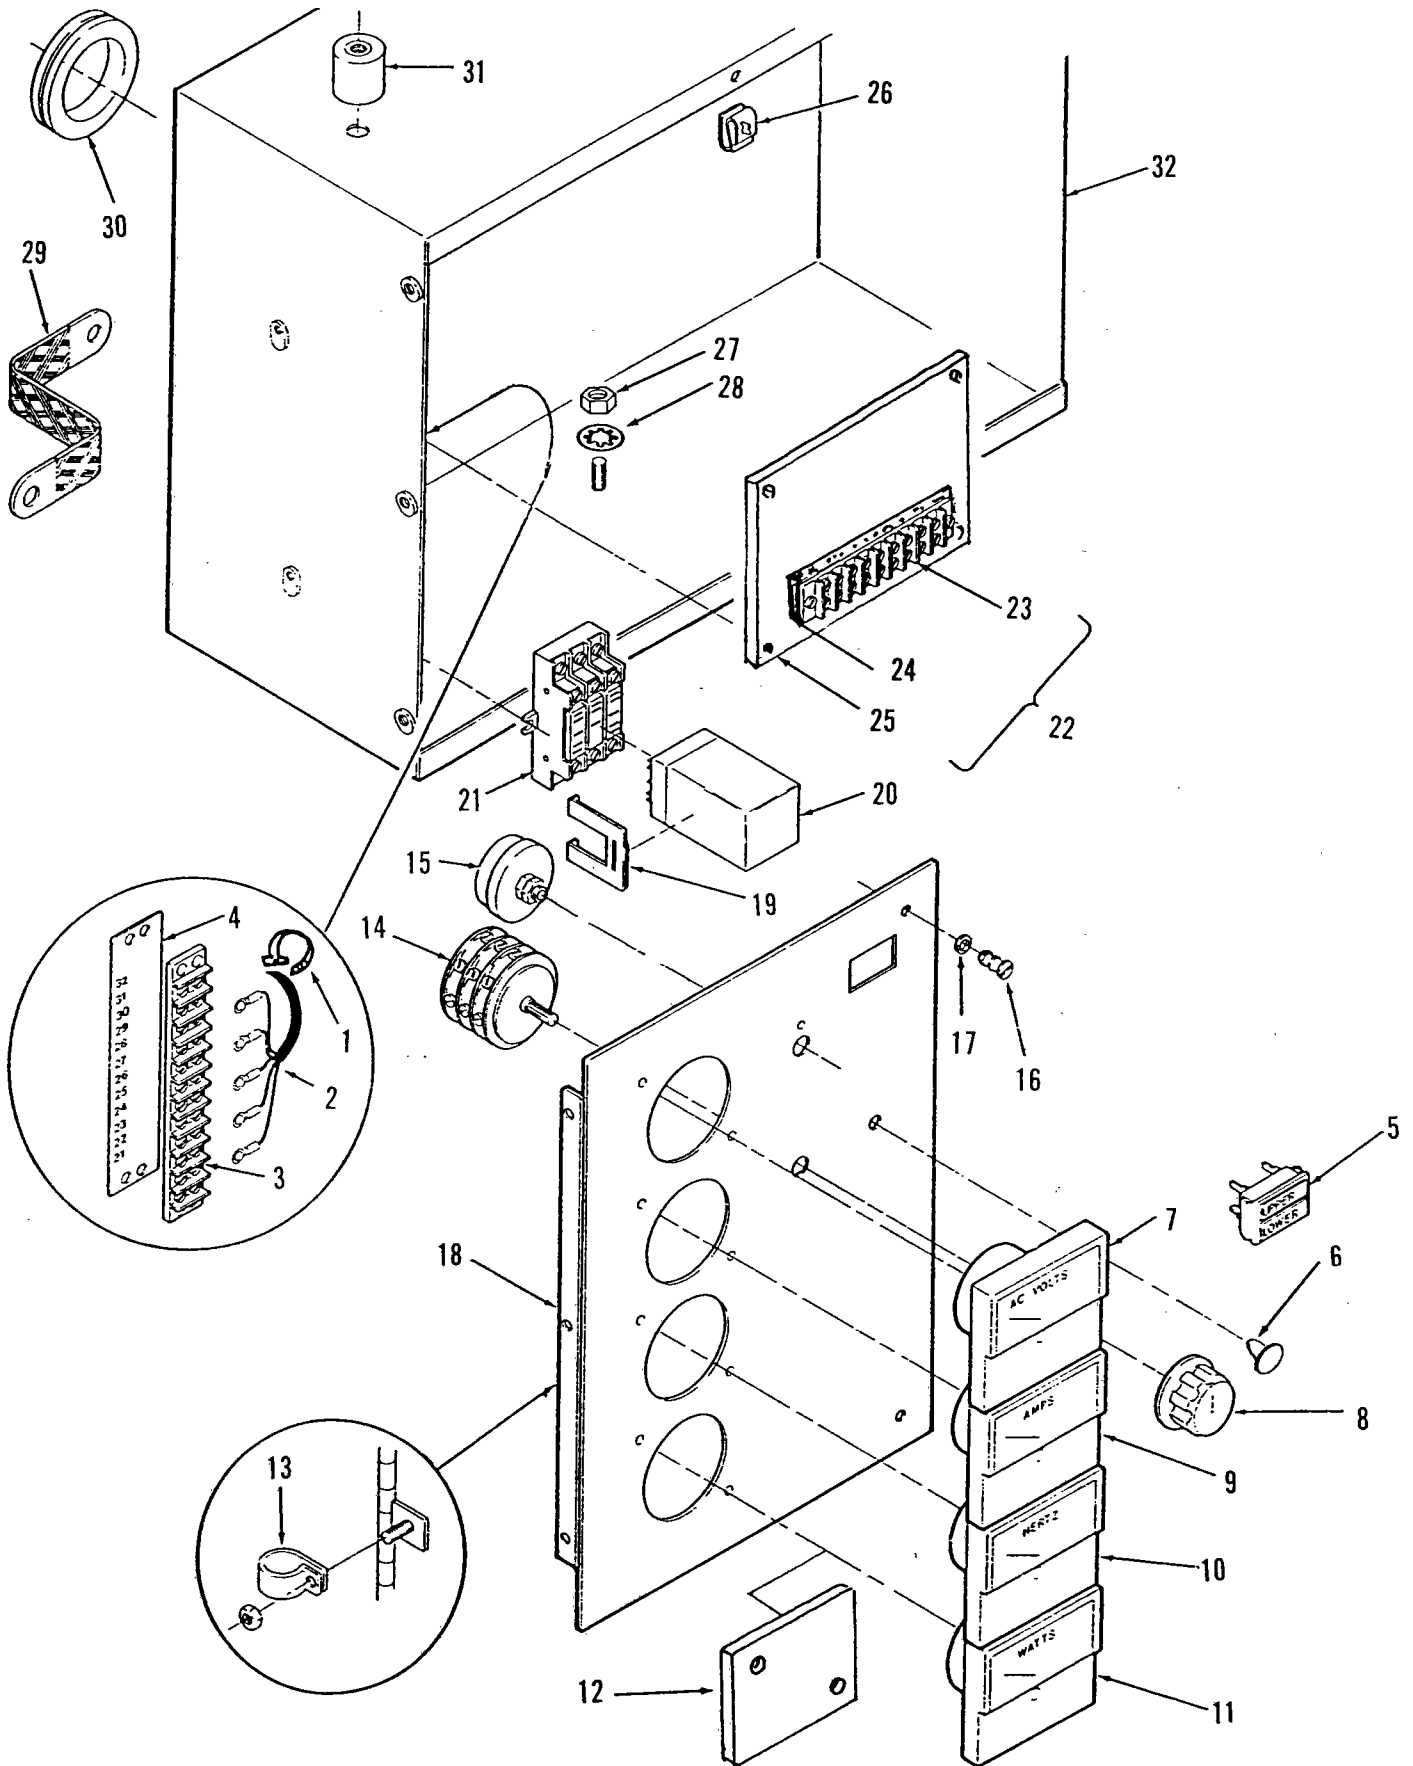


Generator Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-1445	2	Tie, Cable	14	308-0284	1	Switch, Rotary (S21)
2			Harness, Wiring	15	303-0261	1	Rheostat (R21)
	338-1818	1	Control with Meters (Includes Terminal Block)	16	406-0334	2	Clip, Fastener
	338-1853	1	Control without Meters	17	406-0333	2	Stud, Fastener
	812-0065	2	Screw, Machine - Round Head (#6-32 x 5/8")	18	NFS	1	Door, Control
3	332-0607	1	Block, Terminal (TB1)		821-0004	3	Screw, Self-locking - Hex (#10-32 x 5/16")
4	332-2723	1	Strip, Marker	19	307-1987	2	Clip, Relay
5	322-0363	1	Light, Indicator - Dual (DS21, DS22)	20	307-1056	1	Relay, 24 VDC (K21)
6	517-0131	1	Plug, Button	21	323-0804	1	Socket, Relay
7			Voltmeter (M21)		815-0544	2	Screw, Machine - Round Head with IT Lock Washer (#6-32 x 1/2")
	302-1148	1	Dual Scale 0-300/0-600V	22	NFS	1	Terminal Board Assembly
	302-1753	1	Single Scale 0-750V		812-0065	4	Screw, Machine - Round Head (#6-32 x 5/8")
8	303-0032	1	Knob	23	332-0751	1	Block, Terminal
9			Ammeter (M22)		812-0066	2	Screw, Machine - Round Head (#6-32 x 3/4")
			Single Scale Voltage Code H	24	332-0853	1	Strip, Marker
	302-1298	1	40kW, 0-50 Amp	25	NFS	1	Plate
	302-1757	1	50 & 60kW, 0-75 Amp	26	406-0332	2	Receptacle, Fastener
			Dual Scale Volt. Codes L & Z	27	871-0015	1	Nut, Hex (1/4-20)
	302-1147	1	35 & 40kW, 0-75/0-150 Amp	28	853-0013	1	Washer, Lock - ET (1/4")
	302-1683	1	50kW, 0-100/0-200 Amp	29	337-0049	1	Strap, Electrical (Ground)
	302-1684	1	60kW, 0-150/0-300 Amp		800-0024	1	Screw, Cap - Hex Head (5/16-18 x 1/2")
10	302-1720	1	Meter, Frequency (M23)		856-0008	1	Washer, Lock - EIT (5/16")
11		1	Wattmeter (M24) (See Separate page for Components)	30	508-0051	1	Grommet
12	NFS	1	Cover, Meter Hole	31	402-0527	2	Mount, Vibration
	815-0385	2	Screw, Machine - Round Head, Black (#6-32 x 1/2")		800-0051	4	Screw, Cap - Hex Head (5/16-18 x 1/2")
	870-0183	2	Nut, Hex with ET Lockwasher (#6-32)		850-0045	4	Washer, Lock - Spring (5/16")
13	332-0052	1	Clamp, Loop	32	NFS	1	Box, Control
	870-0131	1	Nut, Self-locking - Hex with ET Lock Washer (#10-32)				

NFS - Not For Sale

 
Wattmeter

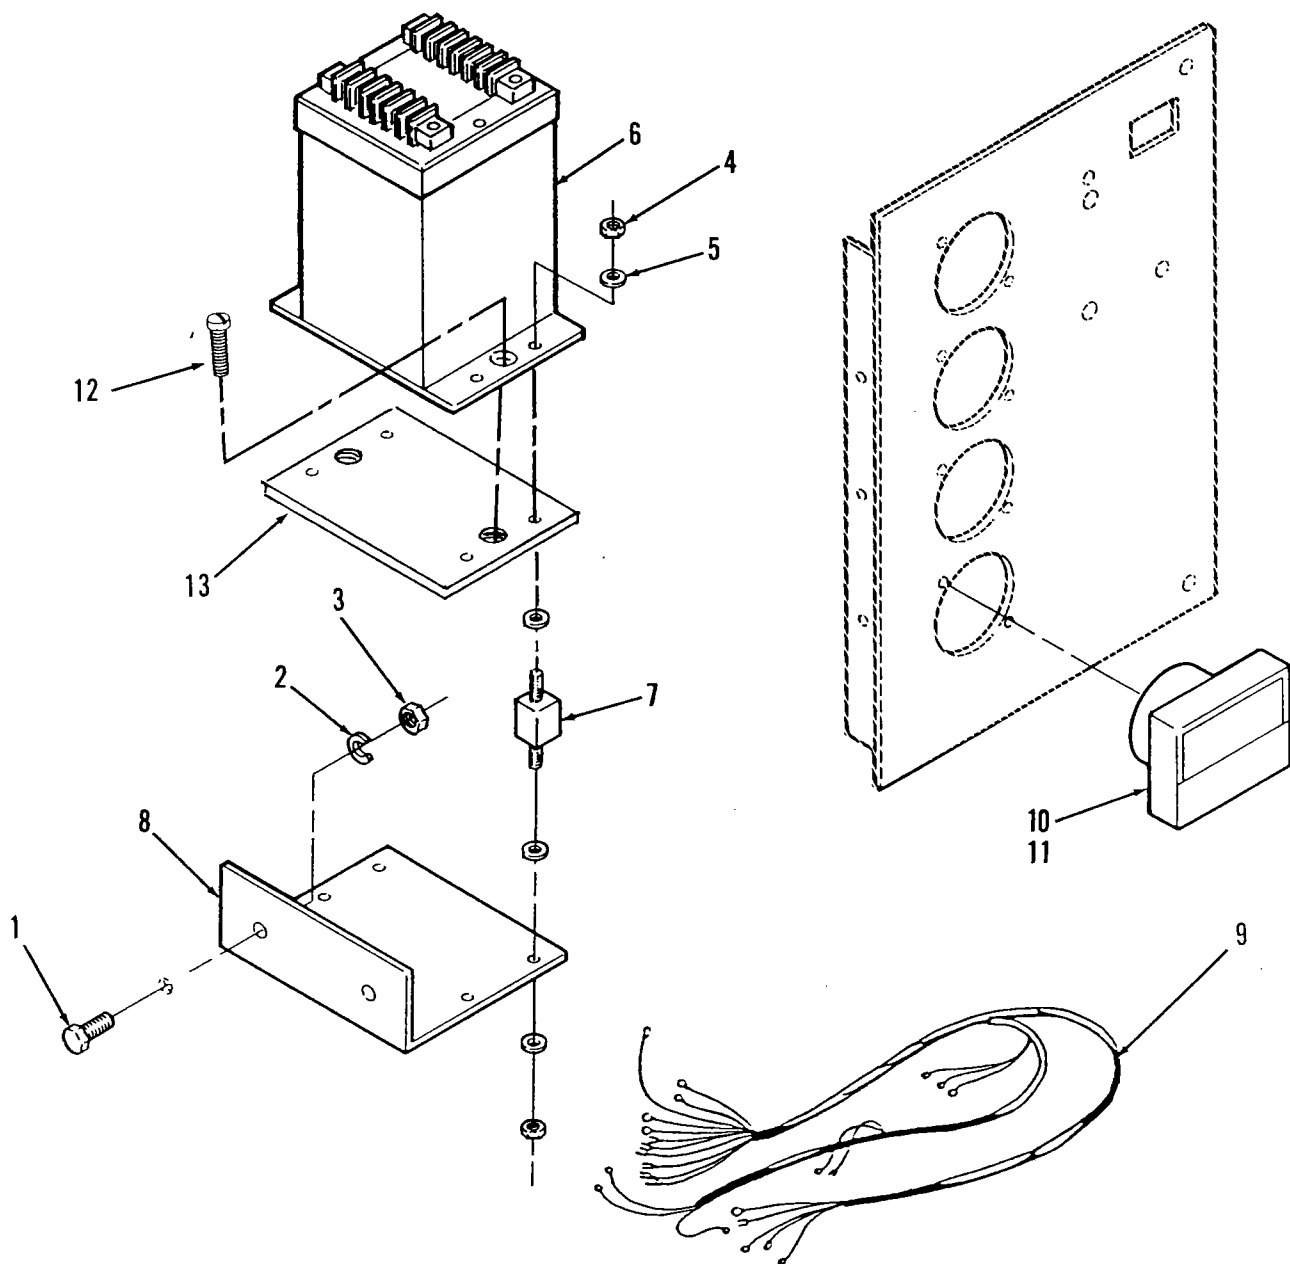

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0017	2	Screw, Cap - Hex Head (5/16-18 x 1/2")
2	850-0045	2	Washer, Lock (5/16)
3	862-0014	2	Nut, Hex (5/16-18)
4	860-0008	8	Nut, Hex (#8-32)
5	856-0002	16	Washer, Lock - ET (#8)
6	302-1833-01	1	Transducer, Watt
7	402-0354	4	Mount, Shock

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8	301-6987	1	Bracket, Mounting
9	338-1936	1	Harness, Wiring
10	302-1722	1	Wattmeter (Less Dial)
11	302-1721-01	1	Dial, Wattmeter
	302-1721-02	1	DNBA, DWBA
	302-1721-02	1	DNCA, DNCB, DWCA, DWCB
12	813-0102	2	Screw, Machine - Round Head (#10-32 x 3/8")
13	319-0030	1	Plate, Support - Transducer

 Potential Transformer

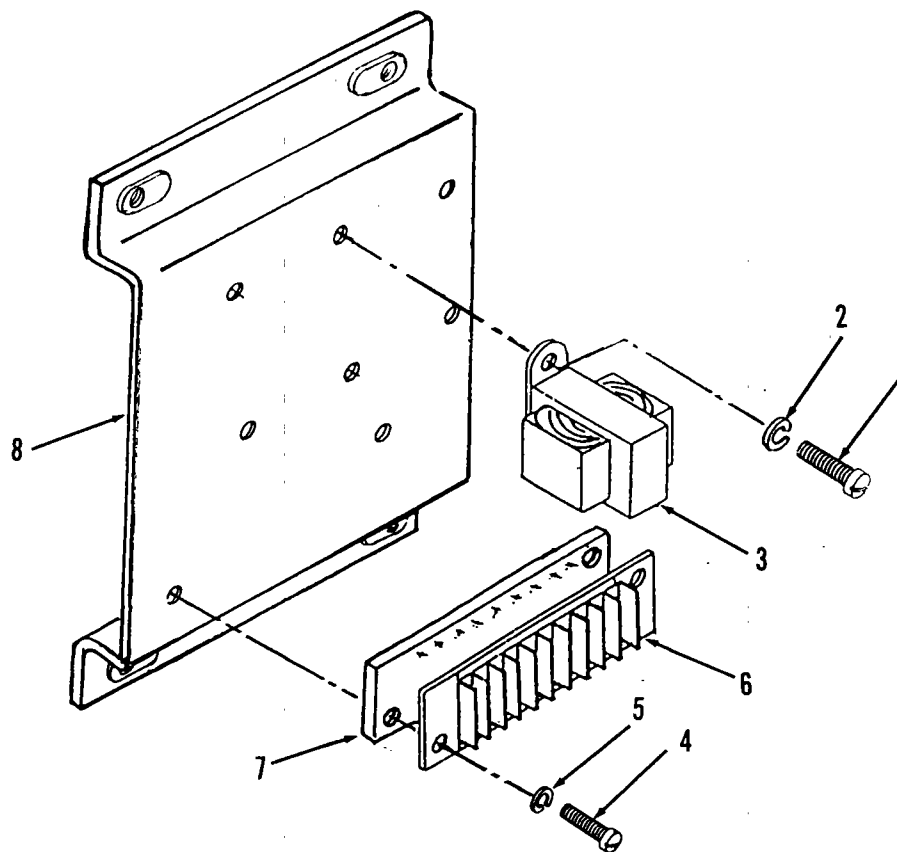

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	812-0079	6	Screw, Machine - Round Head (#8-32 x 1/2")	5	850-0025	2	Washer, Lock - Spring (#8)
2	850-0025	6	Washer, Lock - Spring (#8)	6	332-2562	1	Block, Terminal (10 Place)
3	315-0642	3	Transformer, Potential	7	332-2563	1	Strip, Marker
4	812-0077	2	Screw, Machine - Round Head (#8-32 x 3/8")	8	NFS	1	Bracket, Mounting

NFS - Not For Sale

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
98-3232	27	150-2201	9	249-0289	17	249-0338	21
102-1147	3	150-2203	9	249-0289	19	249-0340	21
102-1237	3	150-2204	25	249-0290	21	249-0340	23
130-1107	27	150-2206	24	249-0290	23	249-0341	21
130-3114	11	150-2206	25	249-0294	17	249-0341	23
130-3116	11	150-2207	24	249-0294	21	249-0354	19
130-3121	11	150-2207	25	249-0294	23	249-0361	19
130-3122	11	150-2218-01	9	249-0294	26	249-0362	19
130-3123	11	151-0611	9	249-0295	17	249-0364	23
130-3126	11	151-0632	9	249-0295	19	249-0368	19
130-3127	11	154-2253	5	249-0296	17	249-0370	23
130-3277	11	154-2581	4	249-0297	17	249-0395	17
140-0078	6	154-2581	5	249-0297	19	249-0395	19
140-0078	7	154-2706	4	249-0298	15	249-0398	17
140-0317	8	154-2708	4	249-0299	17	249-0398	17
140-1260	6	155-2062-01	4	249-0300	17	249-0398	19
140-1260	7	155-2062-01	5	249-0301	17	249-0399	26
140-1260	8	155-2080	4	249-0302	19	249-0401	17
140-1435	8	155-2080	5	249-0303	17	249-0401	19
140-1548	6	155-2175	5	249-0304	17	249-0402	21
140-1548	7	155-2256	5	249-0304	19	249-0402	23
140-1548	8	155-2257	4	249-0307	17	249-0403	17
140-1864	6	187-0146	3	249-0307	21	249-0404	19
140-2157	6	193-0244	3	249-0307	23	249-0422	26
140-2157	7	193-0250	31	249-0307	26	249-0423	26
140-2158	6	193-0330	31	249-0308	17	249-0424	17
140-2158	7	193-0351	31	249-0308	21	249-0424	19
140-2159	6	193-0352	31	249-0308	23	249-0426	26
140-2159	7	193-0353	3	249-0309	17	249-0427	26
140-2160	8	193-0375	3	249-0311	17	249-0428	17
140-2161	8	249-0201	19	249-0312	19	249-0428	19
140-2162	8	249-0202	19	249-0313	26	249-0444	19
140-2163	7	249-0202	26	249-0315	15	249-0564	17
140-2163	8	249-0205	17	249-0317	17	249-0564	19
140-2164	7	249-0212	17	249-0318	17	300-2808	31
140-2164	8	249-0212	19	249-0319	17	300-2812	31
140-2166	7	249-0218	15	249-0320	21	300-2856	31
140-2168	8	249-0218	17	249-0324	17	300-2863	31
140-2177	6	249-0271	21	249-0325	17	300-2899	31
140-2178	6	249-0271	23	249-0326	17	300-2903	31
140-2179	6	249-0281	21	249-0327	21	300-2904	31
145-0596	3	249-0281	23	249-0327	23	300-2906	31
150-0723	24	249-0282	21	249-0329	17	300-3209-02	17
150-0723	25	249-0282	23	249-0333	17	300-3209-02	19
150-0956	24	249-0283	21	249-0337	21	301-1886	27
150-0956	25	249-0283	23	249-0334	17	301-6257	31
150-1406	25	249-0287	17	249-0334	19	301-6987	34
150-2007	9	249-0287	19	249-0335	21	302-0885	31
150-2187	9	249-0288	17	249-0336	21	302-1147	33
150-2200	9	249-0288	19	249-0336	23	302-1148	33

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
302-1298	33	323-1306	31	406-0334	33	526-0124	15
302-1683	33	323-1307	31	416-0446	3	526-0196	9
302-1684	33	323-1308	31	416-0619	3	526-0219	13
302-1715	31	323-1309	31	416-0853	13	526-0219	13
302-1720	33	323-1310	31	416-0854	13	526-0219	15
302-1721-01	34	332-0052	33	416-0893	3	526-0327	9
302-1721-02	34	332-0325	9	501-0441	3	526-2120	6
302-1722	34	332-0607	33	501-0502	3	526-2120	11
302-1753	33	332-0751	33	502-0153	11	526-2140	6
302-1757	33	332-0853	33	502-1033	11	526-2140	11
302-1790	31	332-0941	3	503-0098	3	718-1044	11
302-1794-01	29	332-0941	29	503-0197	3	718-1058	24
302-1794-02	29	332-1087	9	503-0354	11	718-1058	25
302-1833-01	34	332-1279	9	503-0365	11	750-1010	7
303-0032	33	332-1445	9	503-0685	3	750-1010	8
303-0261	33	332-1445	25	503-0868	6	800-0012	9
303-0280	31	332-1445	33	503-0868	7	800-0024	33
305-0778	17	332-1473	13	503-0868	8	800-0026	13
305-0778	19	332-2562	35	503-0998	7	800-0028	11
305-0779	17	332-2563	35	503-0999	6	800-0034	27
305-0779	19	332-2723	33	503-0999	7	800-0051	29
307-1056	33	332-2739	3	503-1379-02	11	800-0051	33
307-1987	33	332-2921	3	503-1379-03	11	800-0092	13
308-0284	33	333-0151	27	503-1391-01	11	800-0092	15
308-0784	31	333-0291-01	14	503-1460	8	800-0520	13
308-0785	31	333-0291-02	14	503-1467	8	800-2060	3
309-0128	27	333-0292-01	14	503-1520	6	800-2060	9
309-0169	3	333-0292-02	14	503-1542	7	800-2084	6
309-0269	3	333-0378	27	503-1543	7	800-2084	11
309-0272	3	335-0161	27	504-0003	11	800-2086	4
309-0553	3	337-0049	33	504-0011	3	800-2088	15
309-0554	3	337-0090	13	505-0026	3	800-2110	3
315-0642	35	338-1817	31	505-0059	3	800-2110	6
319-0030	34	338-1818	33	505-0098	3	800-2110	7
321-0094	31	338-1853	33	505-0104	3	800-2110	8
321-0231	31	338-1936	34	505-0185	3	800-2110	9
321-0270	31	338-2121	27	505-0248	3	800-2110	11
322-0017	31	338-2166	31	505-1373	3	800-2111	13
322-0052	31	338-2189-02	25	508-0051	29	800-2112	3
322-0358-02	31	357-0013	27	508-0051	33	800-2120	13
322-0360-02	31	370-4031	25	517-0131	31	805-0015	15
322-0361	31	370-4032	24	517-0131	33	812-0065	33
322-0363	33	370-4032	25	517-0136	24	812-0066	33
322-0369-02	31	402-0354	34	517-0221	31	812-0070	27
323-0804	33	402-0466	13	526-0008	3	812-0075	3
323-1200	31	402-0527	33	526-0008	9	812-0077	35
323-1302	31	402-0568	13	526-0018	9	812-0079	35
323-1303	31	403-2567	13	526-0022	11	812-0156	29
323-1304	31	406-0332	33	526-0113	27	813-0102	34
323-1305	31	406-0333	33	526-0115	9	813-0103	9

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
815-0115	6	854-0031	25				
815-0115	7	856-0002	34				
815-0115	8	856-0008	13				
815-0172	9	856-0008	33				
815-0385	31	856-0010	24				
815-0385	31	856-0010	25				
815-0385	33	856-0013	3				
815-0544	31	856-0013	13				
815-0544	33	860-0006	27				
821-0004	31	860-0008	34				
821-0004	33	860-2007	3				
821-0005	24	862-0001	24				
821-0005	25	862-0001	25				
821-0005	29	862-0014	34				
821-0009	11	862-0015	11				
821-0016	8	862-0016	13				
821-0017	34	862-0016	15				
821-0029	6	863-0002	6				
821-0029	7	863-0002	7				
821-2045	15	863-0002	8				
850-0025	3	868-0011	25				
850-0025	35	870-0053	9				
850-0030	3	870-0131	9				
850-0040	29	870-0131	31				
850-0045	11	870-0131	33				
850-0045	29	870-0183	27				
850-0045	33	870-0183	31				
850-0045	34	870-0183	33				
850-0050	3	870-0212	9				
850-0060	13	870-0212	13				
850-0060	15	870-0212	29				
850-2006	3	870-0250	24				
850-2008	3	870-0250	25				
850-2008	9	870-0257	8				
850-2008	11	870-0257	13				
850-2010	4	870-0257	27				
850-2010	6	870-0281	6				
850-2010	11	870-0281	7				
850-2010	15	871-0010	3				
850-2012	3	871-0015	33				
850-2012	6	871-0028	3				
850-2012	7						
850-2012	8						
850-2012	9						
850-2012	11						
850-2012	13						
853-0013	24						
853-0013	25						
853-0013	33						
854-0006	27						



Parts Catalog

DNDA / DWDA

DNDB / DWDB

PMG GENERATOR SET



General Information

For part or service, contact the distributor from whom you purchased this equipment or refer to the nearest Authorized Cummins Distributor.

To avoid errors or delays in filling your parts order, always give the full MODEL, SERIAL and ID No. from the nameplate.

For handy reference, insert "YOUR" nameplate information in the spaces below.


		AC Generator Set	
		Model _____	
kw	kva	pf	phase
voltage		amps	
duty		overload	
rpm		hs	
class of insulation		pmg voltage	
field amp max		field voltage max	
generator model no.			
voltage regulator model no.			
ID no.			
generator set serial no.			
BS5000		NEMA	

TABLE OF CONTENTS

INDEX	1
INTRODUCTION	2
ENGINE COMPONENTS	3
EXHAUST SYSTEM	4
AIR CLEANER (STANDARD)	5
AIR CLEANER (HEAVY DUTY)	6
ELECTRONIC GOVERNOR	7
COOLING SYSTEM (RADIATOR)	9
CHASSIS.....	11
HEATER ENGINE COOLANT	12
GENERATOR	13
STATOR SECTION OF GENERATOR	15
ROTOR SECTION OF GENERATOR	17
OVERSPEED SWITCH	18
OVERSPEED SENSOR	19
PERMANENT MAGNET EXCITER	20
CONTROL HEATER	21
GENERATOR SET CONTROL	23
ENGINE CONTROL	25
GENERATOR CONTROL	27
WATTMETER.....	28
POTENTIAL TRANSFORMER	29
NUMERICAL INDEX	30

Index

Actuator, Governor 7
Adapter, Exhaust 4

Bell, End - Generator 15

Cable, Battery 3
Cable, Pickup - Magnetic 19
Cap, Radiator 9
Cap, Rain - Exhaust 4
Chassis 11
Cleaner, Air 5,6
Control, Engine 25
Control, Generator 27
Control, Generator Set 23
Cooling System 9

Drain, Oil 3

Exhaust System 4

Fan, Cooling 9
Filter, Air 5,6

Gasket, Drain - Oil 3
Gauge, Pressure - Oil 25
Gauge, Temperature - Oil 25
Gauge, Temperature - Water 25
Generator 13
Governor, Electronic 7
Guard, Belt 9
Guard, Fan 9

Harness, Wiring - Control (AC) 27
Harness, Wiring - Control (DC) 25
Harness, Wiring - Control To Engine 25
Heater, Control 21
Heater, Coolant - Engine 12
Hose, Drain - Oil 3
Hose, Radiator 9
Housing, Control 23

Indicator, Service - Air Cleaner 5,6

Light, Indicator 25
Line, Fuel - Flex 3

Meter, Ampere 27
Meter, Frequency 27
Meter, Tach 27
Meter, Time - Running 27

Pickup, Magnetic 19

Radiator 9
Rotor, Exciter 17
Rotor, Exciter - Components 17
Rotor, Generator 17

Sender, Pressure - Oil 3
Sender, Temperature - Lo Engine 3
Sender, Temperature - Oil 3
Sender, Temperature - Water 3
Silencer, Exhaust 4
Stator, Exciter 15
Stator, Generator 15
Switch, Overspeed 18
Switch, Pressure - Lo Oil 3
Switch, Push - Reset/Panel 25
Switch, Push - Run/Stop/Remote 25
Switch, Rotary - Generator Control 27
Switch, Temperature - Hi Water 3
Switch, Temperature - Pre Water 3

Thermostat, Heater - Water 12
Transformer, Current 23
Transformer, Potential 29

Valve, Drain - Oil 3
Voltmeter 25, 27

Wattmeter 28

Introduction

This Parts Manual applies to the Standard Gen Sets Listed below. The illustrations are arranged in groups of related items, and each part or assembly is identified by a Reference Number. All parts illustrated are typical, and unless otherwise mentioned in the description column the parts are interchangeable between models.

These typical illustrations are subject to change and reflect only the latest replacement parts arrangement. The Right and Left sides of the Set are determined by FACING the FRONT (Engine end) of the Set.

Set Data Table

MODEL IDENTIFICATION	RATING	RPM RATING	BATTERY VOLTAGE
60.0 DNDA/DWDA - */ # @	60,000 WATTS	1500 RPM	24 VDC
80.0 DNDA/DWDA - */ # @	80,000 WATTS	1800 RPM	24 VDC
85.0 DNDB/DWDB - */ # @	85,000 WATTS	1500 RPM	24 VDC
100.0 DNDB/DWDB - */ # @	100,000 WATTS	1800 RPM	24 VDC

Electrical Data Table


*VOLTAGE CODE	VOLTS	HERTZ	WIRE	PHASE	NOTES
H	347/600	60	4	3	
L	120/208	60	12	3	+
	127/220	60	12	3	
	139/240	60	12	3	
	240/416	60	12	3	
	254/440	60	12	3	
	277/480	60	12	3	
Z	110/190	50	12	3	+
	115/200	50	12	3	
	120/208	50	12	3	
	127/220	50	12	3	
	220/380	50	12	3	
	230/400	50	12	3	
	240/416	50	12	3	
	254/440	50	12	3	

- * - Voltage Codes follow Model Letter designations.
- # - Specification Number: Number 1 is Standard, all others indicate variations.
- @ - Specification Letter: Letter advances (A to B, B to C, etc) with major manufacturing changes.
- + - The Stators are Reconnectible.

Engine Replacement Parts


The Engine replacement parts can be ordered from the Cummins Engine Distributor except those parts modified or added during the Gen Set Assembly. When ordering engine parts, refer to the Engine Data plate and supply the Model, Serial, and CPL numbers. For assistance in ordering the Engine replacement parts, contact the nearest Cummins Engine Distributor or the Supplier from whom you purchased the Generator Set.

 Engine Components (External)

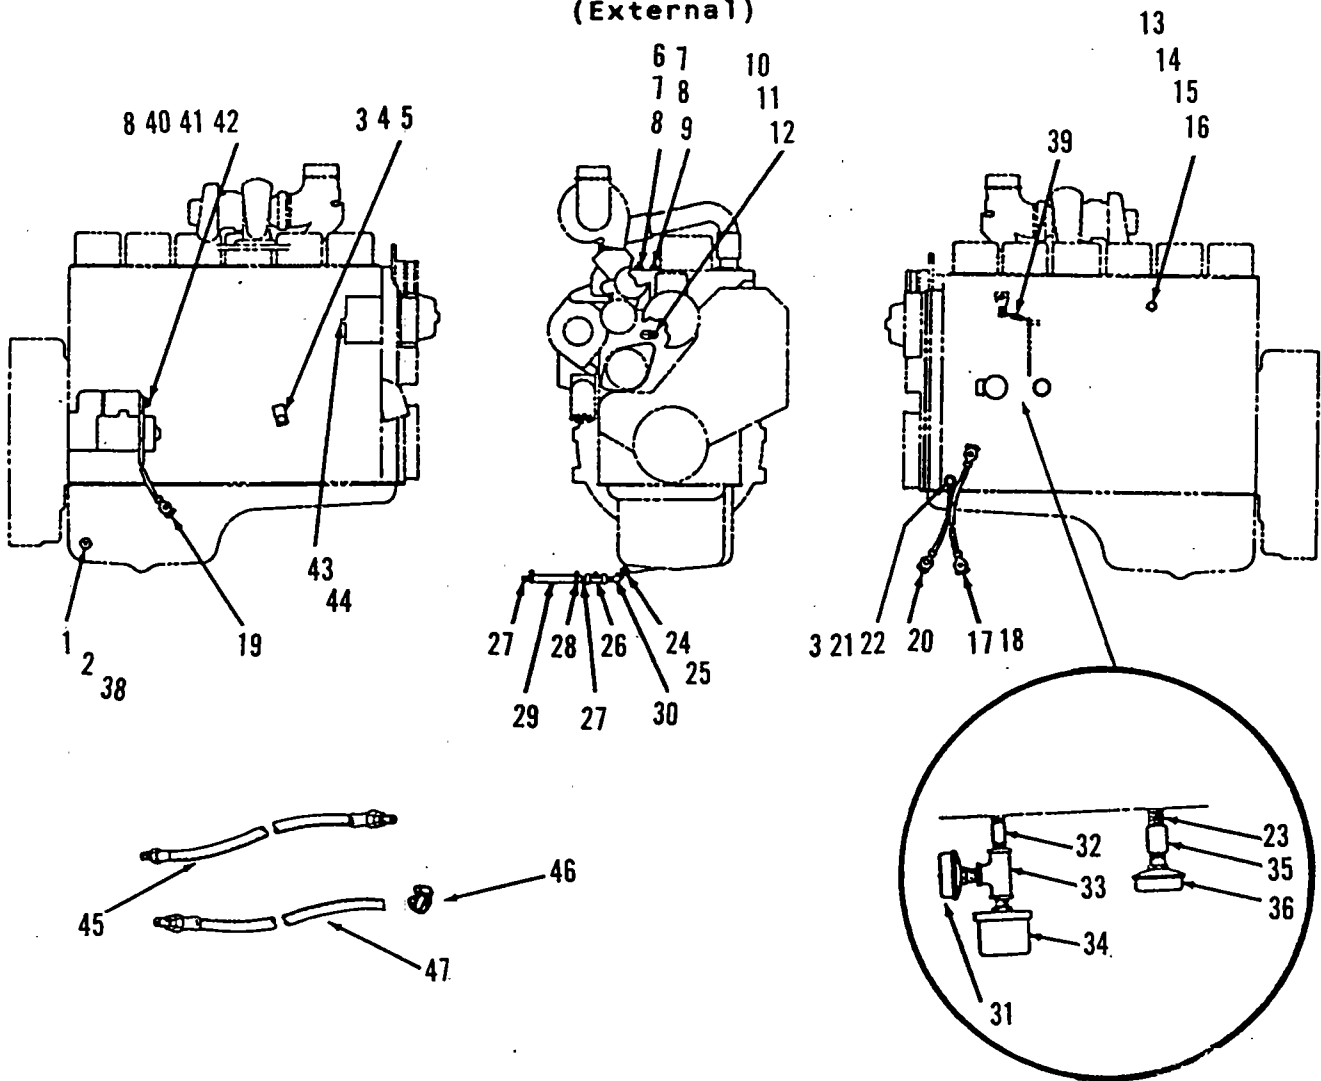

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	193-0353	1	Sender, Temperature - Oil	22	850-2012	1	Washer, Lock (M12)
2	187-0146	1	Washer, Sealing	23	505-0098	1	Nipple, Close
3	856-0013	3	Washer, Lock - EIT (1/2")	24	102-1147	1	Gasket, Drain - Oil Pan
4	332-2739	1	Bracket Assembly, Terminal	25	102-1237	1	Adapter, Drain - Oil
5	800-2112	1	Screw, Cap - Hex Head (M12-1.75 x 30mm)	26	504-0011	1	Valve, Shutoff
6	309-0554	1	Switch, Temperature	27	505-0185	2	Nipple, Half
7	812-0075	1	Screw, Machine - Round Head (#8-32 x 1/4")	28	503-0197	2	Clamp, Hose
8	850-0025	2	Washer, Lock (#8)	29	503-0098	1	Hose, Drain (6")
9	309-0553	1	Switch, Temperature	30	505-0248	1	Elbow, Pipe - Street
10	800-2060	1	Screw, Cap - Hex Head (M8-1.25 x 35mm)	31	309-0169	1	Switch, Pressure - Oil
11	850-2008	1	Washer, Lock (M8)	32	505-0104	1	Nipple, Pipe - Short
12	309-0269	1	Switch, Temperature	33	505-0059	1	Tee, Pipe - Black
13	193-0375	1	Sender, Temperature	34	193-0244	1	Sender, Pressure - Oil
14	526-0008	2	Washer, Flat (#10)	35	505-0026	1	Coupling, Pipe
15	850-0030	1	Washer, Lock (#10)	36	309-0272	1	Switch, Pressure - Oil
16	871-0010	1	Nut, Cap - Hex Head (#10-32)	38	505-1373	1	Bushing, Reducer
17	416-0446	1	Cable, Battery (9")	39	145-0596	1	Spring, Extension - Throttle
18	332-0941	2	Tie, Cable	40	871-0028	1	Nut, Hex (3/8-16)
19	416-0444	1	Cable, Battery (44")	41	850-0050	1	Washer, Lock - Spring (3/8")
20	416-0893	1	Cable, Battery (10")	42	860-0008	1	Nut, Hex (#8-32)
21	800-2110	1	Screw, Cap - Hex Head (M12-1.75 x 20mm)	43	115-0025	1	Nut, Hex (1/4-28)
				44	850-0040	1	Washer, Lock - Spring (1/4")
				45	501-0441	1	Line, Fuel - Flex (Fuel In)
				46	503-0685	1	Clamp, Hose
				47	501-0502	1	Line, Fuel - Flex (Fuel Out)

 
Exhaust System

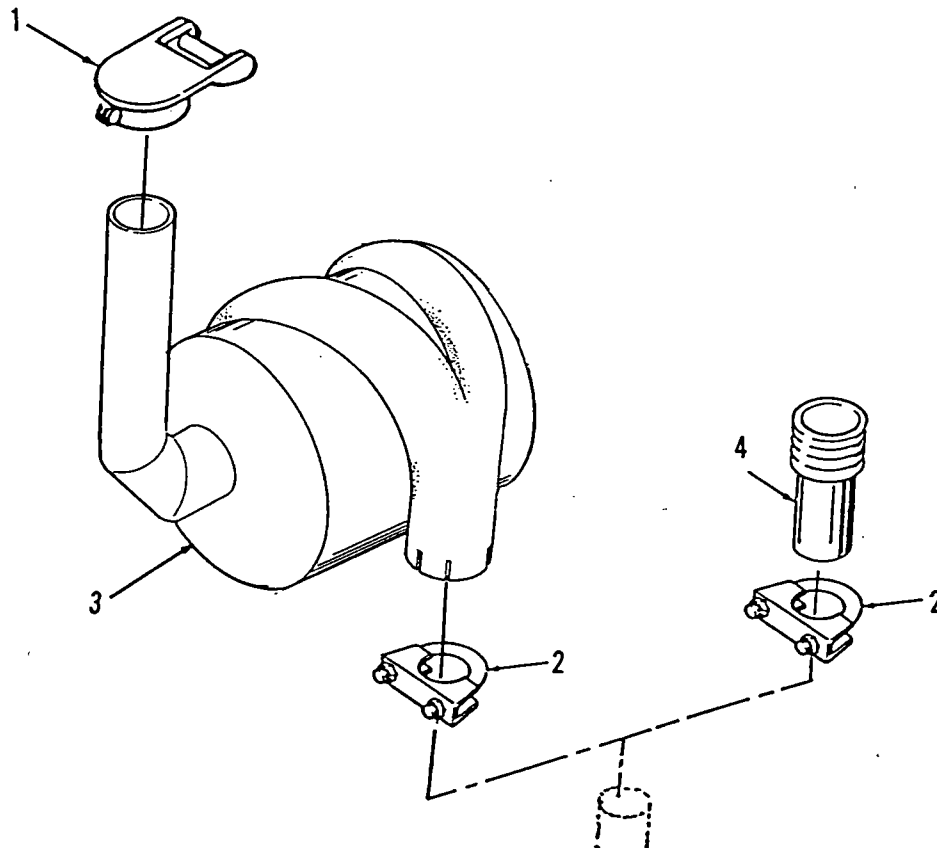

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155-2062-03	1	Cap, Rain
2	155-2175	1	Clamp, Muffler

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3	155-2263	1	Silencer
4	154-2253	1	Adapter, Exhaust

 
Air Cleaner - Standard

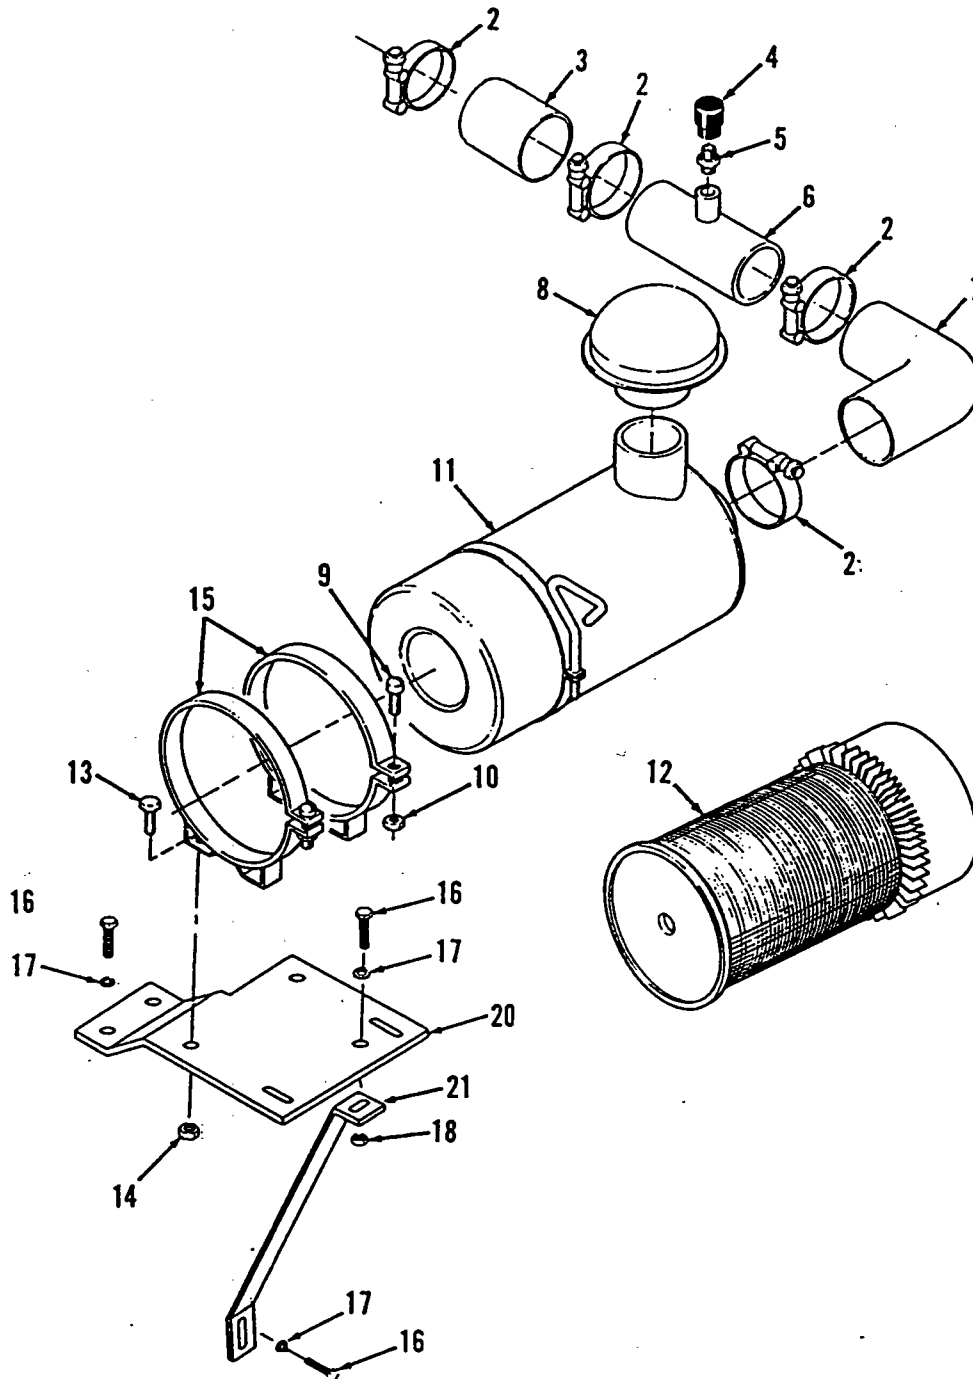

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0998	2	Clamp, Hose
2	503-0868	1	Clamp, Hose
3	503-1543	1	Hose, Reducing
4	140-1548	1	Indicator, Service
5	140-1260	1	Adapter, Indicator
6	140-2166	1	Tube, Inlet - Air
7	503-1542	1	Elbow, Hose - Reducing
8	140-2157	1	Cap, Air Cleaner
9	815-0115	2	Screw, Machine - Fillister Head (1/4-20 x 1")
10	863-0002	2	Nut, Square (1/4-20)
11	140-2147	1	Cleaner, Air (Includes Element)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
12	140-2148	1	Element, Air Cleaner
13	821-0033	3	Screw, Self-locking - Hex Head (7/16-14 x 3/4")
14	870-0437	3	Nut, Lock (7/16-14)
15	140-0078	2	Band, Mounting
16	800-2110	4	Screw, Cap - Hex Head (M12 x .8 x 20mm)
17	850-2012	4	Washer, Lock - Spring (M12)
18	750-1010	1	Nut, Hex (M12)
19	503-0999	1	Clamp, Hose
20	140-2153	1	Bracket, Mounting
21	140-2154	1	Brace, Mounting

 
Air Cleaner - Heavy Duty

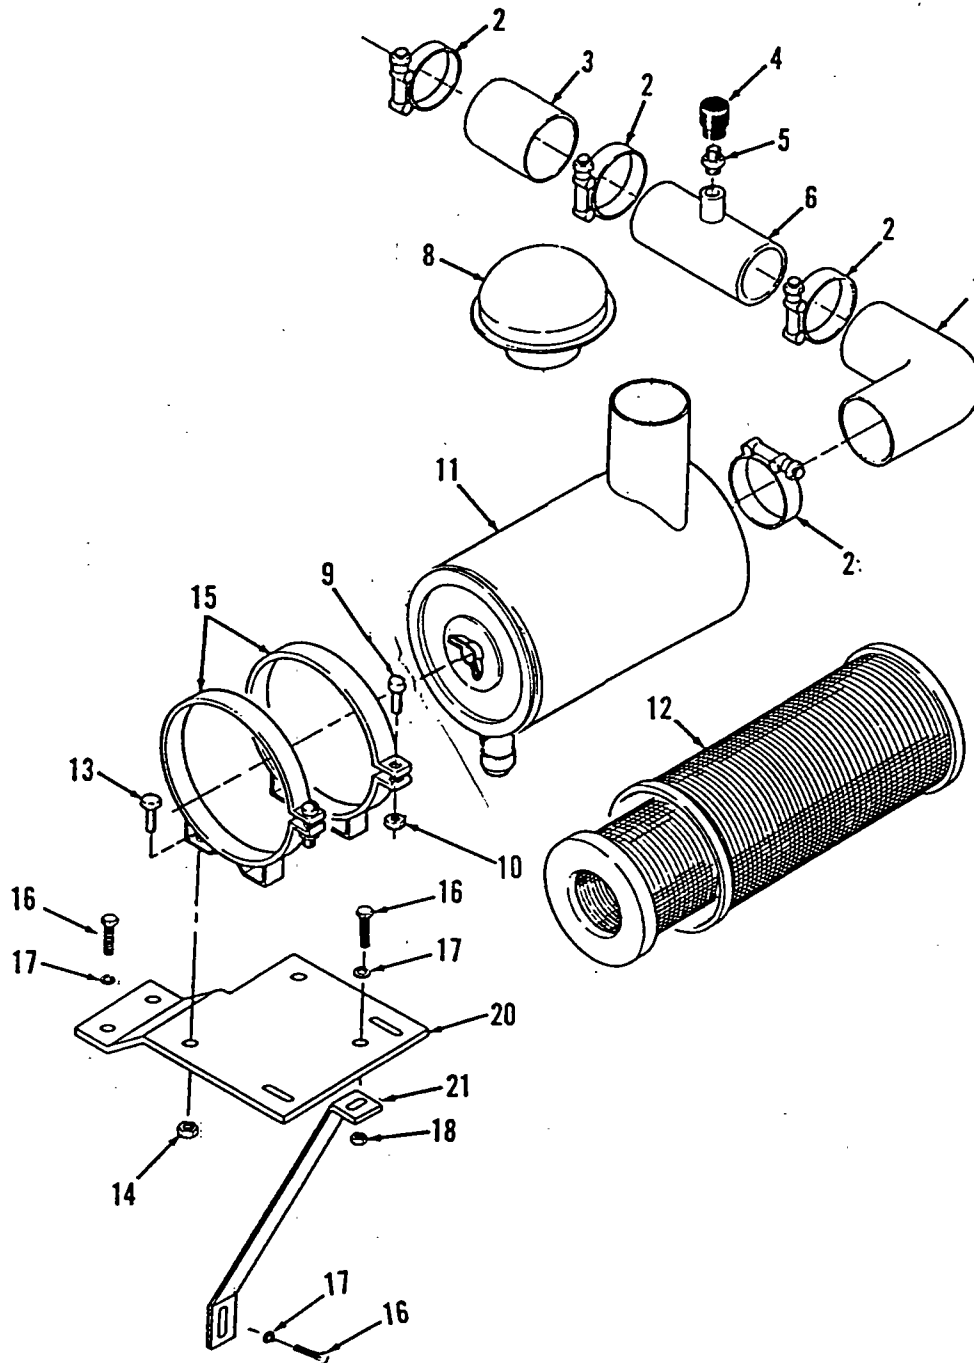

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2	503-0868	4	Clamp, Hose
3	503-1460	1	Hose
4	140-1548	1	Indicator, Service
5	140-1260	1	Adapter, Indicator
6	140-2152	1	Tube, Inlet - Air
7	503-1467	1	Elbow
8	140-1435	1	Cap, Air Cleaner
9	815-0115	2	Screw, Machine - Fillister Head (1/4-20 x 1")
10	863-0002	2	Nut, Square, (1/4-20)
11	140-2149	1	Cleaner, Air (Includes Element)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
12			Element, Air Cleaner
	140-2148	1	Primary
	140-2150	1	Secondary
13	821-0033	4	Screw, Self-locking - Hex Head (7/16-14 x 3/4")
14	870-0437	4	Nut, Lock (7/16-14)
15	140-1599	2	Band, Mounting
16	800-2110	4	Screw, Cap - Hex Head (M12 x .8 x 20mm)
17	850-2012	4	Washer, Lock - Spring (M12)
18	750-1010	1	Nut, Hex (M12)
20	140-2153	1	Bracket, Mounting
21	140-2154	1	Brace, Mounting

 
Electronic Governor

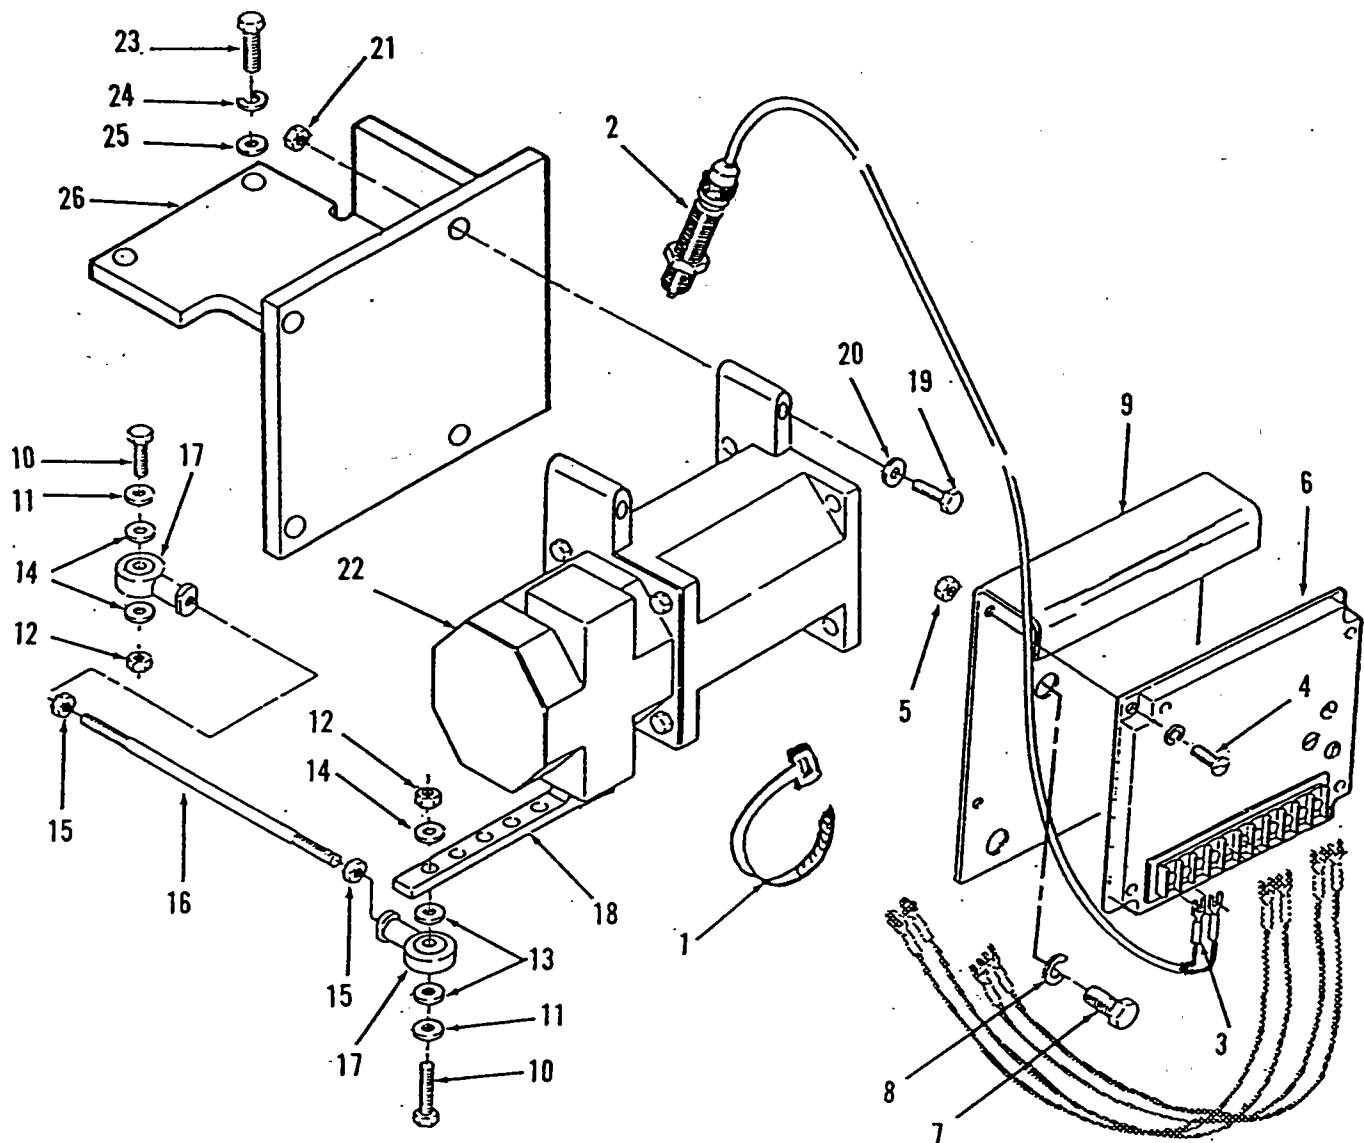

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-1445	5	Tie, Cable
2	150-2201	1	Sensor, Speed - Includes Leads, Less Terminals
3			Terminal, Electrical (For all Electrical Leads)
	332-1279	8	Spade, #6
	332-0325	1	Ring, #10
	332-1087	1	Ring, 1/2"
4	813-0103	4	Screw, Machine - Round Head (#10-32 x 3/4")
5	870-0131	4	Nut, Hex - W/ET (#10-32) (Not used all installations)
6	151-0611	1	Control, Governor
7	800-2110	2	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)
8	850-2012	2	Washer, Flat (M12)
9	150-2007	1	Bracket, Mounting
10	815-0172	2	Screw, Machine - Hex Head (#10-32 x 1")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	526-0327	2	Washer, Flat (13/64)
12	870-0131	2	Nut, Hex - W/ET (#10-32)
13	526-0008	2	Washer, Flat (#10)
14	526-0196	3	Washer, Flat - Aluminum
15	870-0053	2	Nut, Hex (#10-32)
16	150-2218-02	1	Rod - Governor
17	150-2200	2	Joint, Ball
18	150-2203	1	Lever, Actuator - Governor
19	800-0012	4	Screw, Cap - Hex Head (1/4-20 x 2 1/4")
20	526-0018	4	Washer, Flat (1/4)
21	870-0212	4	Nut, Self-locking - Hex (1/4-20)
22	151-0632	1	Actuator, Governor (24VDC)
23	800-2060	3	Screw, Cap - Hex Head (M8 x 1.25 x 35mm)
24	850-2008	3	Washer, Lock (M8)
25	526-0115	3	Washer, Flat (M8)
26	150-2187	1	Bracket, Governor

 
Cooling System (Radiator)

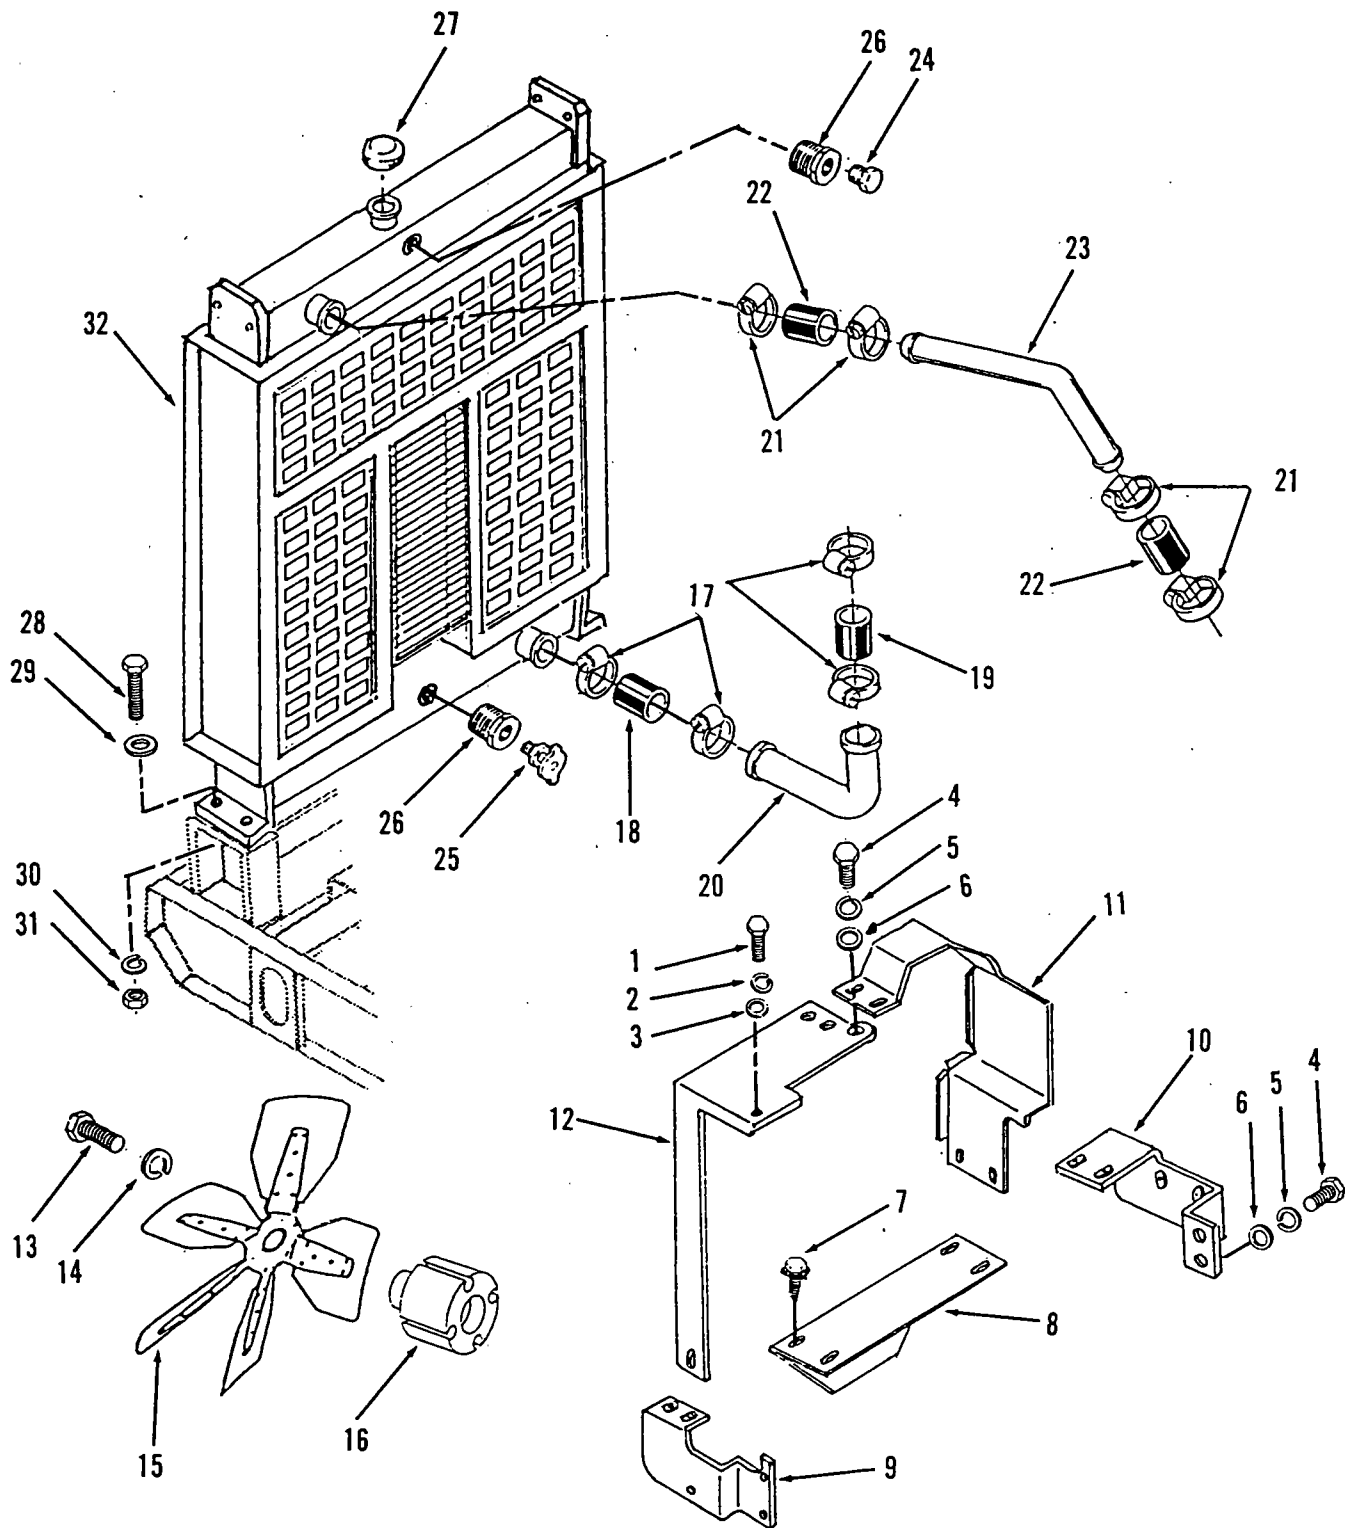

Cooling System (Radiator)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-2084	1	Screw, Cap - Hex Head (M10 x 1.5 x 16mm)	15	130-3117	1	Fan, Radiator
2	526-2120	1	Washer, Flat (M10)	16	130-3114	1	Spacer, Fan
3	850-2010	1	Washer, Lock - Spring (M10)	17	503-0354	4	Clamp, Hose
4	800-2110	5	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)	18	503-1379-02	1	Hose, Radiator
5	526-2140	5	Washer, Flat (M12)	19	503-1379-03	1	Hose, Radiator
6	850-2012	5	Washer, Lock - Spring (M12)	20	130-3147	1	Tube, Outlet - Radiator
7	821-0009	9	Screw, Self-locking - Hex (1/4-20 x 3/8")	21	503-0365	4	Clamp, Hose
8	130-3121	1	Plate, Bottom	22	503-1391-01	2	Hose, Radiator
9	130-3124	1	Guard, Belt (Right Side)	23	130-3149	1	Tube, Inlet - Radiator
10	130-3125	1	Guard, Belt (Left Side)	24	502-0153	1	Plug, Hex Head (1/4 NPT)
11	130-3127	1	Guard, Belt - Alternator	25	504-0003	1	Cock, Drain
12	130-3126	1	Guard, Belt - Alternator	26	502-1033	2	Adapter, Metric To NPT
13	718-1044	4	Screw, Cap - Hex Head (M8 x 1.25 x 60mm)	27		1	Cap, Radiator
14	850-2008	4	Washer, Lock - Spring (M8)	28	800-0028	4	Screw, Cap - Hex Head (5/16-18 x 1")
				29	526-0022	4	Washer, Flat (5/16)
				30	850-0045	4	Washer, Lock - Spring (5/16)
				31	862-0015	4	Nut, Hex (5/16-18)
				32	130-3278	1	Radiator

 
Chassis

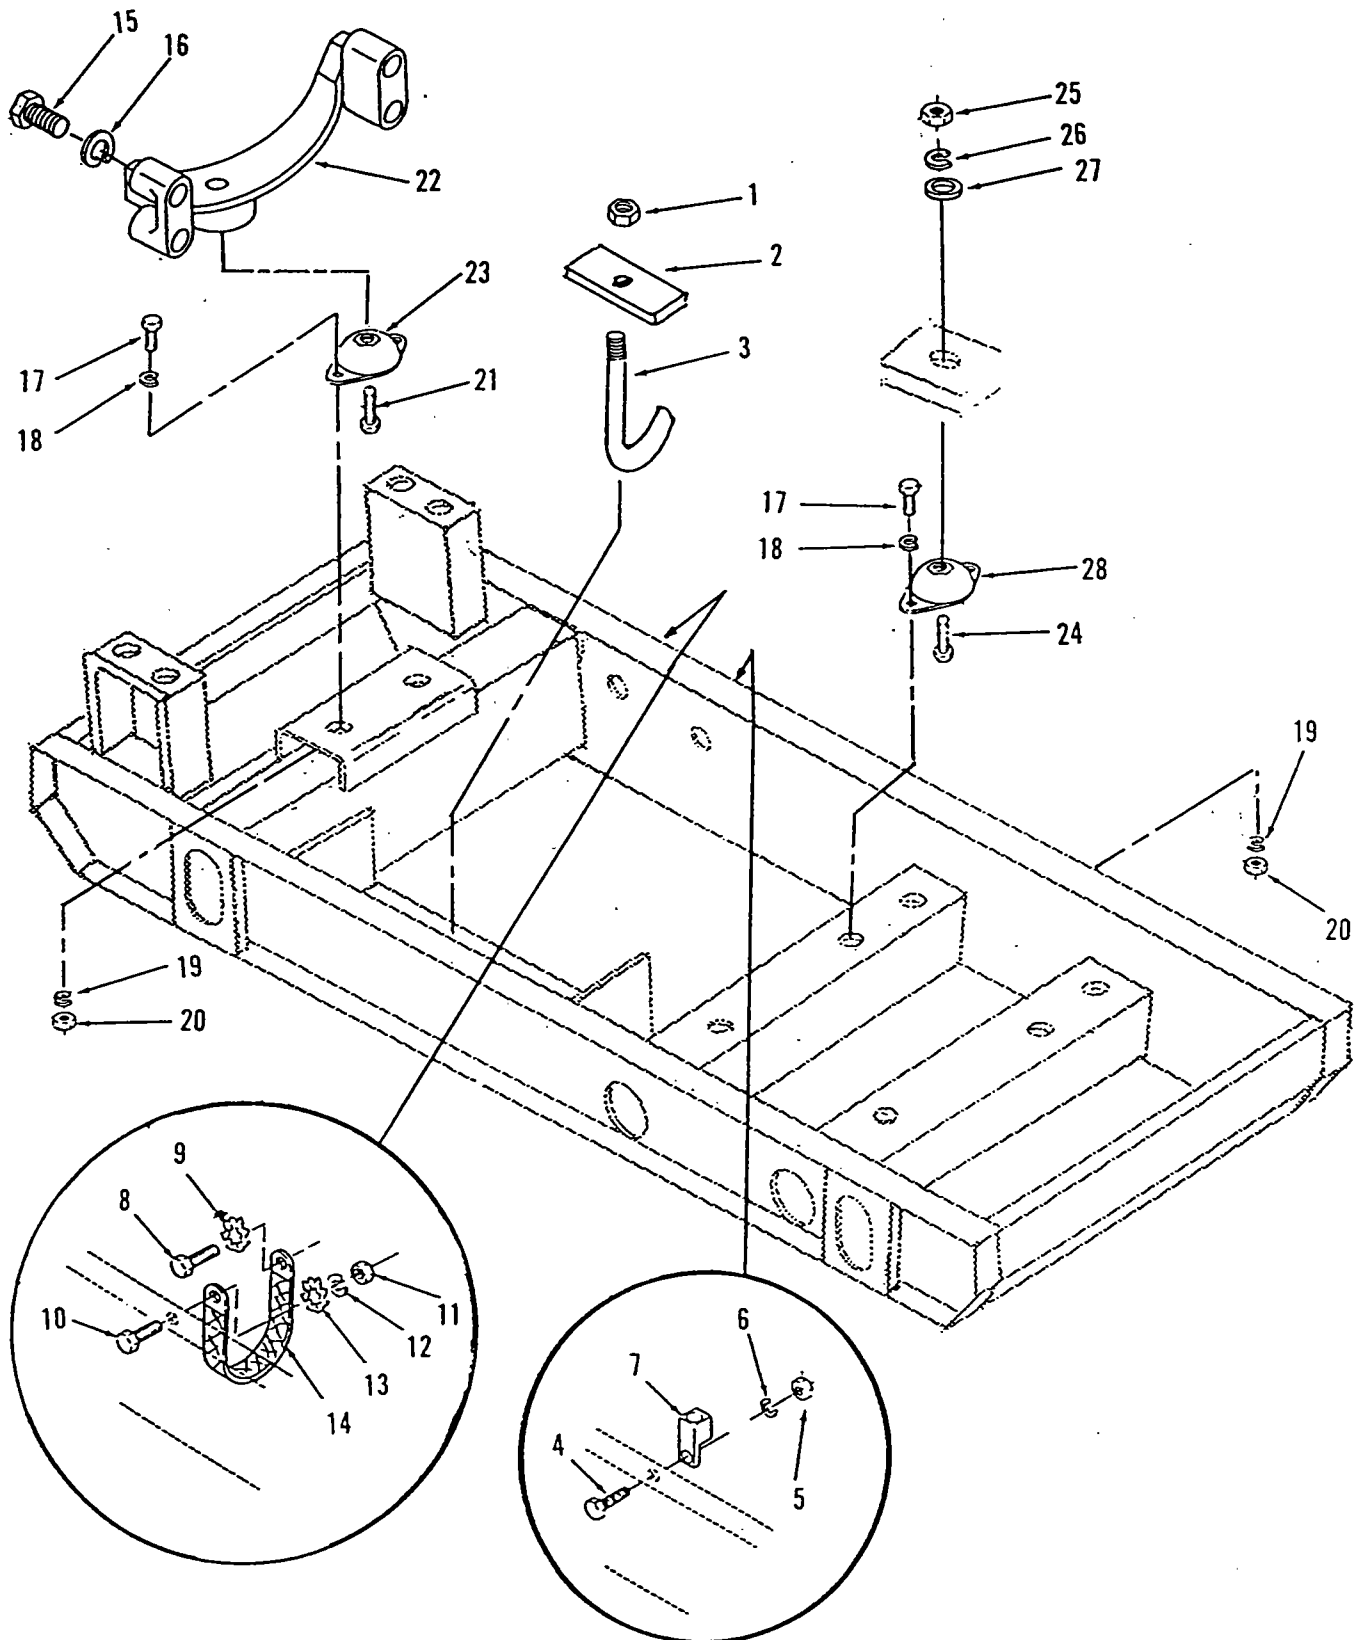

Chassis

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0212	1	Nut, Lock (1/4-20)	15	800-2120	4	Screw, Cap - Hex Head (M12 x 1.75 x 70mm)
2	416-0854	1	Bracket, Mounting - Battery	16	850-2012	5	Washer, Lock (M12)
3	416-0853	1	Holddown, Battery	17	800-0092	10	Screw, Cap - Hex Head (1/2-13 x 1-1/2")
4	800-0026	1	Screw, Cap - Hex Head (5/16-18 x 3/4")	18	850-0060	10	Washer, Lock - Spring (1/2")
5	856-0008	1	Washer, Lock - EIT (5/16)	19	526-0219	10	Washer, Flat (1/2")
6	870-0257	1	Nut, Lock (5/16-18)	20	862-0016	10	Nut, Hex (1/2-13)
7	332-1473	1	Lug, Solderless	21	800-0520	3	Screw, Cap - Hex Head (3/4-10 x 1")
8	800-2111	1	Screw, Cap - Hex Head (M12 x 1.75 x 25mm)	22	403-2567	1	Support, Engine
9	856-0013	1	Washer, Lock - EIT (1/2")	23	402-0568	1	Mount, Vibration
10	800-0092	1	Screw, Cap - Hex Head (1/2-13 x 1-1/2")	24	800-0156	4	Screw, Cap - Hex Head (3/4-10 x 2-1/4")
11	862-0016	1	Nut, Hex (1/2-13)	25	862-0008	4	Nut, Hex (3/4-10)
12	850-0060	1	Washer, Lock - Spring (1/2")	26	850-0079	2	Washer, Lock - Spring (3/4")
13	856-0013	1	Washer Lock - EIT (1/2")	27	526-0238	2	Washer, Flat (3/4)
14	337-0090	1	Strap, Electrical	28	402-0466	2	Mount, Vibration

 
Engine Coolant Heater

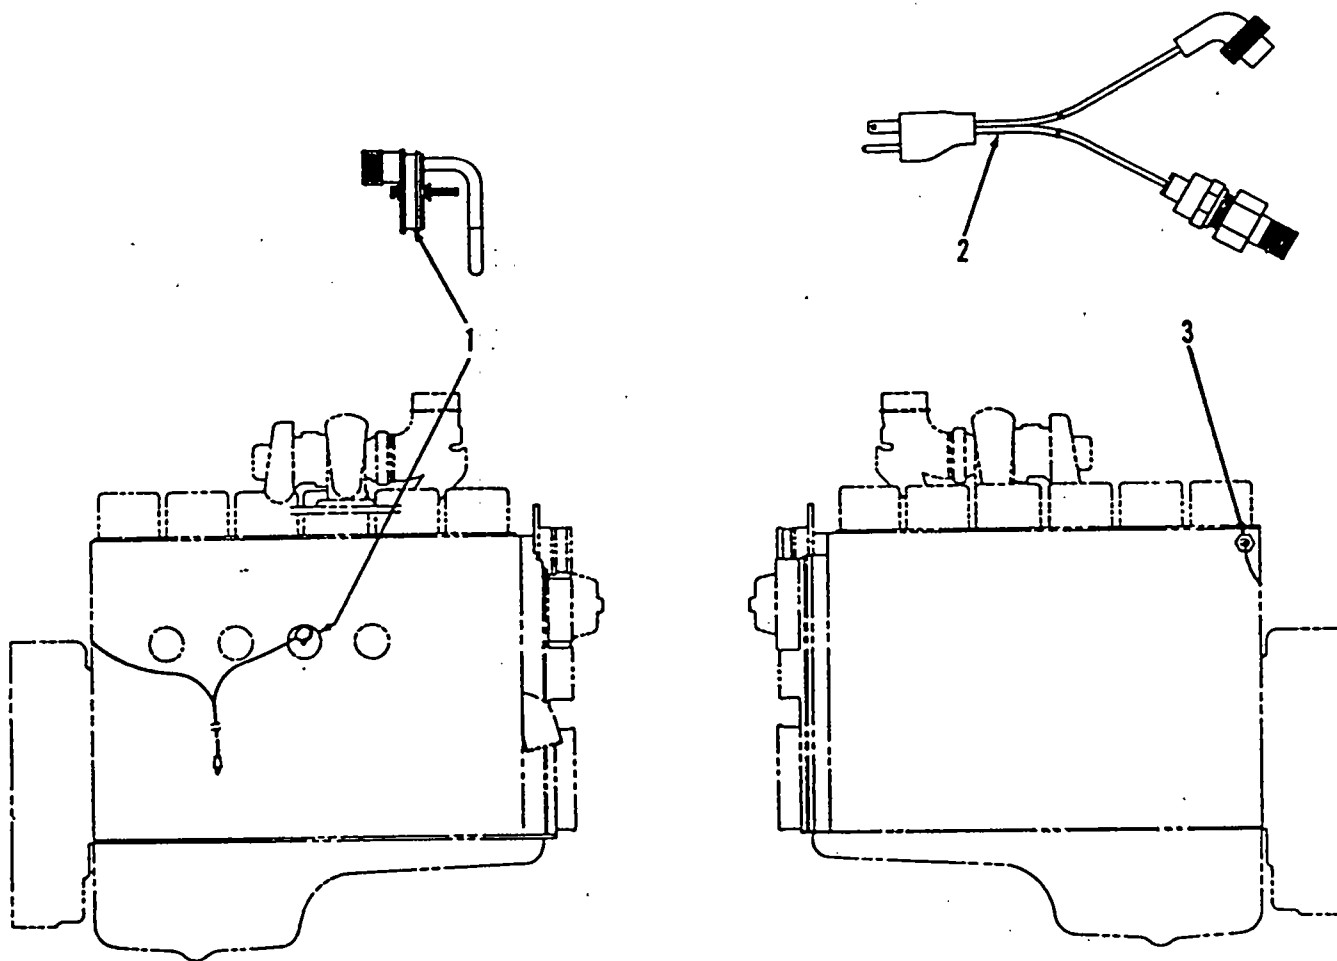

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Heater, Engine Coolant
	333-0291-01	1	120 VAC
	333-0291-02	1	240 VAC

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
2			Cable, Electrical (Includes Thermostat Switch)
	333-0292-01	1	120 VAC
	333-0292-02	1	240 VAC
3	505-0851	1	Bushing, Reducer

 Generator

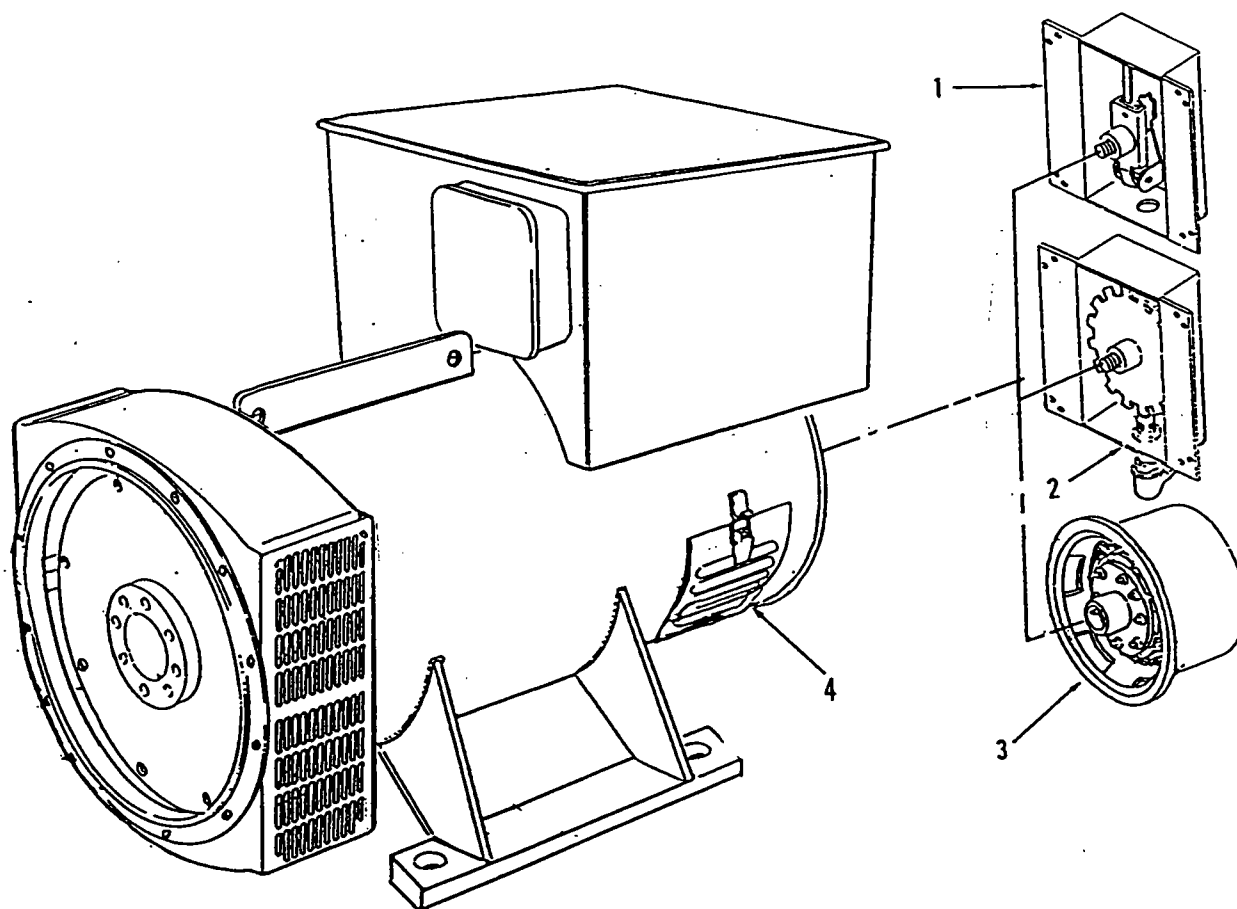


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1		1	Module, Overspeed Switch (See Separate Page for Components)
	821-2045	4	Attaching Parts Screw, Self-locking - Hex Hd (M8 x 1.25 x 16mm)
2		1	Module, Overspeed Sensor (See Separate Page for Components)
	821-2045	4	Attaching Parts Screw, Self-locking - Hex Hd (M8 x 1.25 x 16mm)
3		1	Module, Permanent Magnet Exciter (See Separate Page for Components)
	249-0298	4	Attaching Parts Screw, Cap - Hex Head (M8 x 16mm)
	249-0218	4	Washer, Lock (M8)
	249-0315	4	Clamp, Retaining

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4	Note 1		Generator (See Separate Pages for Stator and Rotor Components)
	800-0156	4	Attaching Parts Generator to Chassis Screw, Cap - Hex Head (3/4-10 x 2-1/2")
	850-0079	4	Washer, Lock - Spring (3/4")
	526-0238	4	Washer, Flat (3/4")
	862-0016	2	Nut, Hex (1/2-13)
	800-2088	12	Adapter to Flywheel Housing Screw, Cap - Hex Head (M10 x 1.5 x 35mm)
	850-2010	12	Washer, Lock - Spring (M10)
	805-0015	8	Drive Disc to Flywheel Bolt - Hex Head (3/8-16 x 3/4", Grade 8)
	526-0124	8	Washer, Flat (1-1/2"OD x 13/32"ID)

Note 1: For replacement Generator please supply the complete Gen Set nameplate and Generator nameplate data. The Replacement Generator will be shipped from closest warehouse or the factory. The replacement will not include PMG Exciter Module, Generator to Flywheel Housing Adapter, Drive Discs and Terminal Box.

 Generator Stator Section

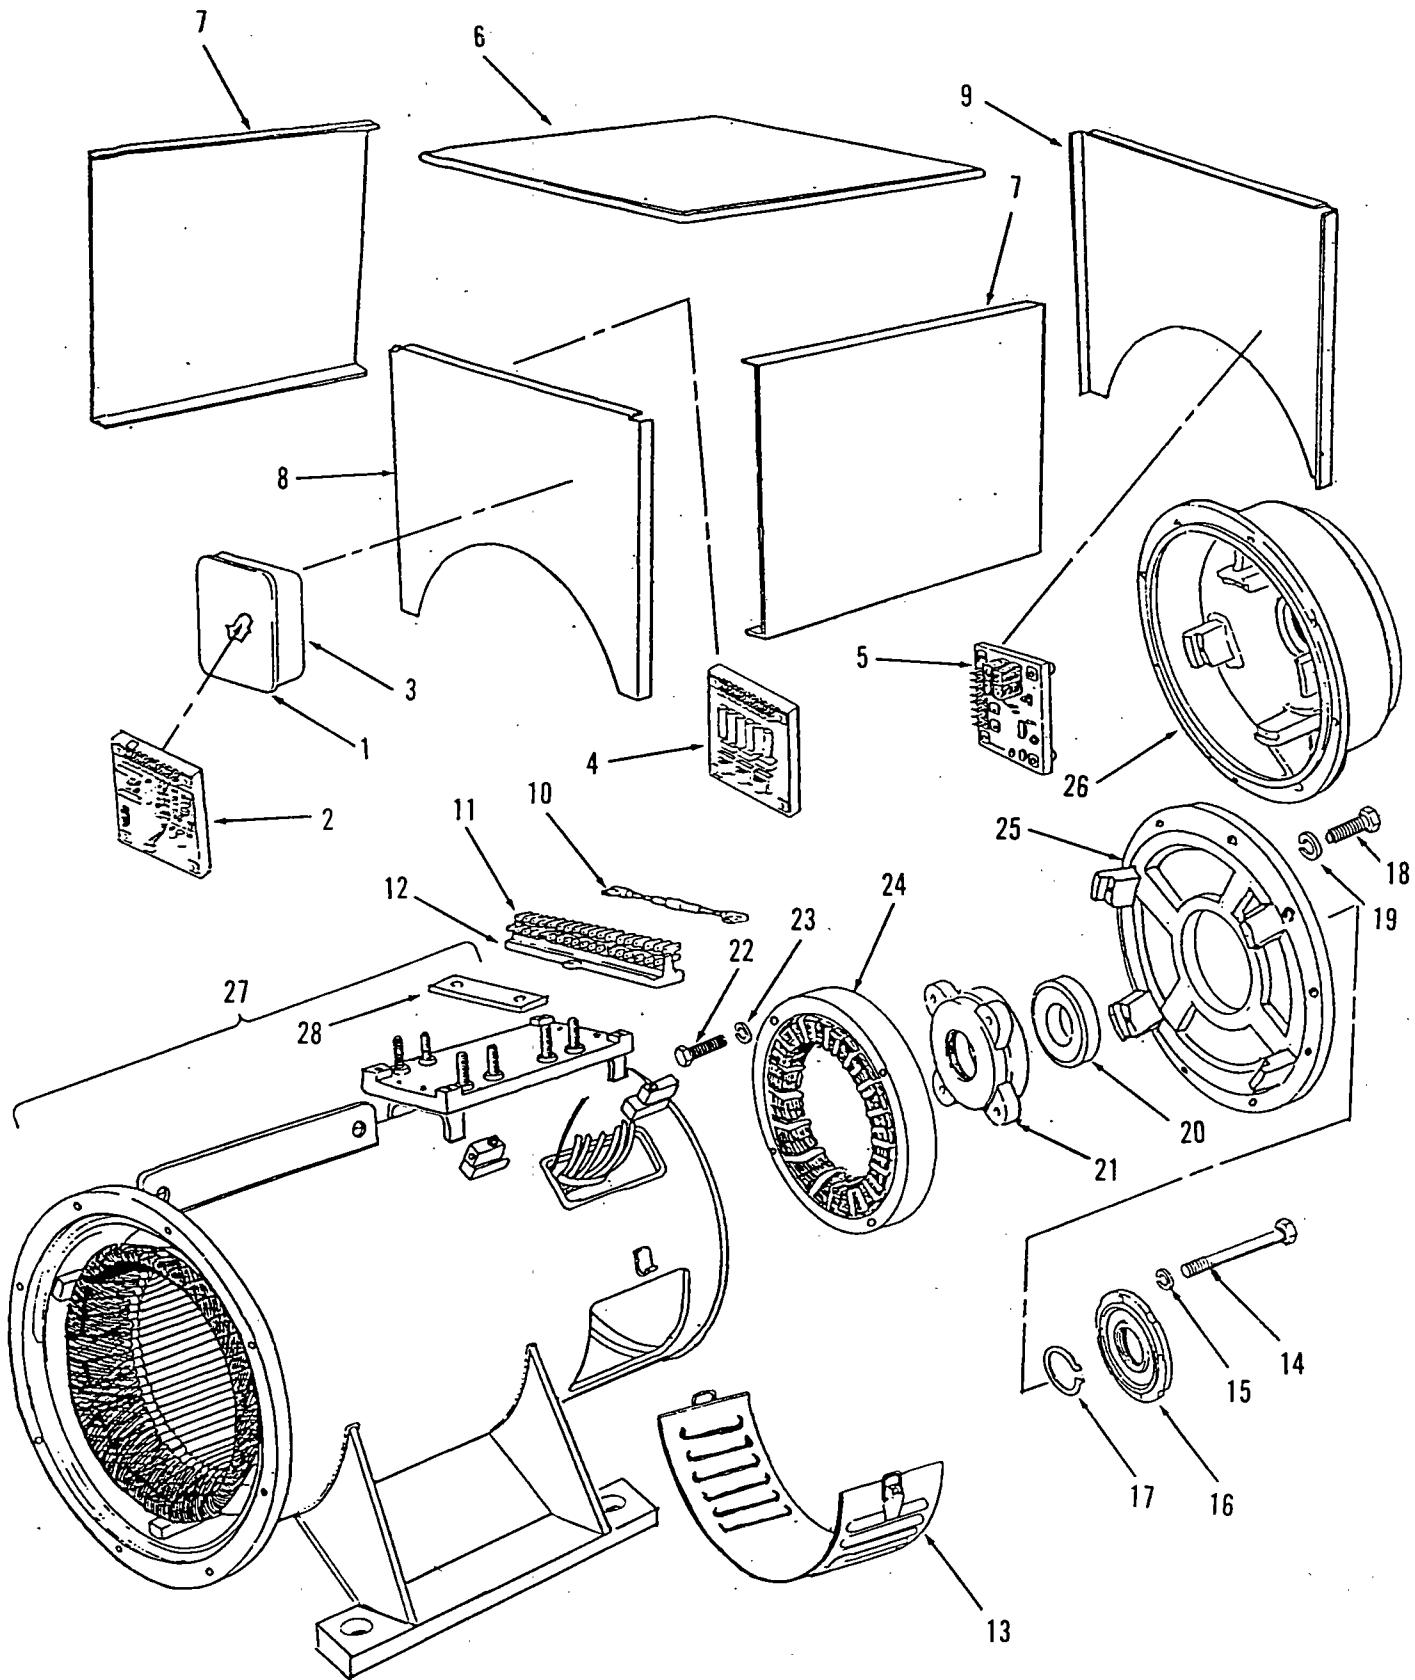


Generator Stator Section

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0401	1	Lid	13	249-0368	2	Grille, Inlet - Air
	249-0304	4	Attaching Parts Screw, Captive	14	249-0302	4	Screw, Cap - Hex Head (M10 x 65mm)
2	305-0779	1	Regulator, Voltage	15	249-0202	4	Washer, Lock - Spring (M10)
	305-0778	1	Standard	16	249-0362	1	Cap, Bearing - Outer
			3 Phase (Used with PMG Exciter & 3 Phase Sensing Module)	17	249-0444	1	Circlip
	249-0398	4	Attaching Parts	18	249-0201	8	Screw, Cap - Hex Head (M10 x 35mm)
3	249-0564	1	Pillar, Threaded	19	249-0202	8	Washer, Lock - Spring (M10)
			Module, 3 Phase Sensing.	20	249-0312	1	Bearing, Ball
	249-0398	4	Attaching Parts	21	249-0361	1	Cap, Bearing - Inner
4	249-0395	1	Pillar, Threaded	22			Screw, Cap - Hex Head (M6 x 55mm) Standard Gen
5	300-3209-02	1	Box		249-0291	4	(M6 x 70mm) Ext Stack Gen
			Module, Frequency Detection	23	249-0212	4	Washer, Lock - Spring (M6)
			Attaching Parts	24			Stator, Exciter
	249-0295	4	Screw, Cap - Hex Head (M5 x 35mm)		249-0334	1	Standard Generator
	249-0288	4	Washer, Plastic (M5)		249-0366	1	Extended Stack Generator
	249-0287	4	Nut, Hex - Nylon (M5)	25	249-0354	1	Bracket, End-Standard Gen
6	NFS	1	Lid	26	249-0355	1	Bracket, End-Extended Stack Gen
7	NFS	2	Panel, Side	27	NFS	1	Stator, Generator (Includes Terminal Studs and Links)
8	NFS	1	Panel, Front				Attaching Parts Stator to Adapter
9	NFS	1	Panel, Rear		249-0201	8	Screw, Cap - Hex Head (M10 x 35mm)
10	249-0428	1	Resistor (Voltage Code H Only)		249-0202	8	Washer, Lock - Spring (M10)
11	249-0289	3	Block, Terminal - AUX	28	249-0404	4	Link, Terminal
12	249-0424	1	Base, Terminal - AUX				

NFS - Not For Sale

 Generator Rotor Section

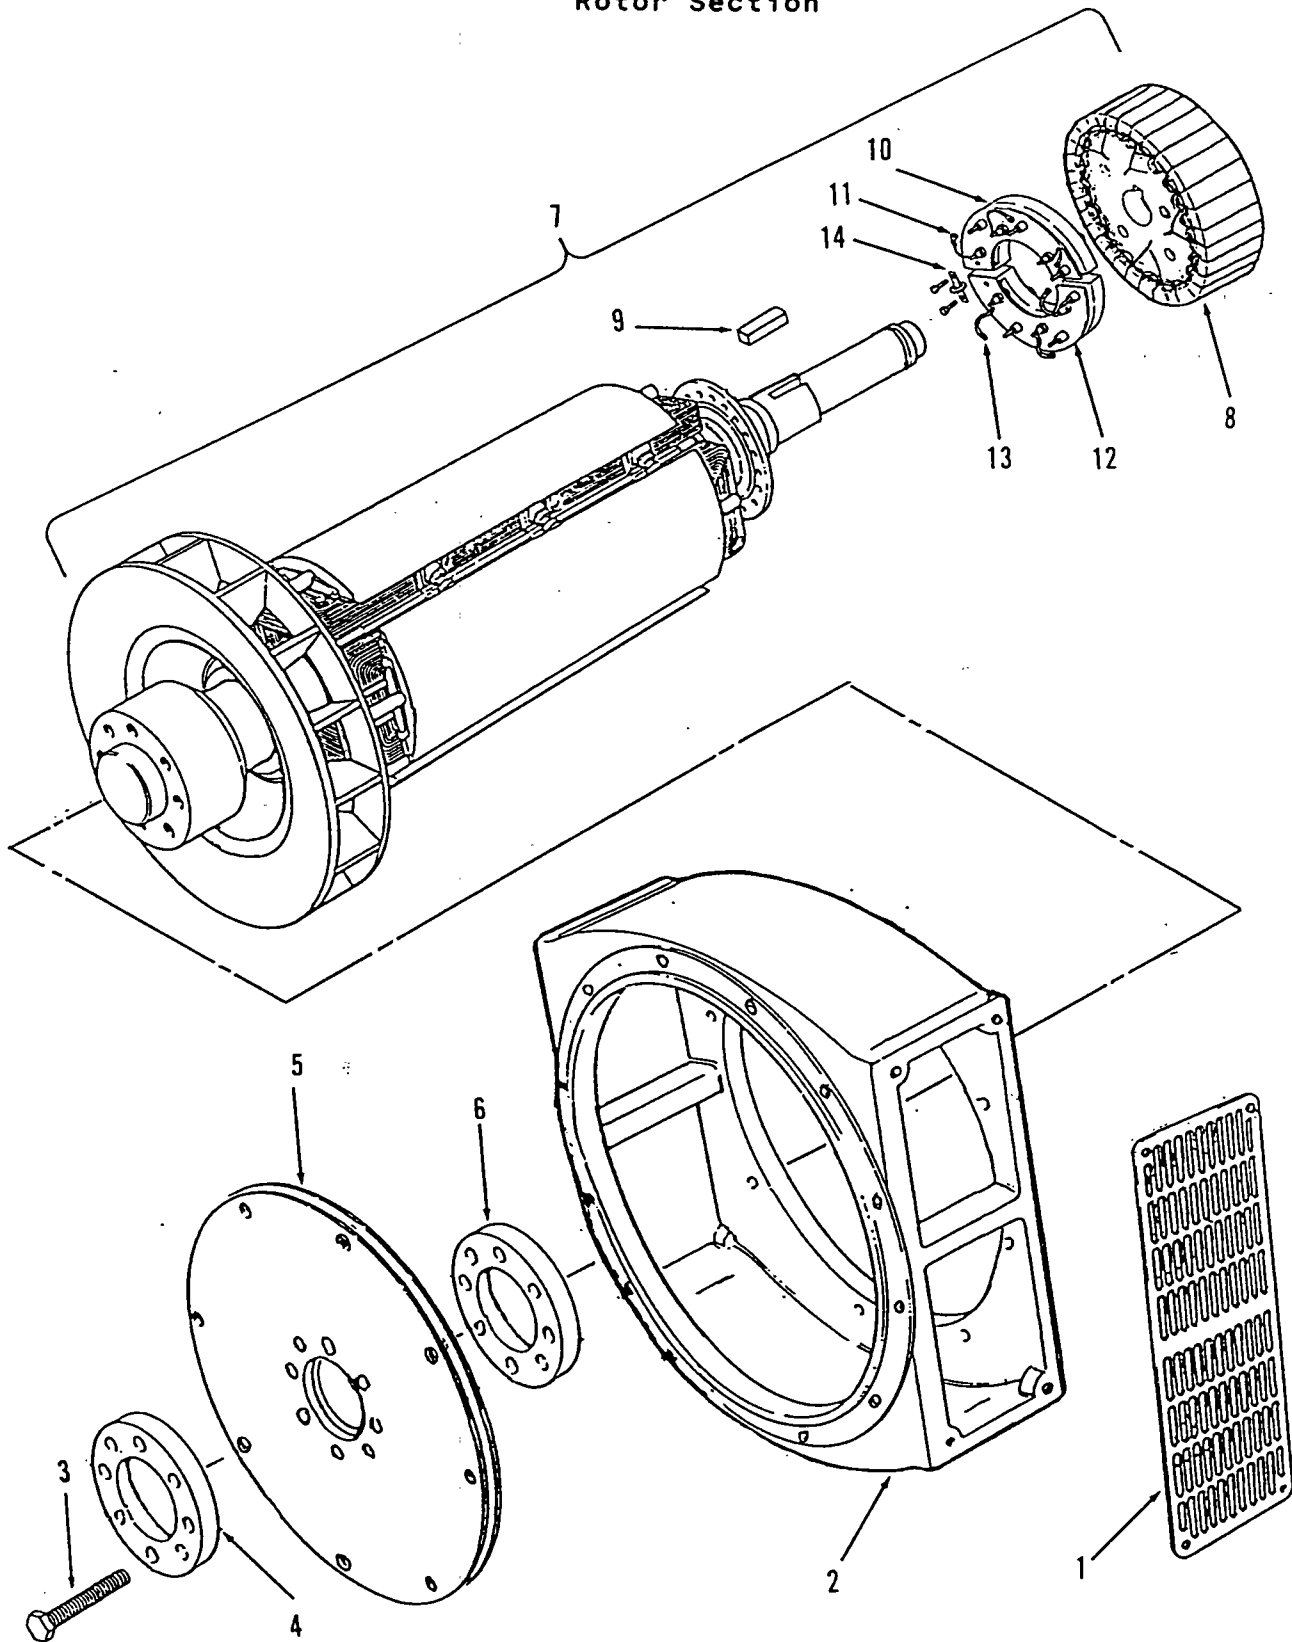


Generator Rotor Section

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0341	2	Screen, Air - Adapter	8	249-0336	1	Rotor, Exciter (Does Not
			Attaching Parts				Include Rectifier Assy)
	249-0294	8	Screw, Cap - Hex Head	8a	249-0367	1	Standard Generator
			(M5 x 12mm)				Rotor, Exciter (Does Not
	249-0307	8	Washer, Lock - Spring (M5)				Include Rectifier Assy)
	249-0308	8	Washer, Flat (M5)				Extended Stack Generators
2	249-0370		Adapter, Generator	9	249-0271	1	Key
3	249-0290	8	Screw, Cap - Hex Head	10	249-0340	1	Rectifier Assy, Forward
			(M16 x 75mm)				(Includes Item 11 Diodes)
4	249-0402	1	Plate, Pressure	11	249-0281	1	Set, Forward Polarity Diode
5	249-0327	3	Disc, Drive	12	249-0341	1	Rectifier Assy, Reverse
6	249-0364	1	Spacer				(Includes Item 13 Diodes)
7	NFS	1	Rotor, Generator (Includes	13	249-0282	1	Set, Reverse Polarity Diode
			Exciter, Key, and Rectifier	14	249-0283	1	Varister
			Assemblies)				Attaching Parts
					249-0294	2	Screw, Cap - Hex Head
							(M5 x 12mm)

NFS - Not For Sale

 
Generator Overspeed Switch

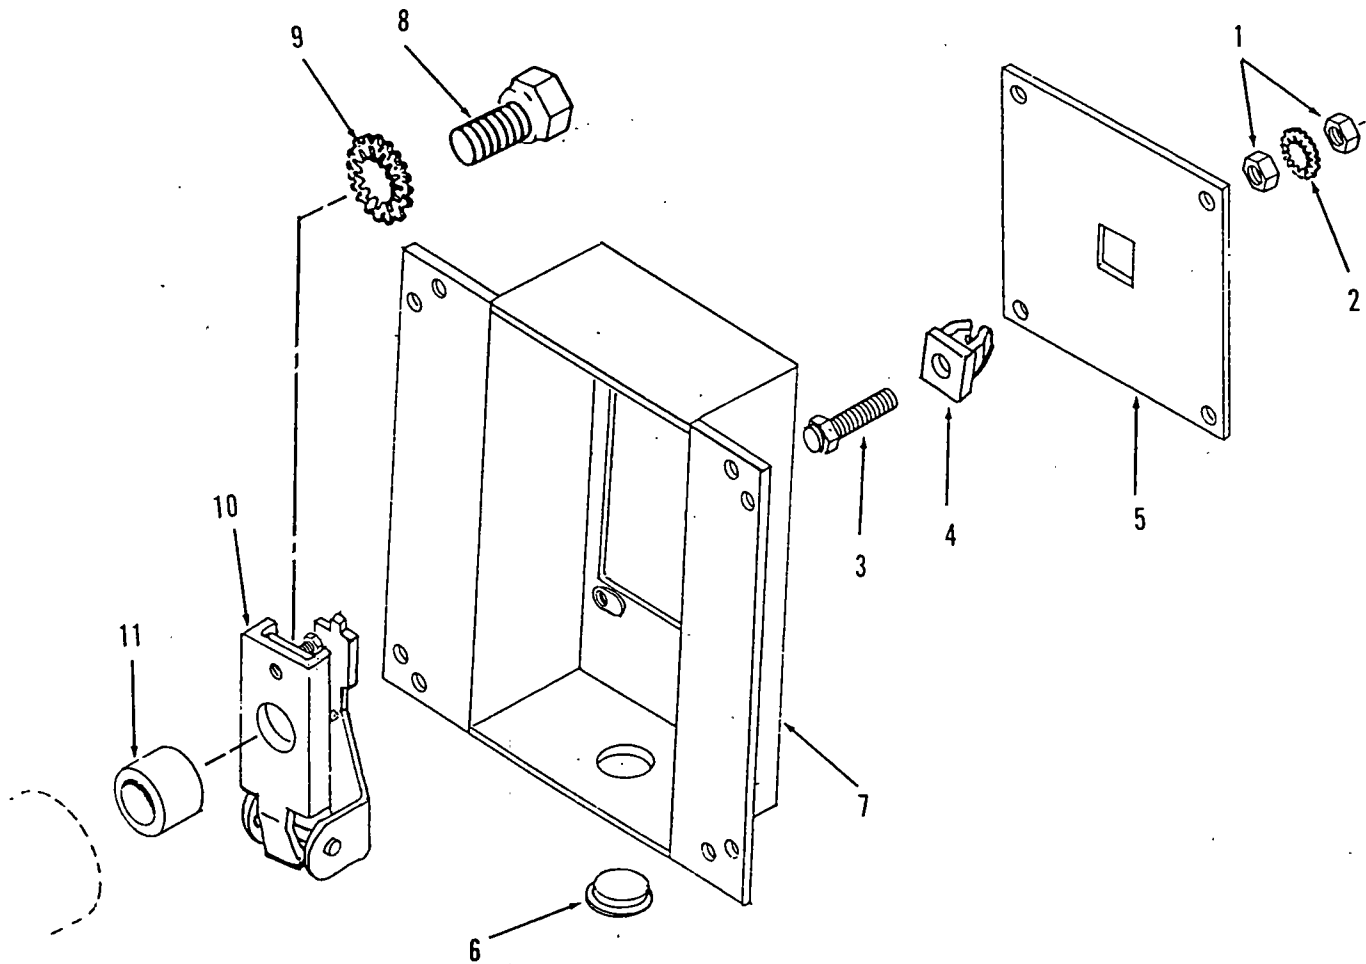

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	862-0001	2	Nut, Hex (1/4-20)
2	853-0013	1	Washer, Lock - EIT (1/4")
3	150-0723	1	Point, Overspeed
4	870-0250	1	Nut, Insulated
5	150-2206	1	Plate, Mounting
	821-0005	4	Screw, Self-locking - Hex (#10-32 x 1/2")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	517-0136	1	Plug, Plastic
7	150-2207	1	Cover, Overspeed Switch
8	718-1058	1	Screw, Cap - Hex Head (M10 x 1.5 x 45mm)
9	856-0010	1	Washer, Lock - EIT (3/8")
10	150-0956	1	Switch, Overspeed
11	370-4032	1	Spacer, Sleeve

 
Generator Overspeed Sensor

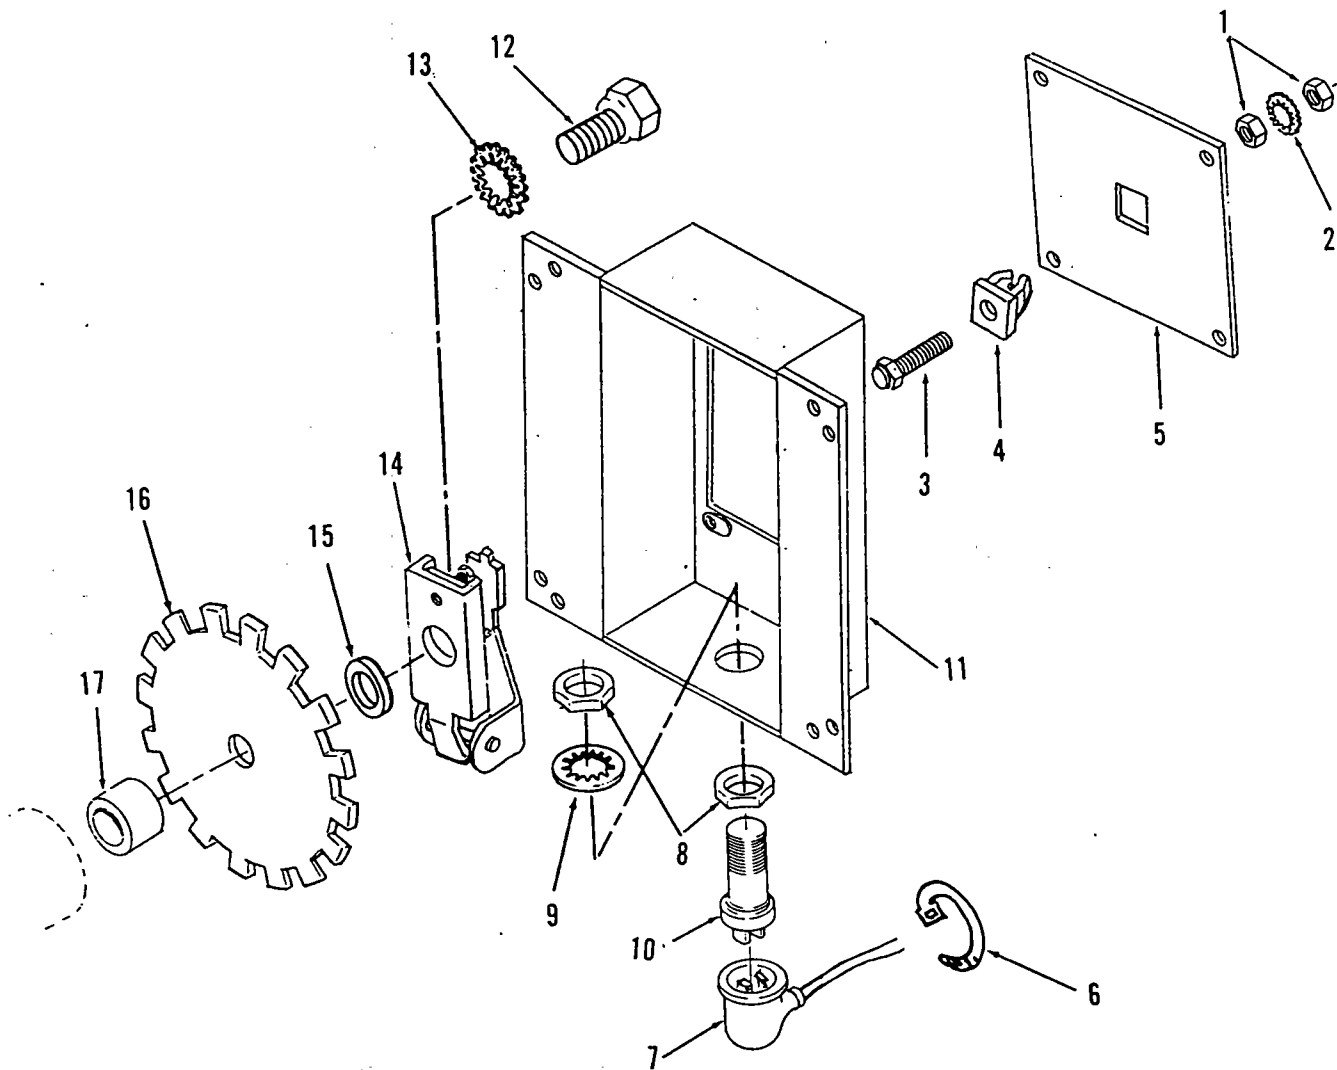

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	862-0001	2	Nut, Hex (1/4-20)
2	853-0013	1	Washer, Lock - EIT (1/4")
3	150-0723	1	Point, Overspeed
4	870-0250	1	Nut, Insulated
5	150-2206	1	Plate, Mounting
	821-0005	4	Screw, Self-locking - Hex (#10-32 x 1/2")
6	332-1445	5	Tie, Cable
7	338-2189-02	1	Harness, Wiring
8	868-0011	2	Nut, Jam - Hex (3/4-16)


REF NO.	PART NO.	QTY USED	PART DESCRIPTION
9	854-0031	1	Washer, Lock - IT (3/4")
10	150-1406	1	Sensor, Speed
11	150-2207	1	Cover, Overspeed Switch
12	718-1058	1	Screw, Cap - Hex Head (M10 x 1.5 x 45mm)
13	856-0010	1	Washer, Lock - EIT (3/8")
14	150-0956	1	Switch, Overspeed
15	370-4031	1	Spacer, Sleeve
16	150-2204	1	Wheel - Speed Sensor
17	370-4032	1	Spacer, Sleeve

 Generator Permanent Magnet Exciter

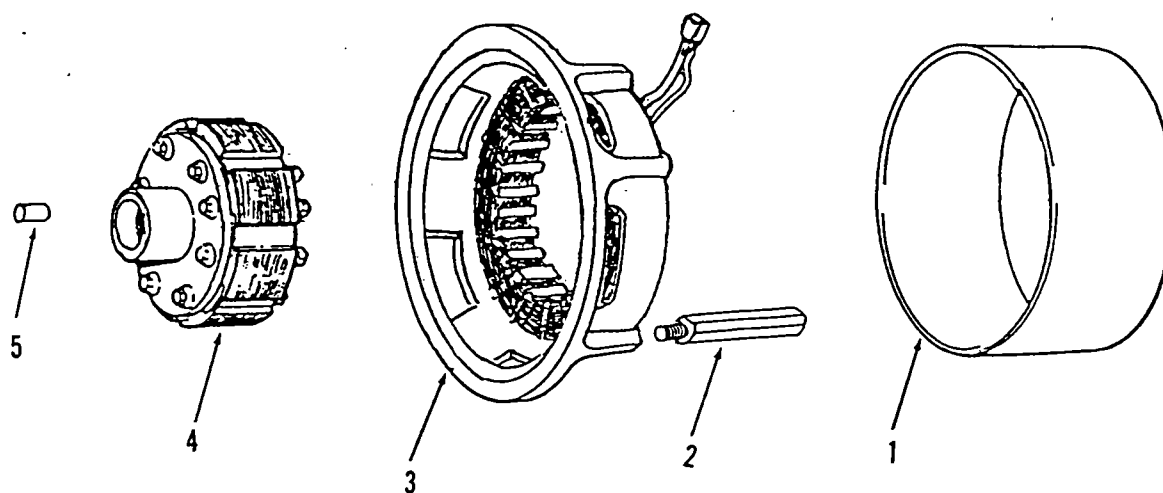


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0422	1	Cover	3	249-0426	1	Stator, Exciter with Frame
	249-0294	3	Screw, Cap - Hex Head (M5 x 12mm)	4	249-0427	1	Rotor, Exciter
	249-0307	3	Washer, Lock (M5)		249-0399	1	Bolt
2	249-0423	3	Pillar, Threaded		249-0202	1	Washer, Lock (M10)
				5	249-0313	1	Pin, Dowel

 Control Heater

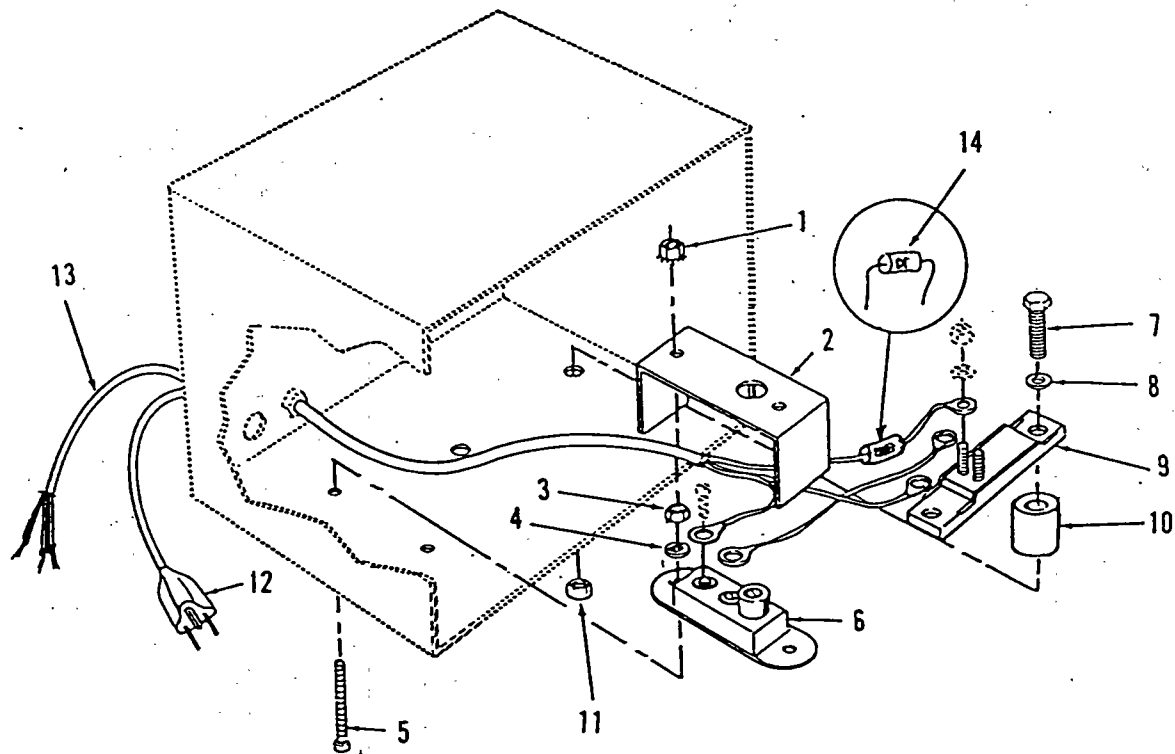

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0183	2	Nut, Self-locking - Hex (#6-32)	9	333-0151	1	Heater, Electrical 120VAC
2	301-1886	1	Cover		333-0378	1	240VAC
3	860-0006	1	Nut, Hex (#6-32)	10	130-1107	2	Spacer
4	854-0006	2	Washer, Lock - IT (#6)	11	870-0257	2	Nut, Self-locking - Hex (5/16-18)
5	812-0070	2	Screw, Machine - Round Head (#6-32 x 1-1/4")	12	335-0161	1	Cable, Electrical (120VAC Application)
6	309-0128	1	Thermostat, Adjustable	13	338-2121	1	Harness Wiring with Diode, less plug (240VAC Application)
7	800-0034	2	Screw, Cap - Hex Head (5/16-18 x 2-1/4")	14	357-0013	1	Diode
8	526-0113	2	Washer, Flat (5/16")	15	98-3232	1	Decal, Warning - Shock Hazard (Not Illustrated)

 Generator Set Control

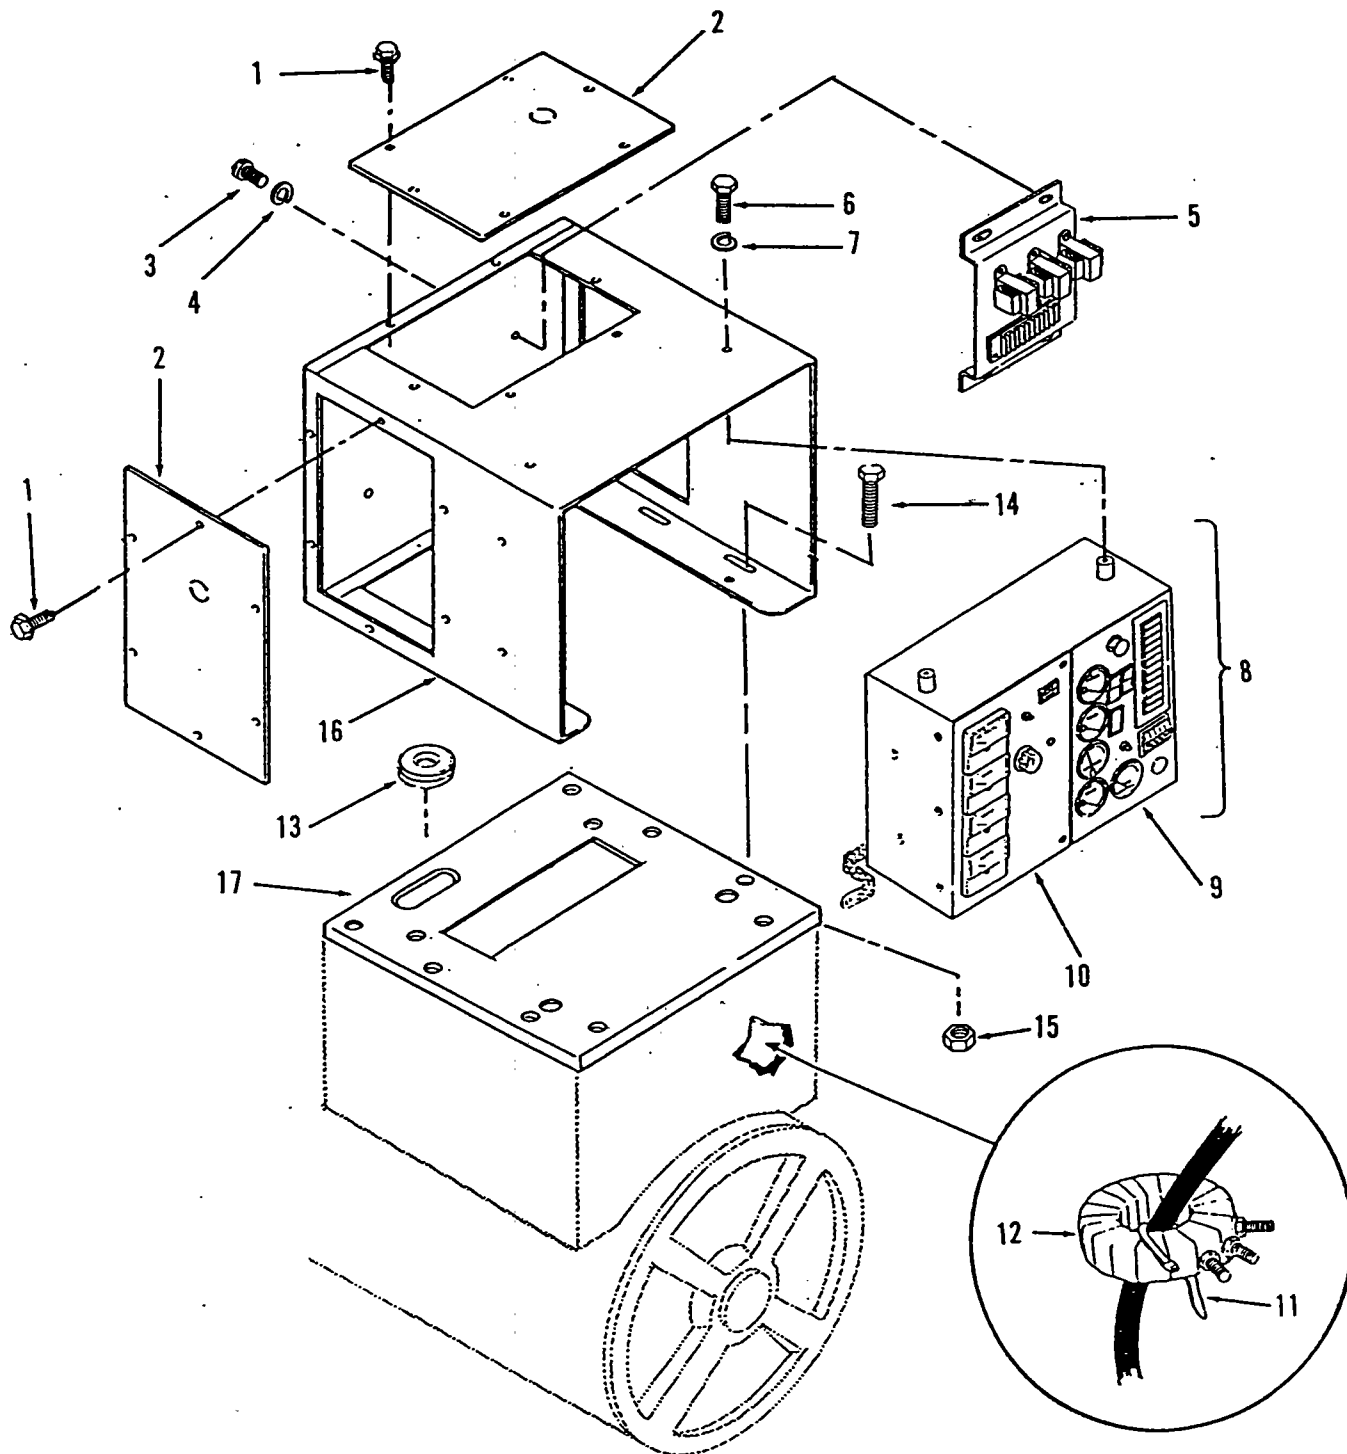


Generator Set Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0005	18	Screw, Self-locking - Hex (#10-32 x 1/2")	10	NFS	1	Control, Generator (See Separate Page for Components)
2	NFS	3	Panel, Box - Control	11	332-0941	6	Tie, Cable
3	812-0156	4	Screw, Machine - Round Head (1/4-20 x 1/2")	12			Transformer, Current - Reconnectible
4	850-0040	4	Washer, lock - Spring (1/4")		302-1794-02	3	80kW Voltage Code H
5	NFS	1	Transformer Assy, Potential (See Separate Page for Components)		302-1794-03	3	65 & 80kW Voltage Code L, 65 & 80kW Voltage Code Z, 100kW Voltage Code H.
6	800-0051	4	Screw, Cap - Hex Head (5/16-18 x 1/2")		302-1794-04	3	85 & 100kW Voltage Code L, 85 & 100kW Voltage Code Z.
7	850-0045	4	Washer, Lock - Spring (5/16")	13	508-0051	1	Grommet
8	NFS	1	Control, Set (See Item 9 & 10 for Components)	14	821-0018	6	Screw, Self-locking - Hex Head (1/4-20 x 5/8")
9	NFS	1	Control, Engine (See Separate Page for Components)	15	870-0212	6	Nut, Self-locking - Hex (1/4-20)
				16	NFS	1	Housing, Control
				17	NFS	1	Adapter, Housing to Terminal Box

NFS - Not For Sale

 Engine Control

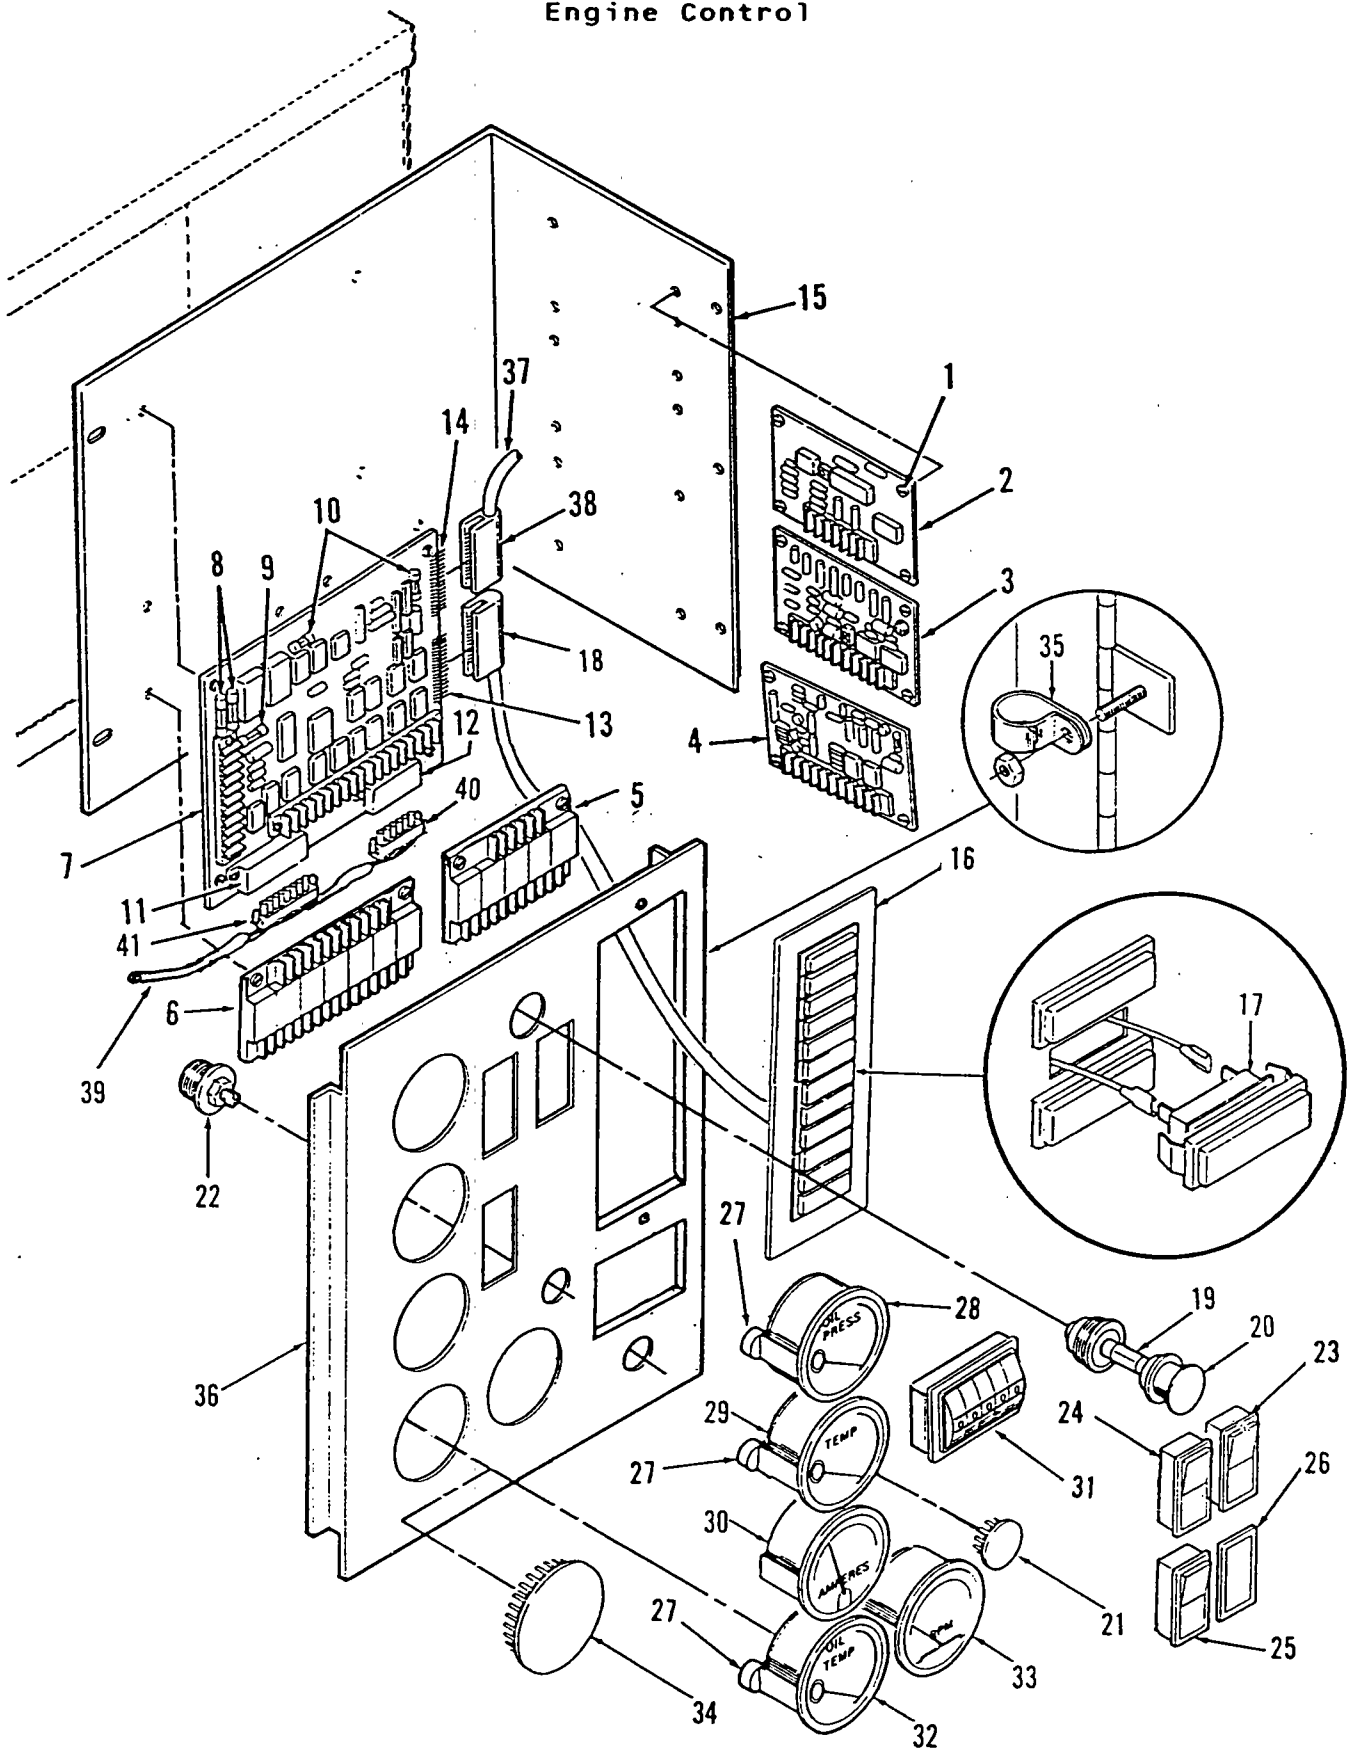


Engine Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815-0544	24	Screw, Machine - Round Head With IT Lock Washer (#6-32 x 1/2")	17	322-0369-02	12	Lamp, Incandescent - 1/3 Watt 28 VDC
2	300-2899	1	Board, Time Delay, Start/Stop - 24 VDC (A15)	18	323-1310	1	Housing, 13 Pin (J3)
3			Board, Magnetic Sensor, Start Disconnect/Over Speed Sensor (A16)	19	322-0017	1	Contact, Pin
	300-2903	1	Standard	20	322-0361	1	Lamp, Incandescent - 28 VDC (DS11)
	300-2904	1	Precision	21	517-0131	1	Holder, Lamp
4	300-2906	1	Board, Over-Under Voltage Sensor - 24 VDC (A17)	22	303-0280	1	Plug, Button
5	300-2856	1	Board, Relay - 24 VDC (A13)	23	308-0785	1	Potentiometer (R11)
6	300-2863	1	Board, Relay - 24 VDC (A14)	24	308-0784	1	Switch, Push (S11)
7			Board, Engine Monitor (A11) (Includes Fuses and Connectors)	26	301-6257	1	Switch, Push (S12)
	300-2808	1	24 VDC, 2 Light	27	193-0250	1	Cover
	300-2812	1	24 VDC, 12 Light	28	193-0352	3	Resistor, Gauge (R12)
8	321-0270	2	Fuse, Cartridge - 20 Amp (F1, F2)	29	193-0351	1	Gauge, Pressure - Oil (M11)
9	321-0231	1	Fuse, Cartridge - 15 Amp (F3)	30	302-1790	1	Gauge, Temperature - Water (M12)
10	321-0094	2	Fuse, Cartridge - 5 Amp (F4, F5)	31	302-0885	1	Ammeter (M13)
11	323-1305	1	Connector, 8 Pin (P1)		815-0385	2	Meter, Totalizing - Time (M14)
12	323-1303	1	Connector, 6 Pin (P2)		870-0183	2	Screw, Machine - Round Head (#6-31 x 1/2")
13	323-1309	1	Connector, 13 Pin (P3)	32	193-0330	1	Nut, Hex with ET Lockwasher (#6-32)
14	323-1307	1	Connector, 12 Pin (P4)	33	302-1715	1	Gauge, Temperature - Oil (M15)
15	NFS	1	Bracket, Mounting	34	517-0221	1	Tachometer (M16)
	821-0004	4	Screw, Self-locking - Hex Hd (#10-32 x 5/16")	35	322-0052	1	Plug, Button
16			Module, Indicator - Fault (Includes Replaceable Lamps, Harness with Connector Housing & Contact Pins)(A12)		870-0131	1	Clamp, Loop
	322-0358-02	1	24 VDC, 2 Light	36	NFS		Nut, Hex with ET Lockwasher (#10-32 x 1/2")
	322-0360-02	1	24 VDC, 12 Light	37	338-1817	1	Door, Control
	815-0385	2	Screw, Machine - Round Head (#6-32 x 1/2")	38	323-1308	1	Harness, Wiring - DC Meter (Includes Connector & Pins)
	870-0183	2	Nut, Self-locking - Hex (#6-32)	39	323-1302	12	Housing, 12 Pin (J4)
					323-1302	12	Contact, Pin
					338-2171	1	Harness, Wiring - Control to Engine (Includes Connectors and Pins)
				40	323-1304	1	Housing, 6 Pin
					323-1200	6	Contact, Pin
				41	323-1306	1	Housing, 8 Pin
					323-1200	8	Contact, Pin

NFS - Not For Sale

 Generator Control

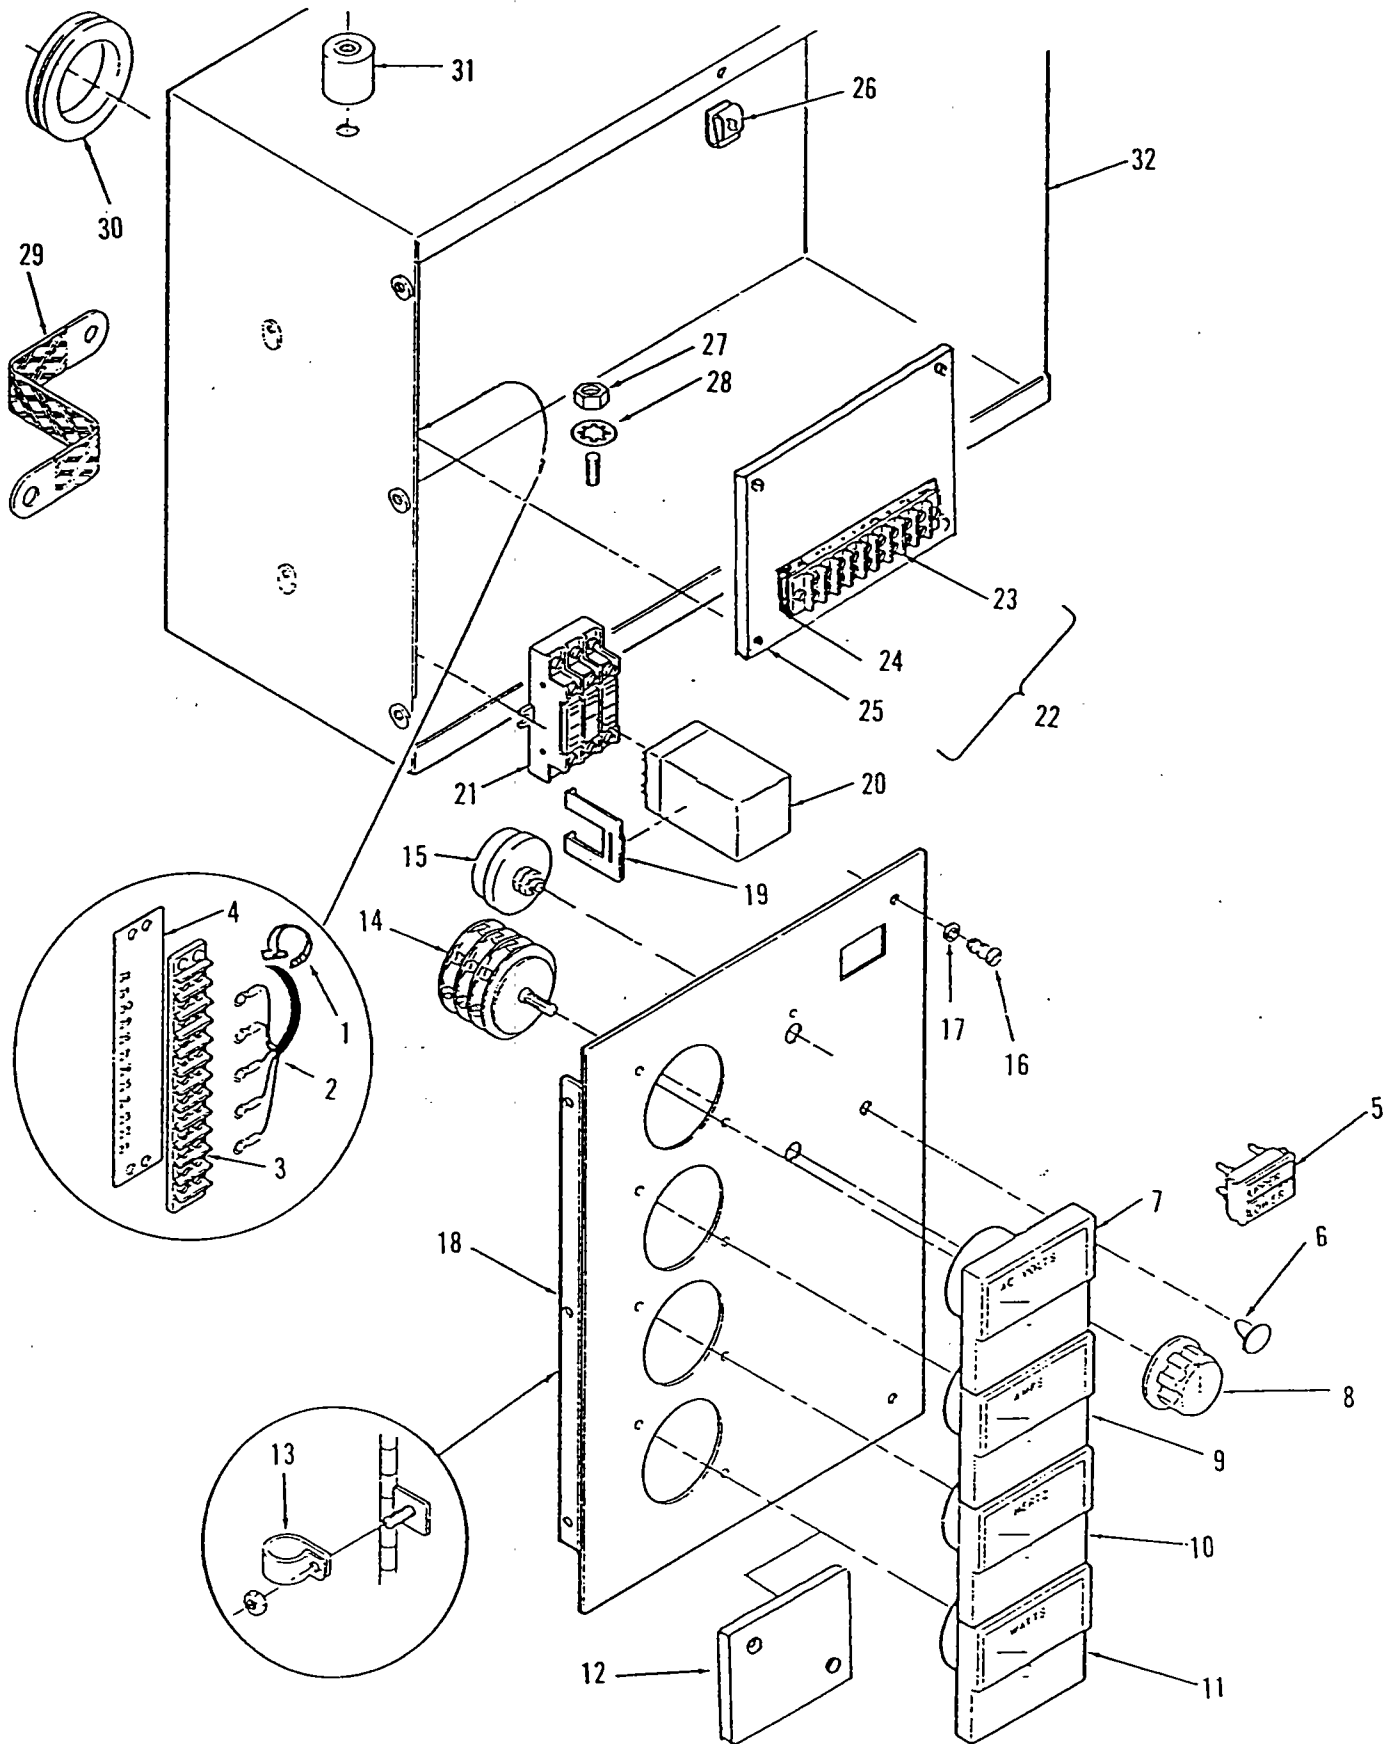


Generator Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-1445	2	Tie, Cable	14	308-0284	1	Switch, Rotary (S21)
2			Harness, Wiring	15	303-0261	1	Rheostat (R21)
	338-1818	1	Control with Meters (Includes Terminal Block)	16	406-0334	2	Clip, Fastener
	338-1853	1	Control without Meters	17	406-0333	2	Stud, Fastener
	812-0065	2	Screw, Machine - Round Head (#6-32 x 5/8")	18	NFS	1	Door, Control
3	332-0607	1	Block, Terminal (TB1)		821-0004	3	Screw, Self-locking - Hex (#10-32 x 5/16")
4	332-2723	1	Strip, Marker	19	307-1987	2	Clip, Relay
5	322-0363	1	Light, Indicator - Dual (DS21, DS22)	20	307-1056	1	Relay, 24 VDC (K21)
6	517-0131	1	Plug, Button	21	323-0804	1	Socket, Relay
7			Voltmeter (M21)		815-0544	2	Screw, Machine - Round Head with IT Lock Washer (#6-32 x 1/2")
	302-1148	1	Dual Scale 0-300/0-600V	22	NFS	1	Terminal Board Assembly
	302-1753	1	Single Scale 0-750V		812-0065	4	Screw, Machine - Round Head (#6-32 x 5/8")
8	303-0032	1	Knob	23	332-0751	1	Block, Terminal
9			Ammeter (M22)		812-0066	2	Screw, Machine - Round Head (#6-32 x 3/4")
			Single Scale Voltage Code H	24	332-0853	1	Strip, Marker
	302-1691	1	80kW, 0-100 Amp	25	NFS	1	Plate
	302-1805-02	1	100kW, 0-150 Amp	26	406-0332	2	Receptacle, Fastener
			Dual Scale Volt. Codes L & Z	27	871-0015	1	Nut, Hex (1/4-20)
	302-1684	1	65 & 80kW, 0-150/0-300 Amp	28	853-0013	1	Washer, Lock - ET (1/4")
	302-1685	1	85 & 100kW, 0-200/0-400 Amp	29	337-0049	1	Strap, Electrical (Ground)
10	302-1720	1	Meter, Frequency (M23)		800-0024	1	Screw, Cap - Hex Head (5/16-18 x 1/2")
11		1	Wattmeter (M24) (See Separate page for Components)		856-0008	1	Washer, Lock - EIT (5/16")
12	NFS	1	Cover, Meter Hole	30	508-0051	1	Grommet
	815-0385	2	Screw, Machine - Round Head, Black (#6-32 x 1/2")	31	402-0527	2	Mount, Vibration
	870-0183	2	Nut, Hex with ET Lockwasher (#6-32)		800-0051	4	Screw, Cap - Hex Head (5/16-18 x 1/2")
13	332-0052	1	Clamp, Loop		850-0045	4	Washer, Lock - Spring (5/16")
	870-0131	1	Nut, Self-locking - Hex with ET Lock Washer (#10-32)	32	NFS	1	Box, Control

NFS - Not For Sale

 
Wattmeter

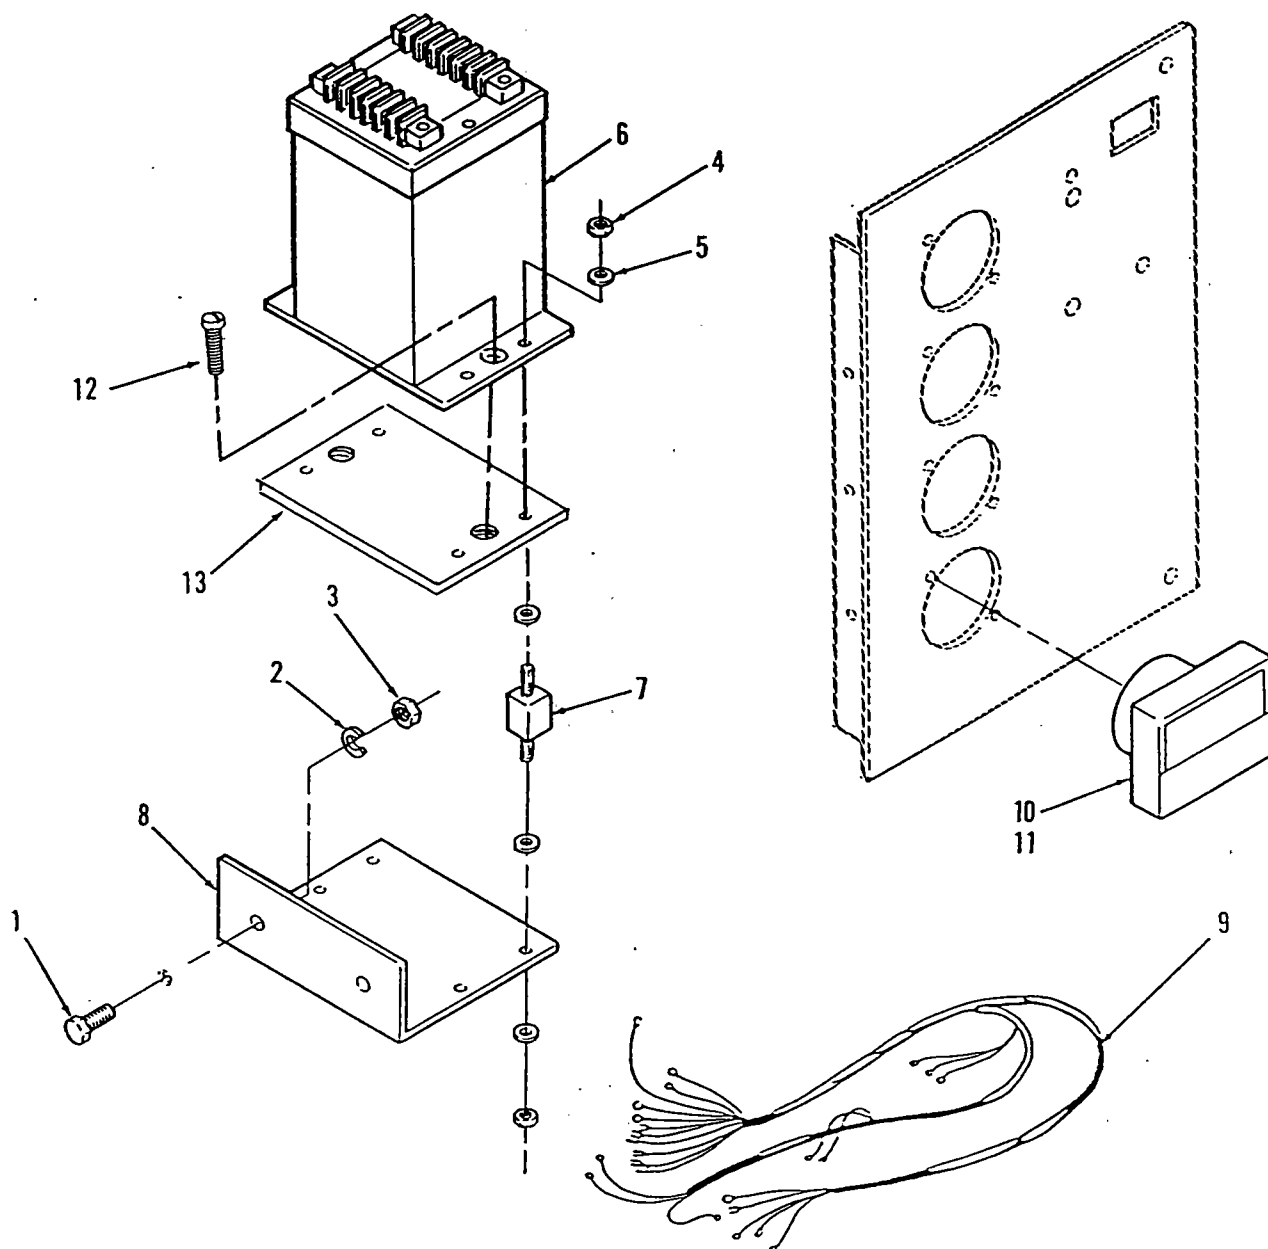

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0017	2	Screw, Cap - Hex Head (5/16-18 x 1/2")
2	850-0045	2	Washer, Lock (5/16)
3	862-0014	2	Nut, Hex (5/16-18)
4	860-0008	8	Nut, Hex (#8-32)
5	856-0002	16	Washer, Lock - ET (#8)
6	302-1833-01	1	Transducer, Watt
7	402-0354	4	Mount, Shock

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
8	301-6987	1	Bracket, Mounting
9	338-1936	1	Harness, Wiring
10	302-1722	1	Wattmeter (Less Dial)
11	302-1721-04	1	Dial, Wattmeter
	302-1721-05	1	DNDA, DWDA
12	813-0102	2	DNDB, DWDB
			Screw, Machine - Round Head (#10-32 x 3/8")
13	319-0030	1	Plate, Support - Transducer

 Potential Transformer

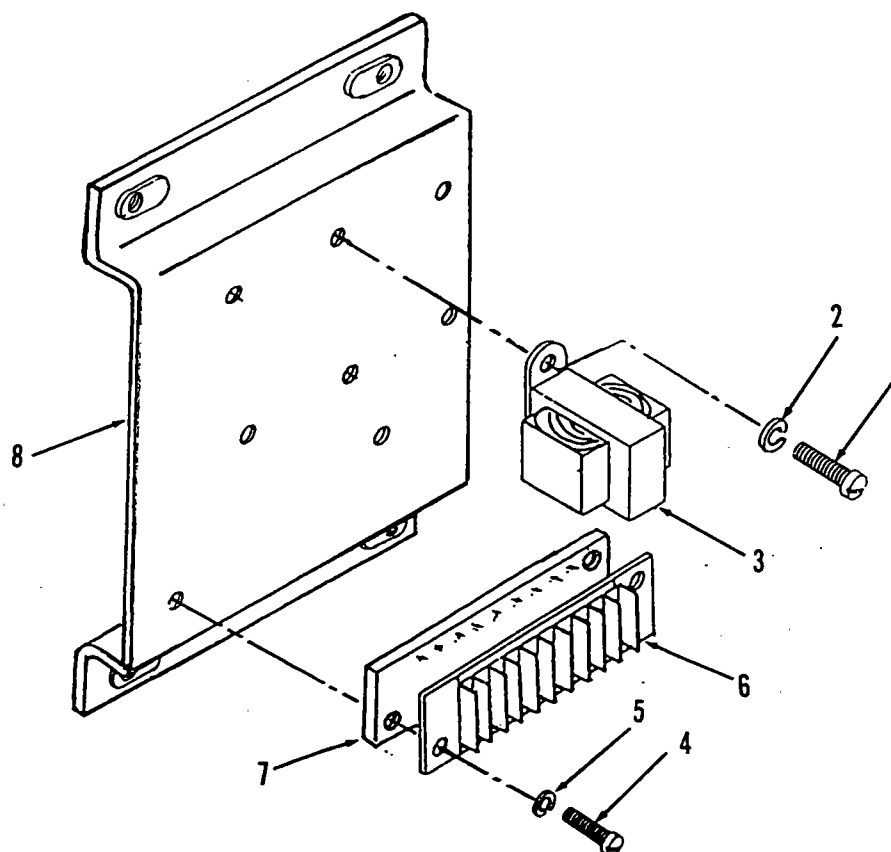

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	812-0079	6	Screw, Machine - Round Head (#8-32 x 1/2")
2	850-0025	6	Washer, Lock - Spring (#8)
3	315-0642	3	Transformer, Potential
4	812-0077	2	Screw, Machine - Round Head (#8-32 x 3/8")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
5	850-0025	2	Washer, Lock - Spring (#8)
6	332-2562	1	Block, Terminal (10 Place)
7	332-2563	1	Strip, Marker
8	NFS	1	Bracket, Mounting

NFS - Not For Sale

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
98-3232	21	151-0632	7	249-0367	17	305-0779	15
102-1147	3	154-2253	4	249-0368	15	307-1056	27
102-1237	3	155-2062-03	4	249-0370	17	307-1987	27
115-0025	3	155-2175	4	249-0395	15	308-0284	27
130-1107	21	155-2263	4	249-0398	15	308-0784	25
130-3114	9	187-0146	3	249-0399	20	308-0785	25
130-3117	9	193-0244	3	249-0401	15	309-0128	21
130-3121	9	193-0250	25	249-0402	17	309-0169	3
130-3124	9	193-0330	25	249-0404	15	309-0269	3
130-3125	9	193-0351	25	249-0422	20	309-0272	3
130-3126	9	193-0352	25	249-0423	20	309-0553	3
130-3127	9	193-0353	3	249-0424	15	309-0554	3
130-3278	9	193-0375	3	249-0426	20	315-0642	29
140-0078	5	249-0201	15	249-0427	20	319-0030	28
140-1260	5	249-0202	15	249-0428	15	321-0094	25
140-1260	6	249-0202	20	249-0444	15	321-0231	25
140-1435	6	249-0212	15	249-0564	15	321-0270	25
140-1548	5	249-0218	13	300-2808	25	322-0017	25
140-1548	6	249-0271	17	300-2812	25	322-0052	25
140-1599	6	249-0281	17	300-2856	25	322-0358-02	25
140-2147	5	249-0282	17	300-2863	25	322-0360-02	25
140-2148	5	249-0283	17	300-2899	25	322-0361	25
140-2148	6	249-0287	15	300-2903	25	322-0363	27
140-2149	6	249-0288	15	300-2904	25	322-0369-02	25
140-2150	6	249-0289	15	300-2906	25	323-0804	27
140-2152	6	249-0290	17	300-3209-02	15	323-1200	25
140-2153	5	249-0291	15	301-1886	21	323-1302	25
140-2153	6	249-0294	17	301-6257	25	323-1303	25
140-2154	5	249-0294	20	301-6987	28	323-1304	25
140-2154	6	249-0295	15	302-0885	25	323-1305	25
140-2157	5	249-0297	15	302-1148	27	323-1306	25
140-2166	5	249-0298	13	302-1684	27	323-1307	25
145-0596	3	249-0302	15	302-1684	27	323-1308	25
150-0723	18	249-0304	15	302-1691	27	323-1309	25
150-0723	19	249-0307	17	302-1715	25	323-1310	25
150-0956	18	249-0307	20	302-1720	27	332-0052	27
150-0956	19	249-0308	17	302-1721-04	28	332-0325	7
150-1406	19	249-0312	15	302-1721-05	28	332-0607	27
150-2007	7	249-0313	20	302-1722	28	332-0751	27
150-2187	7	249-0315	13	302-1753	27	332-0853	27
150-2200	7	249-0327	17	302-1790	25	332-0941	3
150-2201	7	249-0334	15	302-1794-02	23	332-0941	23
150-2203	7	249-0336	17	302-1794-03	23	332-1087	7
150-2204	19	249-0340	17	302-1794-04	23	332-1279	7
150-2206	18	249-0341	17	302-1805-02	27	332-1445	7
150-2206	19	249-0354	15	302-1833-01	28	332-1445	19
150-2207	18	249-0361	15	303-0032	27	332-1445	27
150-2207	19	249-0362	15	303-0261	27	332-1473	11
150-2218-02	7	249-0364	17	303-0280	25	332-2562	29
151-0611	7	249-0366	15	305-0778	15	332-2563	29

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
332-2723	27	503-1391-01	9	800-0520	11	850-0045	28
332-2739	3	503-1460	6	800-2060	3	850-0050	3
333-0151	21	503-1467	6	800-2060	7	850-0060	11
333-0291-01	12	503-1542	5	800-2084	9	850-0079	11
333-0291-02	12	503-1543	5	800-2088	13	850-0079	13
333-0292-01	12	504-0003	9	800-2110	3	850-2008	3
333-0292-02	12	504-0011	3	800-2110	5	850-2008	7
333-0378	21	505-0026	3	800-2110	6	850-2008	9
335-0161	21	505-0059	3	800-2110	7	850-2010	9
337-0049	27	505-0098	3	800-2110	9	850-2010	13
337-0090	11	505-0104	3	800-2111	11	850-2012	3
338-1817	25	505-0185	3	800-2112	3	850-2012	5
338-1818	27	505-0248	3	800-2120	11	850-2012	6
338-1853	27	505-0851	12	805-0015	13	850-2012	7
338-1936	28	505-1373	3	812-0065	27	850-2012	9
338-2121	21	508-0051	23	812-0065	27	850-2012	11
338-2171	25	508-0051	27	812-0066	27	853-0013	18
338-2189-02	19	517-0131	25	812-0070	21	853-0013	19
357-0013	21	517-0131	27	812-0075	3	853-0013	27
370-4031	19	517-0136	18	812-0077	29	854-0006	21
370-4032	18	517-0221	25	812-0079	29	854-0031	19
370-4032	19	526-0008	3	812-0156	23	856-0002	28
402-0354	28	526-0008	7	813-0102	28	856-0008	11
402-0466	11	526-0018	7	813-0103	7	856-0008	27
402-0527	27	526-0022	9	815-0115	5	856-0010	18
402-0568	11	526-0113	21	815-0115	6	856-0010	19
403-2567	11	526-0115	7	815-0172	7	856-0013	3
406-0332	27	526-0124	13	815-0385	25	856-0013	11
406-0333	27	526-0196	7	815-0385	27	860-0006	21
406-0334	27	526-0219	11	815-0544	25	860-0008	3
416-0444	3	526-0238	11	815-0544	27	860-0008	28
416-0446	3	526-0238	13	821-0004	25	862-0001	18
416-0853	11	526-0327	7	821-0004	27	862-0001	19
416-0854	11	526-2120	9	821-0005	18	862-0008	11
416-0893	3	526-2140	9	821-0005	19	862-0014	28
501-0441	3	718-1044	9	821-0005	23	862-0015	9
501-0502	3	718-1058	18	821-0009	9	862-0016	11
502-0153	9	718-1058	19	821-0017	28	862-0016	13
502-1033	9	750-1010	5	821-0018	23	863-0002	5
503-0098	3	750-1010	6	821-0033	5	863-0002	6
503-0197	3	800-0012	7	821-0033	6	868-0011	19
503-0354	9	800-0024	27	821-2045	13	870-0053	7
503-0365	9	800-0026	11	850-0025	3	870-0131	7
503-0685	3	800-0028	9	850-0025	29	870-0131	25
503-0868	5	800-0034	21	850-0030	3	870-0131	27
503-0868	6	800-0051	23	850-0040	3	870-0183	21
503-0998	5	800-0051	27	850-0040	23	870-0183	25
503-0999	5	800-0092	11	850-0045	9	870-0183	27
503-1379-02	9	800-0156	11	850-0045	23	870-0212	7
503-1379-03	9	800-0156	13	850-0045	27	870-0212	11

Numerical Index

Part No.	Page	Part No.	Page	Part No.	Page	Part No.	Page
870-0212	23						
870-0250	18						
870-0250	19						
870-0257	11						
870-0257	21						
870-0437	5						
870-0437	6						
871-0010	3						
871-0015	27						
871-0028	3						



Parts Catalog

DNEA / DWEA
DNFA / DWFA

PMG GENERATOR SET




TABLE OF CONTENTS

GENERAL INFORMATION	ii
INDEX	1
INTRODUCTION	2
EXHAUST SYSTEM	3
AIR CLEANER - STANDARD	4
AIR CLEANER - HEAVY DUTY	5
ELECTRONIC GOVERNOR	7
EXTERNAL ENGINE COMPONENTS - LEFT SIDE	9
EXTERNAL ENGINE COMPONENTS - RIGHT SIDE	11
COOLING SYSTEM - RADIATOR	13
CHASSIS	15
HEATER ENGINE COOLANT	16
GENERATOR - FRAME 3	17
STATOR SECTION OF GENERATOR - FRAME 3	19
ROTOR SECTION OF GENERATOR - FRAME 3	21
GENERATOR OVERSPEED SWITCH	22
GENERATOR OVERSPEED SENSOR	23
BLANK	24
GENERATOR PERMANENT MAGNET EXCITER	25
GENERATOR SET CONTROL	27
ENGINE CONTROL	29
GENERATOR CONTROL	31
POTENTIAL TRANSFORMER	32
WATTMETER	33
CONTROL HEATER	34

General Information

For parts or service, contact the dealer from whom you purchased this equipment or refer to your Nearest Authorized Onan Parts and Service Center.

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

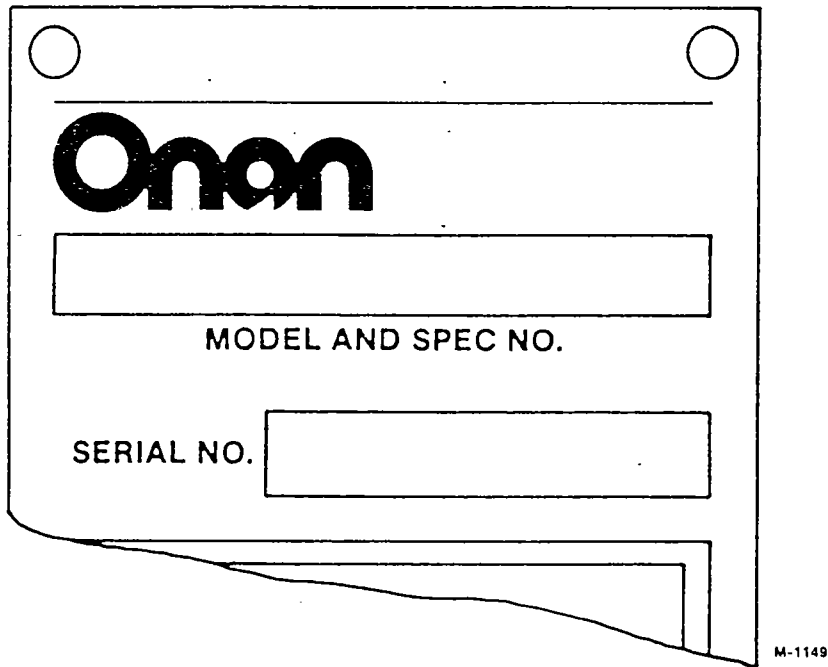

A diagram of an Onan nameplate. It is a rectangular plate with two circular mounting holes at the top. The Onan logo is at the top left. Below it is a large rectangular box for the MODEL AND SPEC NO. Below that is a smaller rectangular box for the SERIAL NO. The bottom right corner of the plate is torn. The text 'M-1149' is printed at the bottom right of the plate.

Onan

MODEL AND SPEC NO.

SERIAL NO.

M-1149

For handy reference, insert "YOUR" nameplate information in the spaces above.

▲WARNING

TAKE ALL NECESSARY PRECAUTIONS WHEN CHECKING OR CHANGING ENGINE OIL NOT TO INGEST, BREATHE THE FUMES OR CONTACT THE OIL. USED ENGINE OILS HAVE BEEN IDENTIFIED BY FEDERAL AND SOME STATE AGENCIES AS CAUSING CANCER.

▲WARNING

TAKE ALL NECESSARY PRECAUTIONS WHEN HANDLING ENGINE GASKETS. DO NOT INGEST, BREATHE, OR CONTACT DUST FROM GASKETS. USE ADEQUATE VENTILATION AND WEAR PROTECTIVE GLOVES, MASK AND CLOTHING. ASBESTOS HAS BEEN IDENTIFIED BY FEDERAL AND SOME STATE AGENCIES AS CAUSING CANCER.

Index

Actuator, Governor 7
Adapter, Exhaust 3
Bell, End - Generator 19
Cable, Battery 9, 11
Cable, Pickup - Magnetic 7
Cap, Radiator 13
Cap, Rain - Exhaust 3
Chassis 15
Cleaner, Air 4, 5
Control, Engine 29
Control, Generator 31
Control, Generator Set 27
Cooling System 13
Drain, Oil 11
Exciter - Permanent Magnet 25
Exhaust System 3
Element, Air Cleaner 4, 5
Fan, Cooling 13
Gasket, Drain - Oil 11
Gauge, Pressure - Oil 29
Gauge, Temperature - Oil 29
Gauge, Temperature - Water 29
Generator 17
Governor, Electronic 7
Guard, Belt 13
Guard, Fan 13
Harness, Wiring - Control (AC) 31
Harness, Wiring - Control (DC) 29
Harness, Wiring - Control To Engine 29
Heater, Control 34
Heater, Coolant - Engine 16
Hose, Drain - Oil 11
Hose, Radiator 13
Housing, Control 27
Indicator, Service - Air Cleaner 4, 5
Light, Indicator 29
Line, Fuel - Flex 11
Meter, Ampere 31
Meter, Frequency 31
Meter, Tach 31
Meter, Time - Running 29
Pickup, Magnetic 7
Radiator 13
Rotor, Exciter 21
Rotor, Exciter - Components 21
Rotor, Exciter - Perm Magnet 25
Rotor, Generator 21
Sender, Pressure - Oil 11
Sender, Temperature - Low Engine 9
Sender, Temperature - Oil 11
Sender, Temperature - Water 11
Silencer, Exhaust 3
Stator, Exciter 19
Stator, Exciter - Perm Magnet 25
Stator, Generator 19
Switch, Overspeed 22
Switch, Pressure - Low Oil 11
Switch, Push - Reset/Panel 31
Switch, Push - Run/Stop/Remote 29
Switch, Rotary - Generator Control 31
Switch, Temperature - Hi. Water 11
Switch, Thermostatic - Heater 16
Transformer, Current 17
Transformer, Potential 32
Valve, Drain - Oil 11
Voltmeter 29, 31
Wattmeter 33

Introduction

This Parts Manual applies to the Standard Gen Sets Listed below. The illustrations are arranged in groups of related items, and each part or assembly is identified by a Reference Number. All parts illustrated are typical, and unless otherwise mentioned in the description column the parts are interchangeable between models.

These typical illustrations are subject to change and reflect only the latest replacement parts arrangement. The Right and Left sides of the Set are determined by FACING the FRONT (Engine end) of the Set.

Set Data Table

ENGINE ID. No.	GEN SET ID No.	RPM RATING	BATTERY VOLTAGE
Note 1. 6CT-G*#	Note 2. 100.0DNEA/DWEA-@	1500 RPM	24 VDC
6CT-G*#	125.0DNEA/DWEA-@	1800 RPM	24 VDC
6CTA-G*#	135.0DNFA/DWFA-@	1500 RPM	24 VDC
6CTA-G*#	150.0DNFA/DWFA-@	1800 RPM	24 VDC

Note:1 * - Letter S for Standby, Letter C for Continious Duty applications

Note:1 # - Number 1 thru 9 used to denote size variations.

Note:2 @ - Numbers and a Letter are used to provide configuration identification. Voltage Codes follow Model Letter designations and separated from the Specification Number by a slant bar. The Specification Number: Number 1 is Standard, all others indicate configuration variations. The Specification Letter: Letter advances (A to B, B to C, etc) with major manufacturing changes.

Electrical Data Table


*VOLTAGE CODE	VOLTS	HERTZ	WIRE	PHASE	NOTES
H	347/600	60	4	3	
L	120/208	60	12	3	+
	127/220	60	12	3	
	139/240	60	12	3	
	240/416	60	12	3	
	254/440	60	12	3	
	277/480	60	12	3	
Z	110/190	50	12	3	+
	115/200	50	12	3	
	120/208	50	12	3	
	127/220	50	12	3	
	220/380	50	12	3	
	230/400	50	12	3	
	240/416	50	12	3	
	254/440	50	12	3	

+ - The Stators are Reconnectible.

Engine Replacement Parts

The Engine replacement parts can be ordered from the Cummins Engine Distributer except those parts modified or added during the Gen Set Assembly. When ordering engine parts, refer to the Engine Data plate and supply the Model, Serial, and CPL numbers. For assistance in ordering the Engine replacement parts, contact the nearest Cummins Engine Distributor or the Supplier from whom you purchased the Generator Set.

 
Exhaust System Components

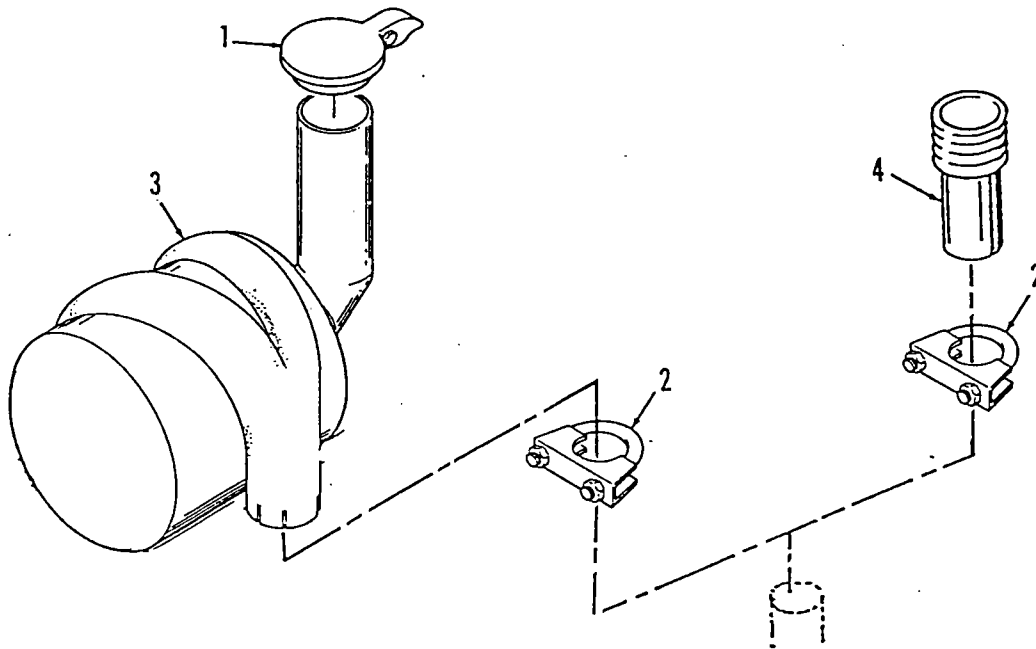

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	155-2062-07	1	Cap, Rain
2	155-2305	1	Clamp, Muffler

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
3			Silencer
	155-2306	1	6CT Engine (D EA Set)
	155-2307	1	6CTA Engine (D FA Set)
4	154-2304	1	Adapter, Exhaust

 
Air Cleaner - Standard

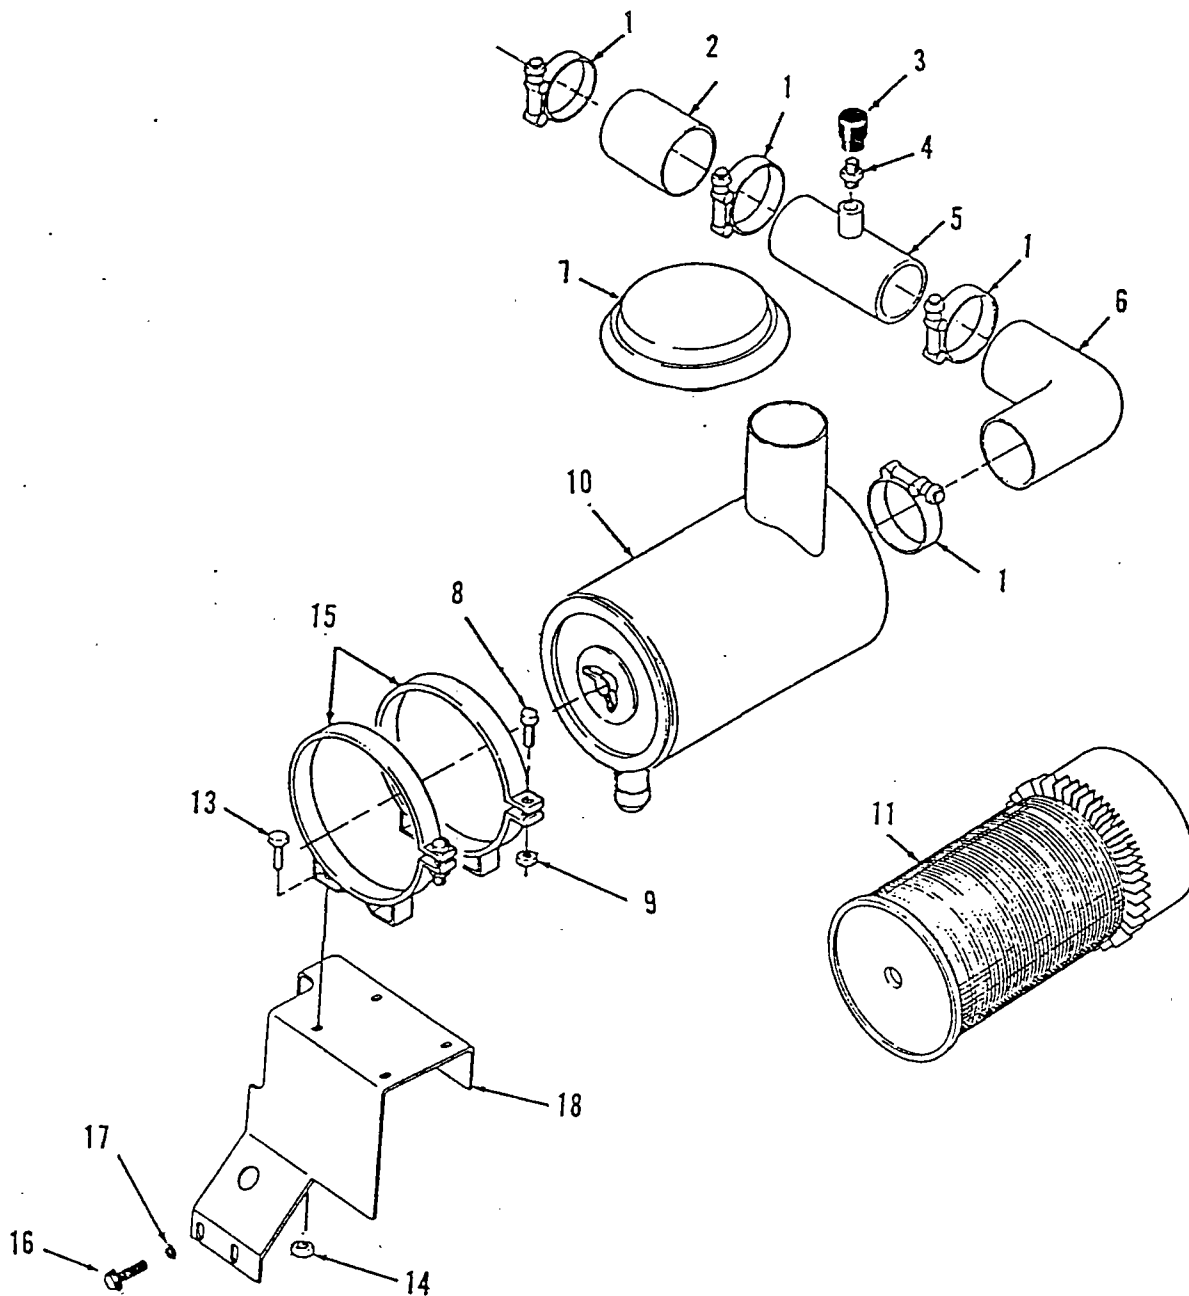

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0900	4	Clamp, Hose
2	503-1595	1	Hose
3	140-1548	1	Indicator, Service
4	140-1260	1	Adapter, Filter - Indicator
5	140-2238	1	Tube, Inlet - Air
6	503-1354	1	Elbow, Rubber - Molded
7	140-1601	1	Hood, Inlet - Air
8	815-0115	2	Screw, Machine - Fillister Head (1/4-20 x 1")
9	863-0002	2	Nut, Square (1/4-20)
10	140-2240	1	Cleaner, Air (Includes Element)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	140-2241	1	Element, Air Cleaner
13	821-0029	4	Screw, Self-locking - Hex Washer Head (3/8-16 x 3/4")
14	870-0281	4	Nut, Lock (3/8-16)
15	140-1973	2	Band, Mounting
16	800-2110	3	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)
17	850-2012	3	Washer, Lock (M12)
18	140-2239	1	Bracket, Mounting - Air Cleaner

 
Air Cleaner - Heavy Duty

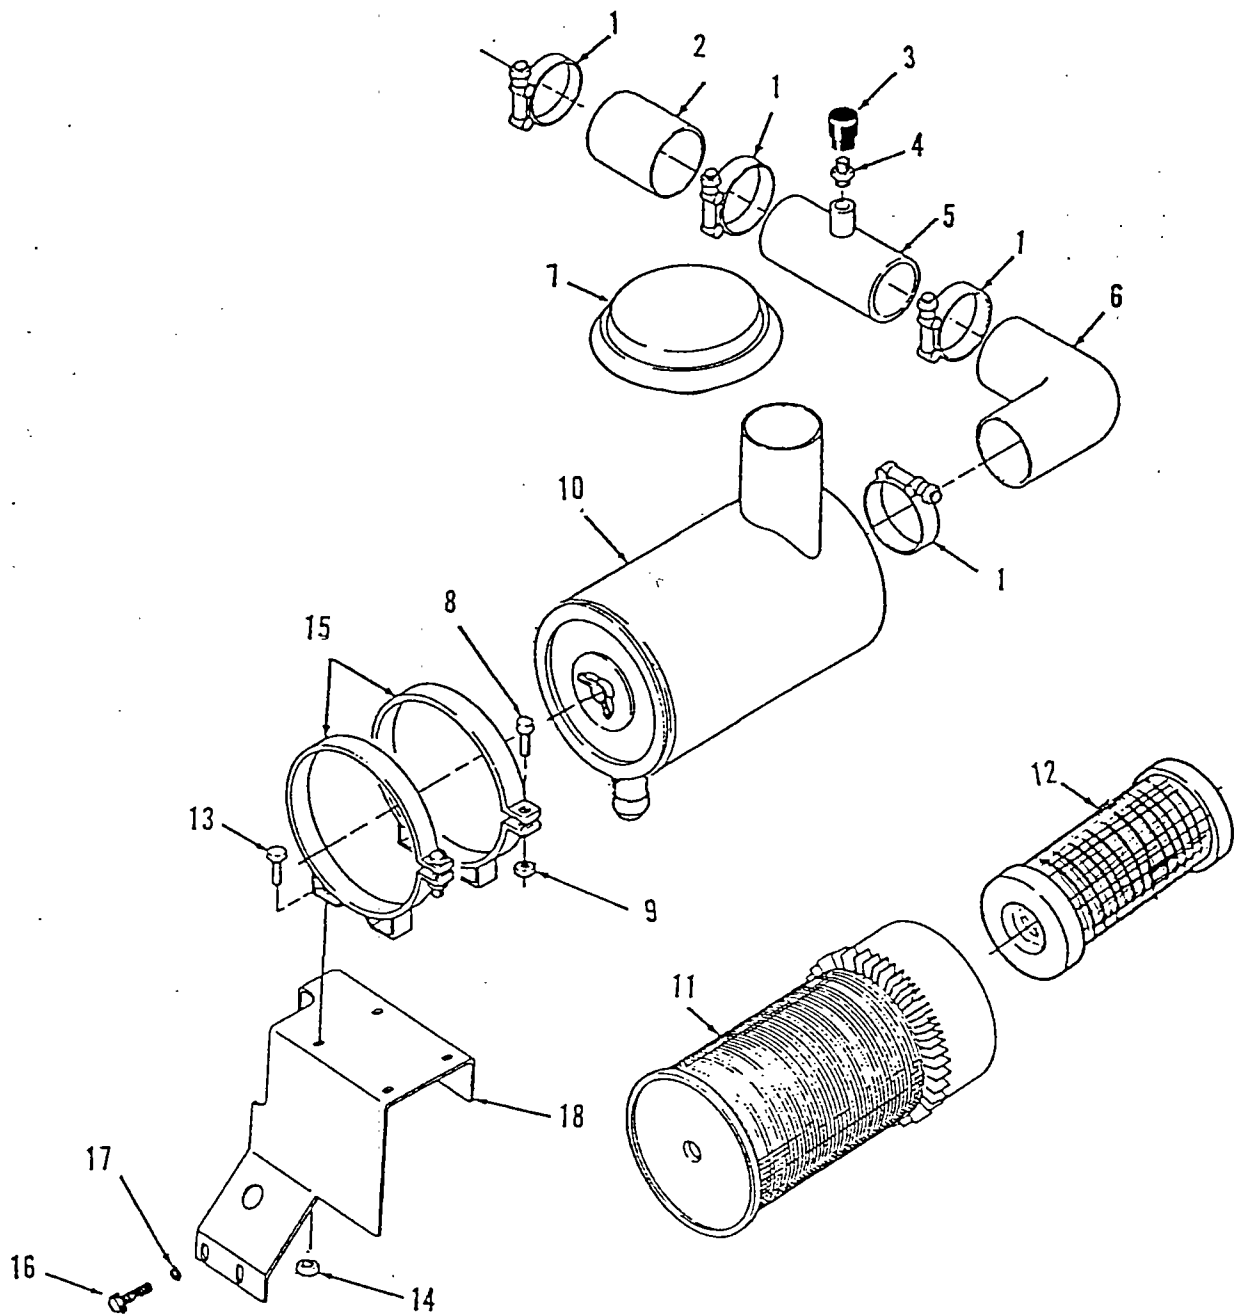

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	503-0900	4	Clamp, Hose
2	503-1595	1	Hose
3	140-1548	1	Indicator, Service
4	140-1260	1	Adapter, Filter - Indicator
5	140-2238	1	Tube, Inlet - Air
6	503-1354	1	Elbow, Rubber - Molded
7	140-1601	1	Hood, Inlet - Air
8	815-0115	2	Screw, Machine - Fillister Head (1/4-20 x 1")
9	863-0002	2	Nut, Square (1/4-20)
10	140-2240	1	Cleaner, Air (Includes Element)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
11	140-2241	1	Element, Air Cleaner Primary (Outer)
12	140-2251	1	Element, Air Cleaner Secondary (Inner)
13	821-0029	4	Screw, Self-locking - Hex Washer Head (3/8-16 x 3/4")
14	870-0281	4	Nut, Lock (3/8-16)
15	140-1973	2	Band, Mounting
16	800-2110	3	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)
17	850-2012	3	Washer, Lock (M12)
18	140-2239	1	Bracket, Mounting - Air Cleaner

 
Electronic Governor

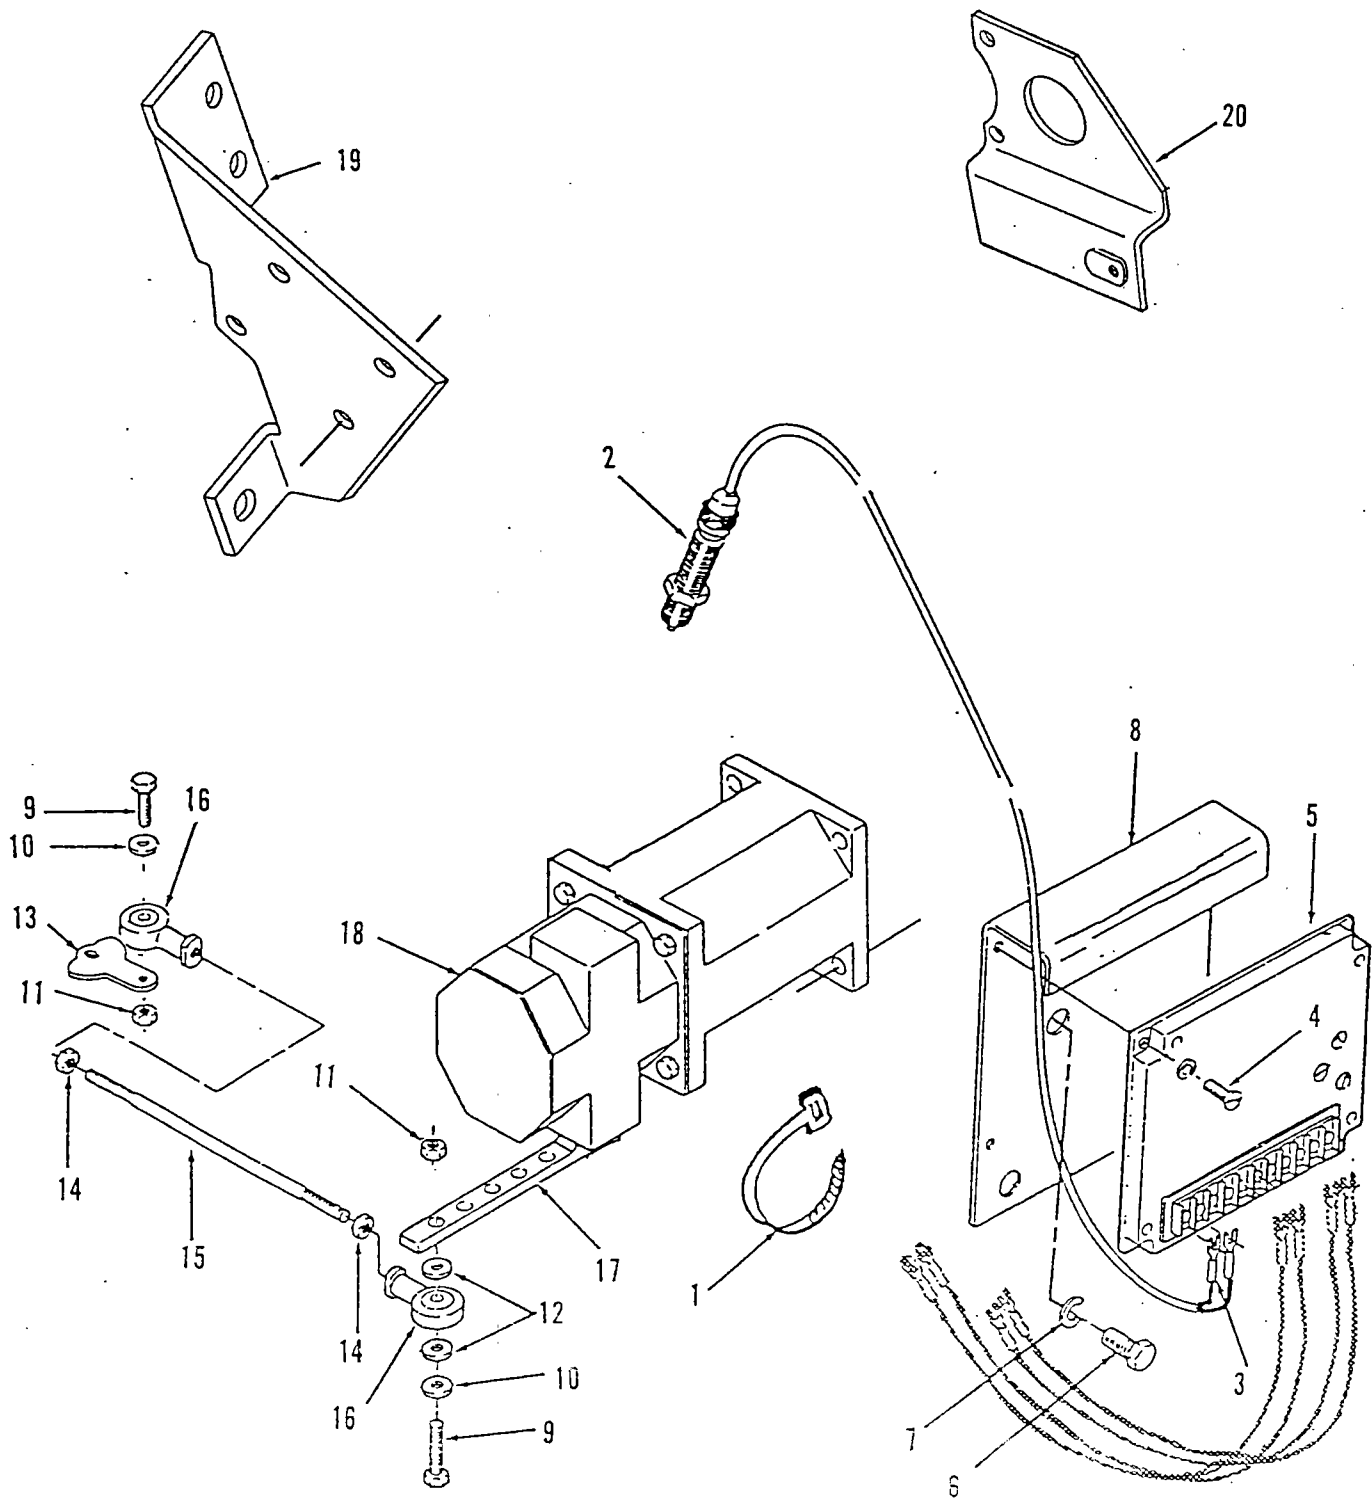

Electronic Governor

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-1445	5	Tie, Cable	15	150-2218-03	1	Rod, Governor
2	150-2201	1	Sensor, Speed (Includes Electrical Lead)	16	150-2251	2	End, Rod
3	332-1279	2	Terminal (Use on Electrical Leads)	17	150-2203	1	Lever, Actuator - Governor
4	813-0103	4	Screw, Machine - Round Head (#10 - 32 x 3/4")	18	151-0612	1	Actuator, Governor - 24VDC
5	151-0611	1	Control, Governor		800-0008	4	Attaching Parts for Actuator
6	800-2110	2	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)		870-0212	4	Screw, Cap - Hex Head (1/4 - 20 x 1-1/4")
7	850-2012	2	Washer, Lock (M12)	19	150-2238	1	Nut, Lock (1/4 - 20)
8	150-2007	1	Bracket, Controller		800-2085	3	Bracket, Governor Actuator
9	815-0172	2	Screw, Machine - Hex Head (#10 - 32 x 1.00")		850-2010	3	Attaching Parts for Bracket
10	526-0327	2	Washer, Flat (15/64)	20	150-2252	1	Screw, Cap - Hex Head (M10 x 1.50 x 20mm)
11	870-0131	2	Nut, Hex W/ET (#10 - 32)		718-1021	1	Washer, Lock (M10)
12	526-0008	4	Washer, Flat (#10)		718-1027	1	Bracket
13	150-2237	1	Lever, Governor		860-2007	2	Attaching Parts for Bracket
14	870-0053	2	Nut, Screw - Hex Head (#10 - 32)				Screw, Cap - Hex Head (M6 x 1.0 x 20mm)
							Screw, Cap - Hex Head (M6 x 1.0 x 50mm)
							Nut, Hex (M6 x 1.0)

 External Engine Components
Left Side

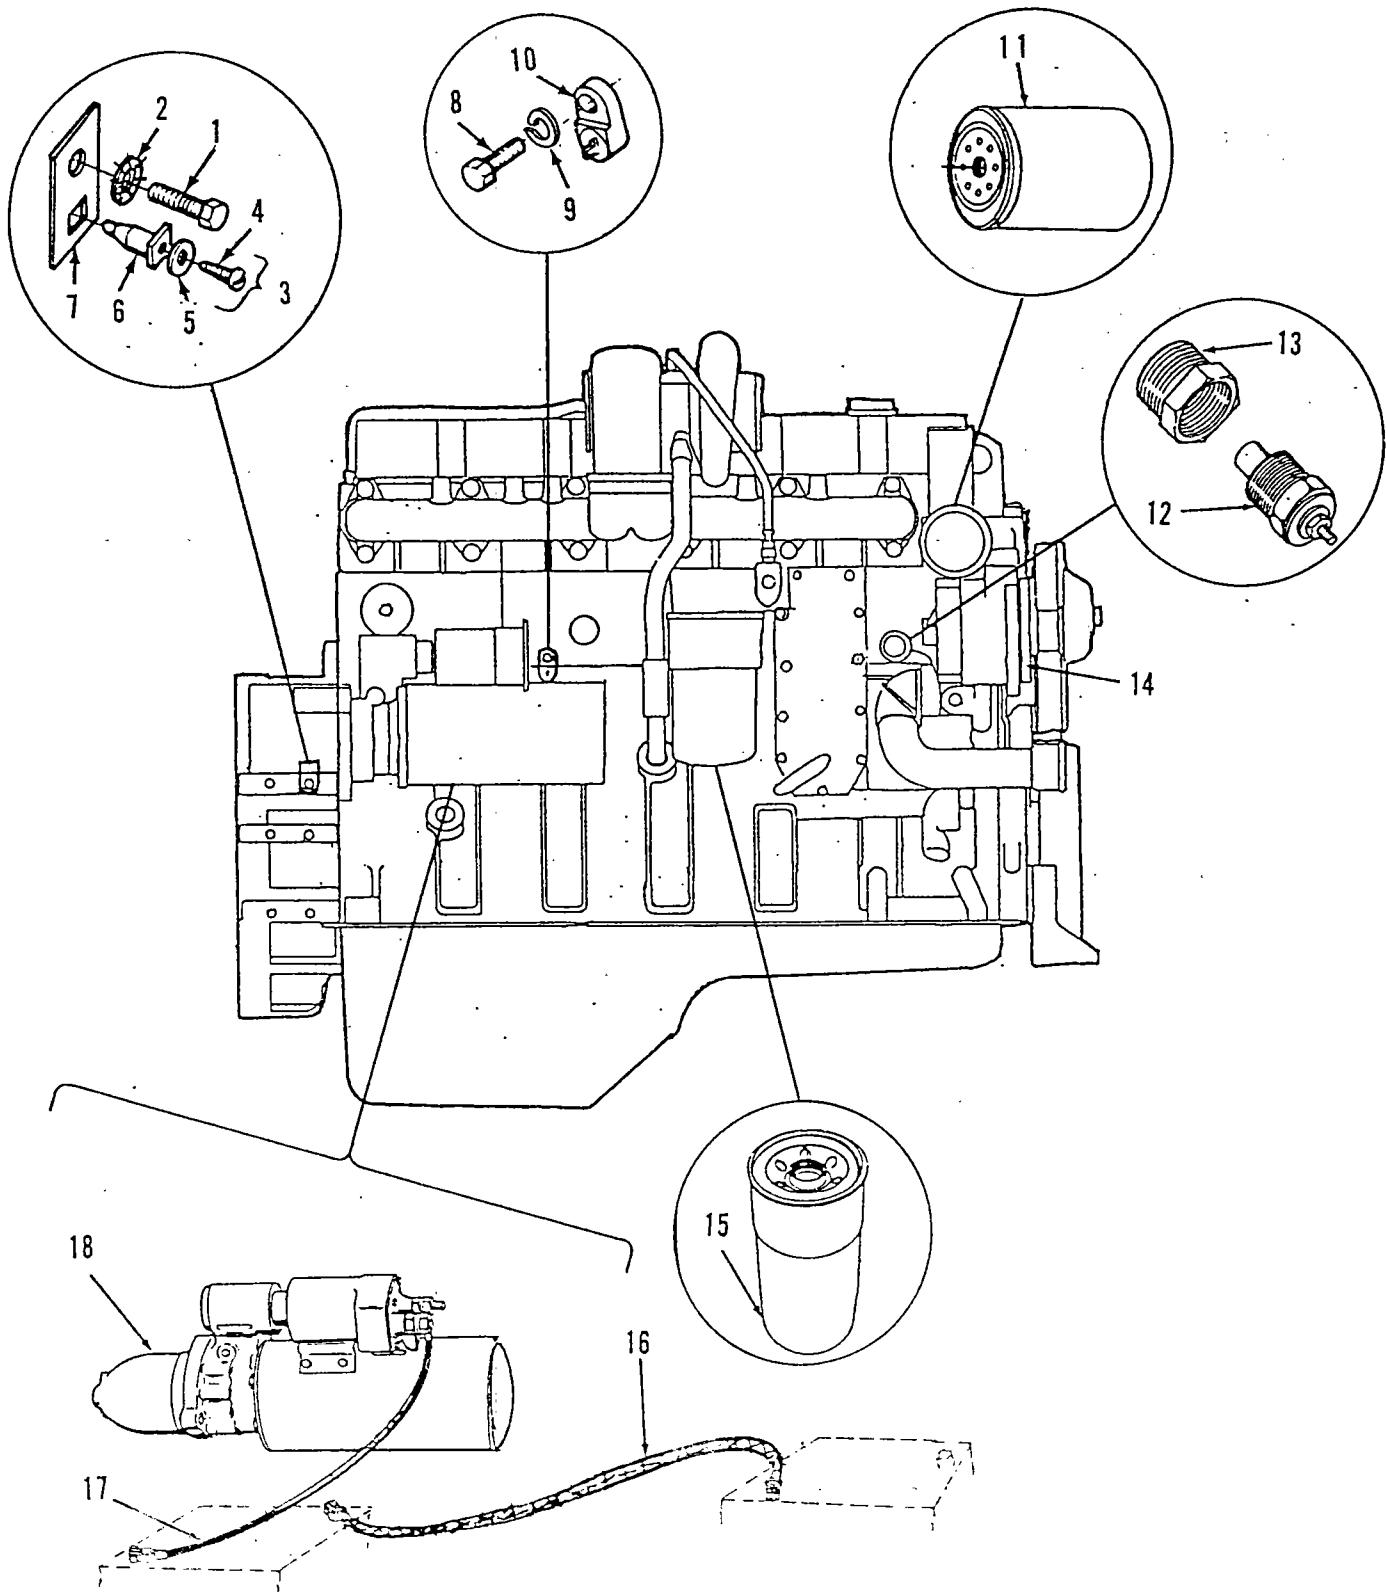


External Engine Components Left Side

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	800-2110	1	Screw, Cap - Hex Head (M12 x 1.75 x 20mm)	11	Note 1		Filter, Water - W/Corosion Inhibiting Chemical DCA4
2	856-0013	1	Washer, Lock - EIT (1/2")		130-3537	1	Service
3	332-2739	1	Terminal Assembly (Includes item 3 thru 7)		130-3539	1	Pre-Charging
4	809-0035	1	Screw, Tapping - Round Head (#8 x 3/4")	12	309-0554	1	Switch, Thermostatic-Engine Coolant Temperature (S2)
5	508-0015	1	Washer, Insulating	13	505-0021	1	Bushing, Reducer
6	870-0196	1	Nut, Insulated	14	Note 2	1	Alternator - 24 VDC (CEC# 3911462)
7	332-2738	1	Board, Terminal	15	122-0756	1	Element - Oil Filter
8	800-2058	1	Screw, Cap - Hex Head (M8x1.25 x 25mm)	16	416-0923	1	Cable, Battery - Jumper
9	850-2008	1	Washer, Lock (M8)	17	416-0915	1	Cable, Battery (44"Lg)
10	309-0269	1	Switch, Thermostatic- Low Engine Temperature (S4)	18	Note 2	1	Starter, Electrical - 24 VDC (CEC# 3910644)

NOTES:

1. Replacement cartridges recommend and should be used in lieu of the Original Engine Factory Installed Item which contains a Pre-Charge amount of DCA or DCA4 Chemical. Replacement with Pre-charge Cartridge may overload the Cooling System and cause problems or failure of the Set.
2. CEC# - Cummins Engine Company Part Number.

 External Engine Components Right Side

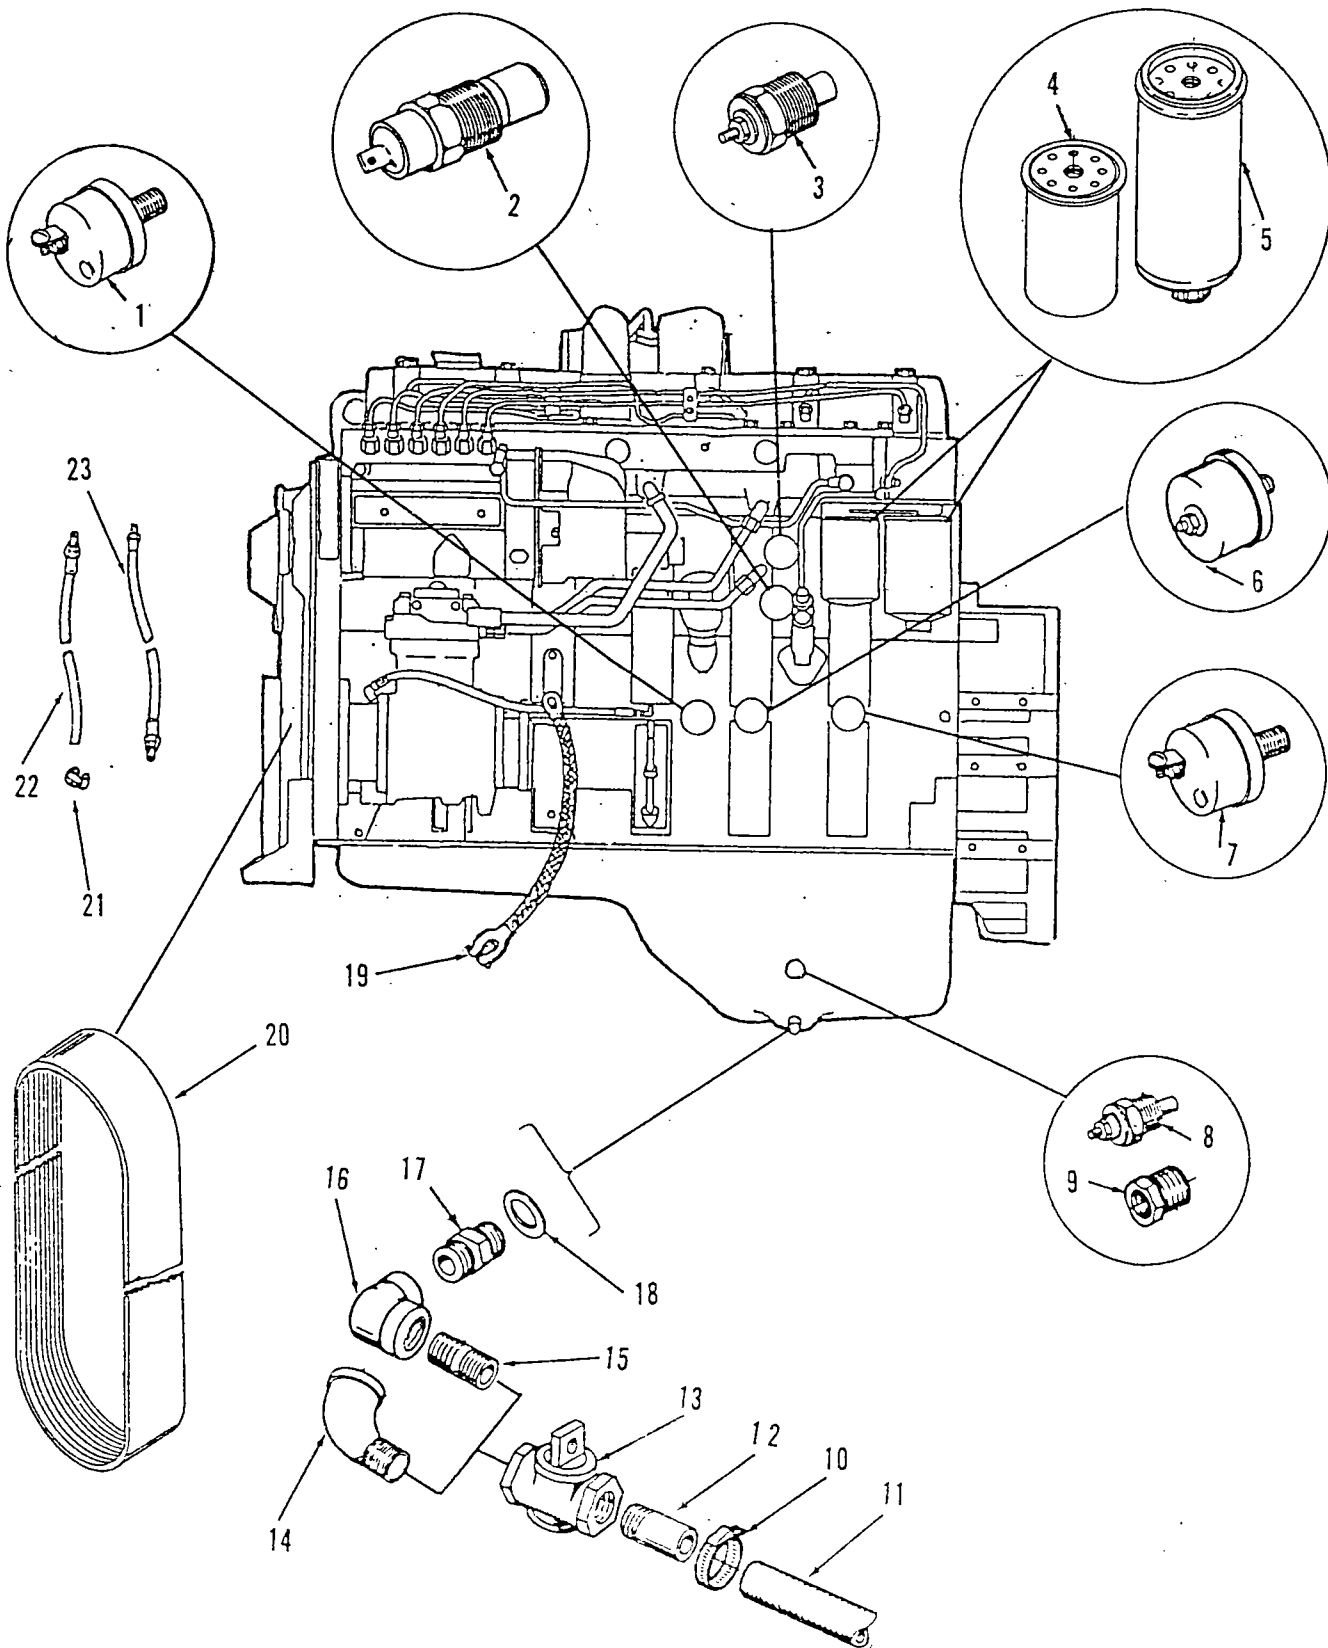


External Engine Components Right Side

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	309-0272	1	Switch, Pressure - Oil, Shutdown (S1)	11	503-0098	1	Hose
2	309-0553	1	Switch, Thermostatic - Engine Coolant Temperature, Pre-Alarm (S6)	12	505-0185	1	Nipple, Pipe - Half
3	193-0375	1	Sender, Temperature - Engine Coolant (E2)	13	504-0011	1	Valve, Shutoff
4	149-2251	1	Filter, Fuel - Secondary	14	505-0248	1	Elbow, Pipe - Street, 45 Deg.
5	149-2252	1	Filter, Fuel - Primary	15	505-0100	1	Nipple, Pipe (Note 1)
6	193-0244	1	Sender, Pressure - Oil (E1)	16	505-0040	1	Elbow, Pipe - 90 Deg (Note 1)
7	309-0561	1	Switch, Pressure - Oil, Pre-Alarm (S5)	17	102-1237	1	Adapter, Drain - Oil
8	193-0353	1	Sender, Temperature - Oil (E4)	18	102-1147	1	Gasket, Drain - Oil Pan
9	505-1373	1	Bushing, Reducer (M22 x 1/8 NPTF)	19	416-0619	1	Cable, Battery (18"Lg)
10	503-0197	1	Clamp, Hose	20	Note 2	1	Belt, Drive - Fan & Altr 6CT Engine(CEC#3911573)
					Note 2	1	6CTA Engine(CEC#3911571)
				21	503-0685	1	Clamp, Hose
				22	501-0502	1	Line, Fuel - Flex (Fuel Out)
				23	501-0441	1	Line, Fuel - Flex (Fuel In)

NOTES:

- Optional installation of Oil Drain Components uses items 15 and 16 in lieu of item 14.
- CEC# - Cummins Engine Company Part Number.

 Cooling System - Radiator

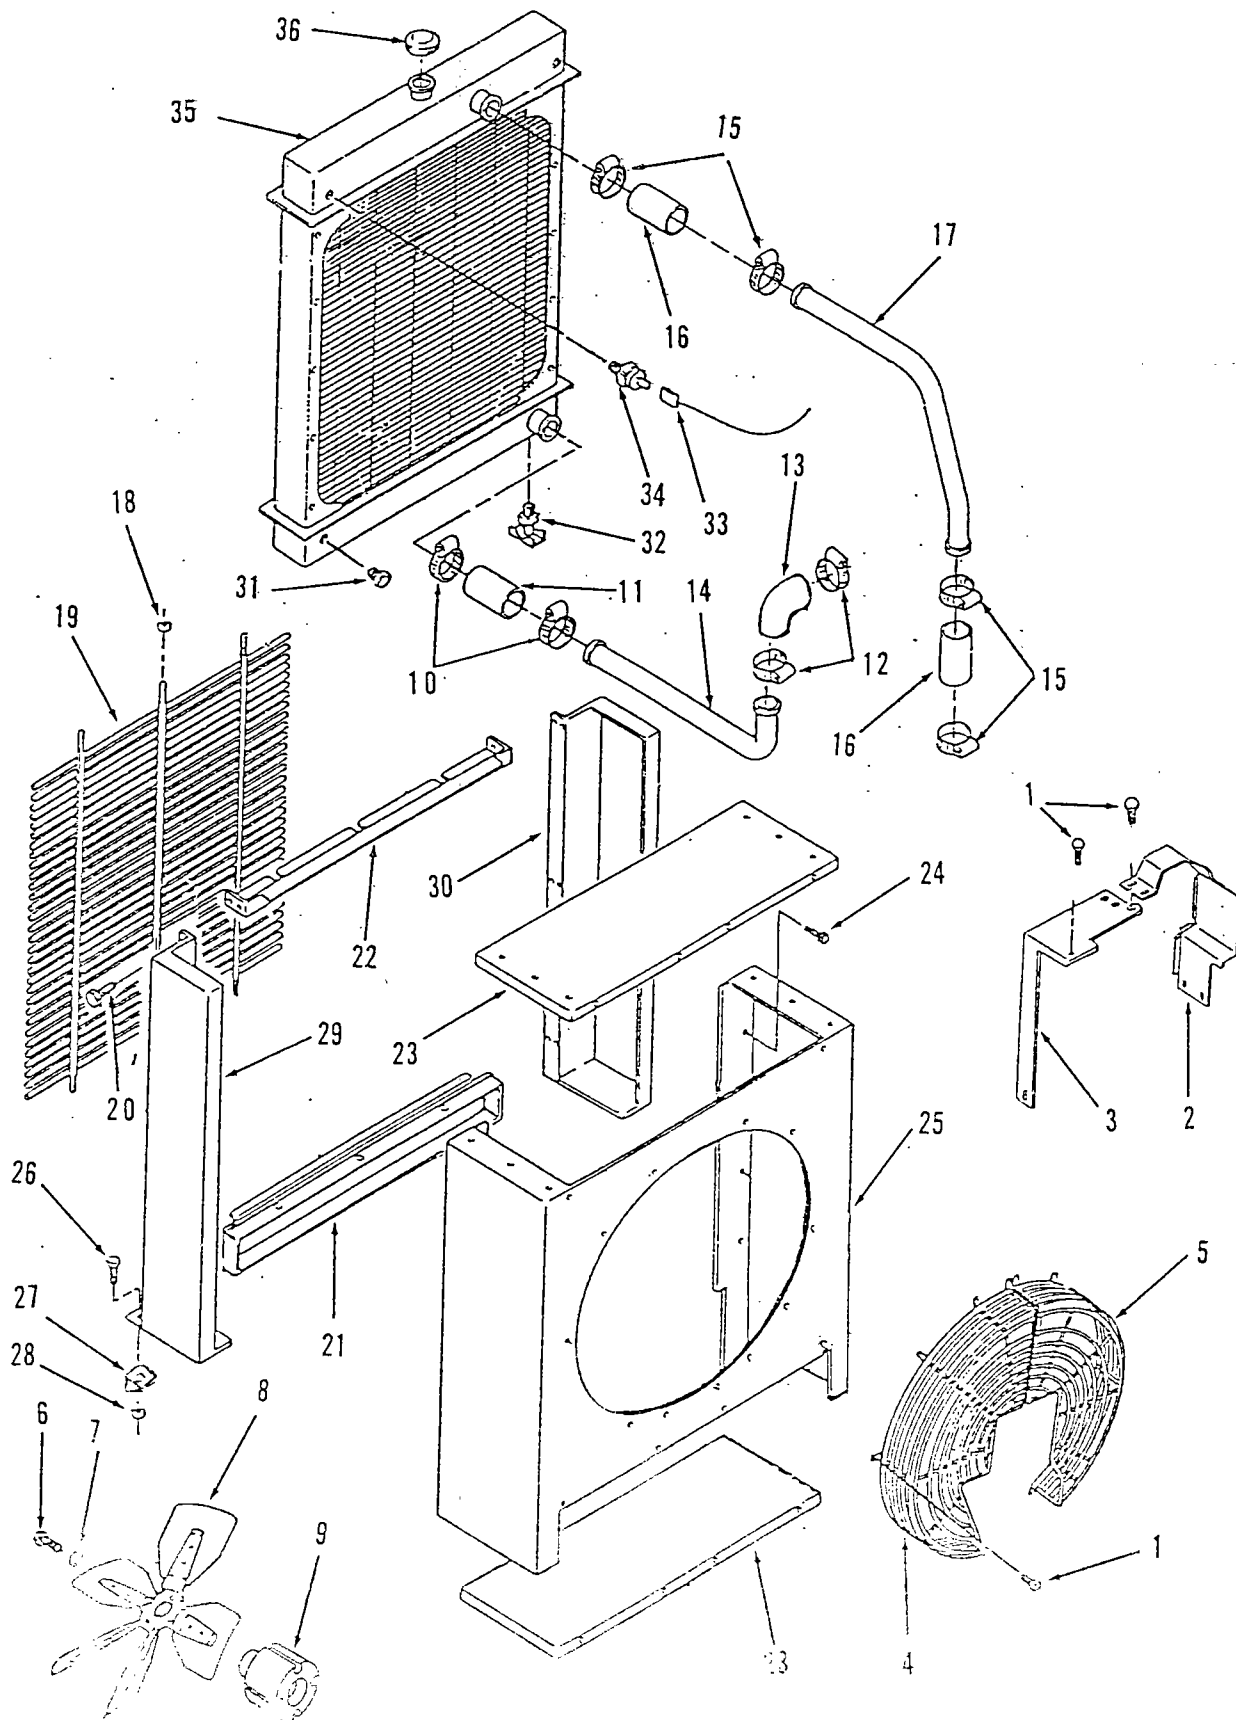


Cooling System - Radiator

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0018	36	Screw, Cap - Hex Head (1/4-20 x 5/8")	20	821-0010	8	Screw, Self-locking - Hex Washer Head (1/4-20 x 1/2")
2	130-3218	1	Guard, Belt	21	130-3204	1	Support, Grille - Lower
3	130-3217	1	Guard, Belt	22	130-3203	1	Support, Grille - Upper
4	130-3209-01	1	Guard, Fan	23	130-3206	2	Shroud - Top/Bottom
5	130-3209-02	1	Guard, Fan	24	821-0028	16	Screw, Self-locking - Hex Washer Head (3/8-16 x 1/2")
6	800-2096	4	Screw, Cap - Hex Head (M10 x 1.5 x 75mm)	25	130-3205	1	Wrapper, Shroud - Fan
7	850-2010	4	Washer, Lock - Spring (M10)	26	801-0049	4	Screw, Cap - Hex Head (3/8-16 x 1-1/4")
8	130-3208	1	Fan, Radiator	27	526-0280	4	Washer, Bevel
9	130-3216	1	Spacer, Fan	28	870-0281	4	Nut, Self-locking - Hex (3/8-16)
10	503-0365	4	Clamp, Hose	29	130-3202-01	1	Guard, Radiator
11	503-1599	1	Hose, Radiator	30	130-3202-02	1	Guard, Radiator
12	503-1586	2	Clamp, Hose	31	502-0153	3	Plug, Pipe - Hex (1/4 NPT)
13	Note 1	1	Elbow, Hose (CEC#3919389)	32	504-0003	1	Cock, Drain (1/4 NPT)
14	130-3212	1	Tube, Outlet - Radiator	33	338-1919	1	Harness, Wiring
15	503-0465	4	Clamp, Hose	34	153-0322	1	Sender, Level - Coolant
16	503-1379-01	2	Hose, Radiator	35	130-3207	1	Radiator (Includes Cap)
17	130-3211	1	Tube, Inlet - Radiator	36	130-1788	1	Cap, Radiator - 14 PSI
18	870-0281	6	Nut, Self-locking - Hex (3/8-16)				
19	130-3210	1	Grille - Radiator				

NOTES:

1. CEC# - Cummins Engine Company Part Number.

 
Chassis

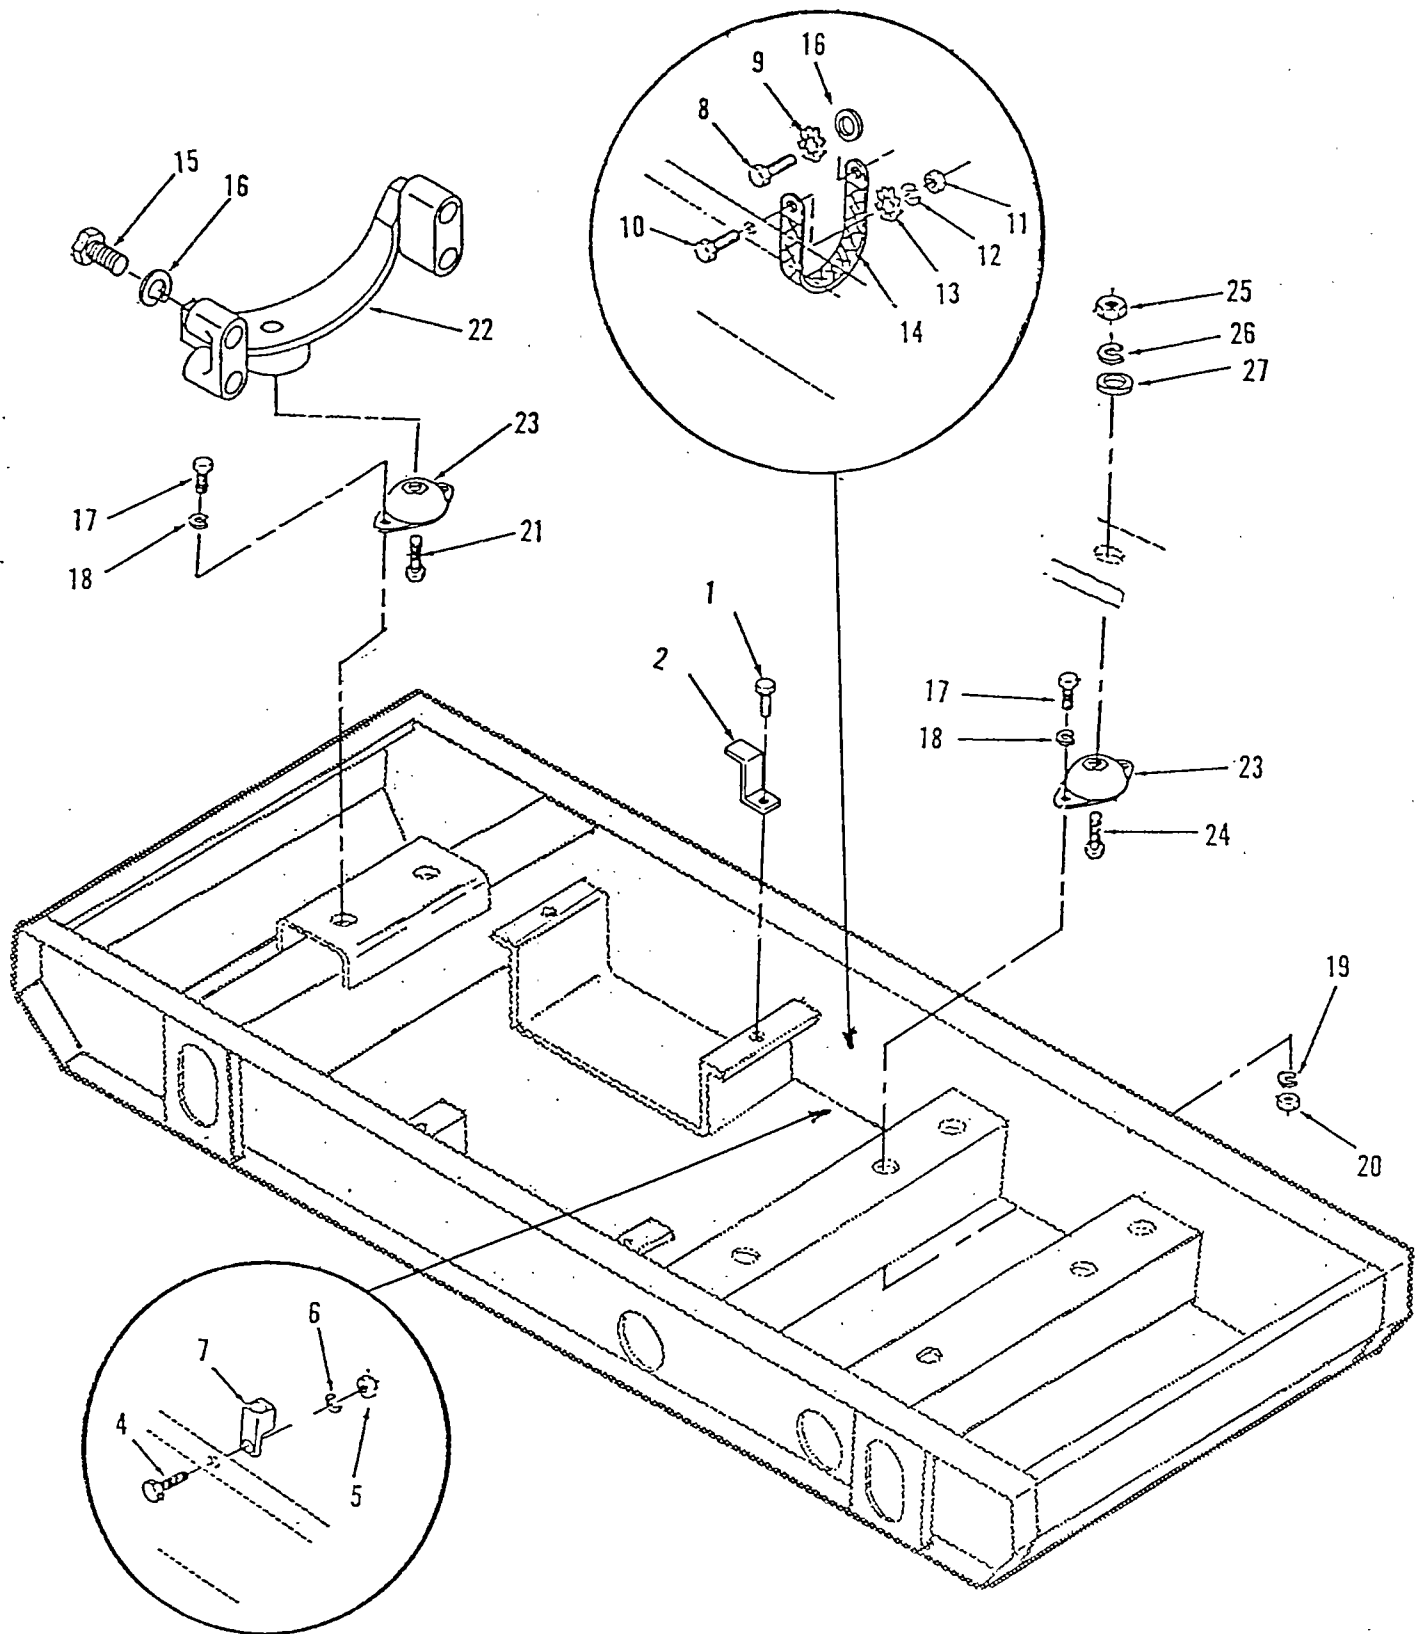

Chassis


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0048	4	Screw, Cap - Hex Head (3/8-16 x 3/4")	15	800-2124	4	Screw, Cap - Hex Head (M12 x 1.75 x 90mm)
2	416-0850	4	Bracket, Retaining	16	850-2012	5	Washer, Lock (M12)
4	800-0026	1	Screw, Cap - Hex Head (5/16-18 x 3/4")	17	800-0092	10	Screw, Cap - Hex Head (1/2-13 x 1-1/2")
5	856-0008	1	Washer, Lock - EIT (5/16)	18	850-0060	10	Washer, Lock - Spring (1/2")
6	870-0257	1	Nut, Lock (5/16-18)	19	526-0219	10	Washer, Flat (1/2")
7	332-1473	1	Lug, Solderless	20	862-0016	10	Nut, Hex (1/2-13)
8	800-2111	1	Screw, Cap - Hex Head (M12 x 1.75 x 25mm)	21	800-0520	1	Screw, Cap - Hex Head (3/4-10 x 1")
9	856-0013	1	Washer, Lock - EIT (1/2")	22	403-2690	1	Support, Engine
10	800-0092	1	Screw, Cap - Hex Head (1/2-13 x 1-1/2")	23	402-0568	5	Mount, Vibration
11	862-0016	1	Nut, Hex (1/2-13)	24	800-0156	4	Screw, Cap - Hex Head (3/4-10 x 2-1/4")
12	850-0060	1	Washer, Lock - Spring (1/2")	25	862-0008	4	Nut, Hex (3/4-10)
13	856-0013	1	Washer Lock - EIT (1/2")	26	850-0079	4	Washer, Lock - Spring (3/4")
14	337-0090	1	Strap, Electrical	27	526-0233	4	Washer, Flat (3/4)

 Engine Coolant Heater

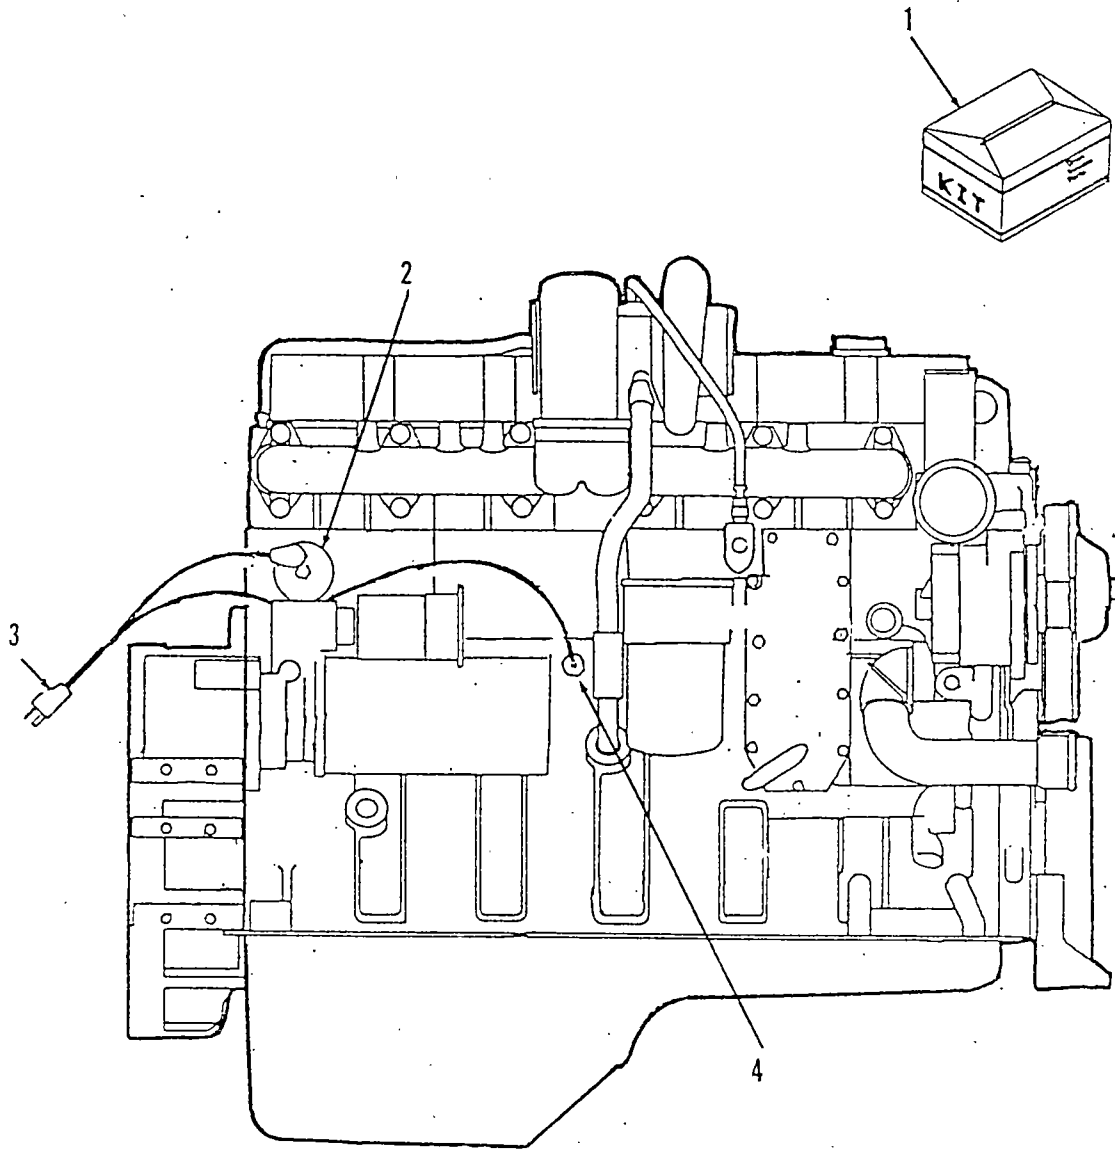

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1			Kit - Engine Coolant Heater (Includes one each of items 2 thru 4)	2			Heater, Electrical
	333-0393-01	1	120 Volts		333-0391	1	120 Volts
	333-0393-02	1	240 Volts		333-0392	1	240 Volts
				3			Cord, Electrical
					335-0162	1	120 Volts
					335-0163	1	240 Volts
				4	309-0555	1	Switch, Thermostatic

 Generator Frame 3

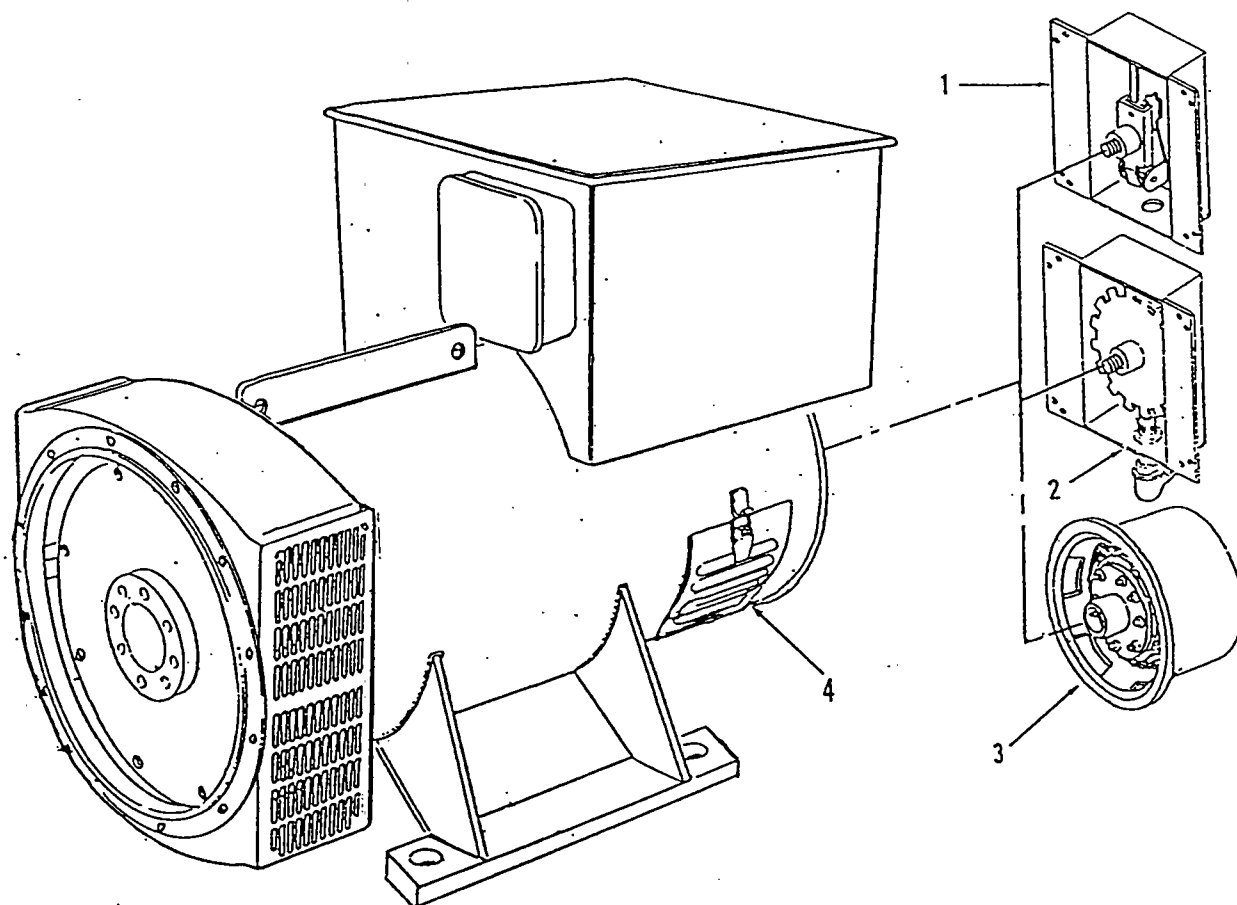


REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	Note 1	1	Module, Overspeed Switch (See Separate Page for Components)	4	Note 2		Generator (See Separate Pages for Stator and Rotor Components)
	821-2045	4	Attaching Parts Screw, Self-locking - Hex Hd (M8 x 1.25 x 16mm)				Attaching Parts Generator to Chassis
2	Note 1	1	Module, Overspeed Sensor (See Separate Page for Components)	800-0156	4		Screw, Cap - Hex Head (3/4-10 x 2-1/2")
	821-2045	4	Attaching Parts Screw, Self-locking - Hex Hd (M8 x 1.25 x 16mm)	850-0079	4		Washer, Lock - Spring (3/4")
3	Note 1	1	Module, Permanent Magnet Exciter (See Separate Page for Components)	526-0238	4		Washer, Flat (3/4")
	249-0298	4	Attaching Parts Screw, Cap - Hex Head (M8 x 16mm)	862-0008	4		Nut, Hex (3/4-10)
	249-0218	4	Washer, Lock (M8)	800-2088	12		Adapter to Flywheel Housing Screw, Cap - Hex Head (M10 x 1.5 x 35mm)
	249-0315	4	Clamp, Retaining	850-2010	12		Washer, Lock - Spring (M10)
				805-0015	8		Drive Disc to Flywheel Bolt - Hex Head (3/8-16 x 3/4", Grade 8)
				526-0124	8		Washer, Flat (1-1/2"OD x 13/32"ID)

Notes:

1. Components for Modules located on separate pages, consult Table of Contents for page number.

2. For replacement Generator please supply the complete Gen Set nameplate and Generator nameplate data.

 Generator Stator Section Frame 3

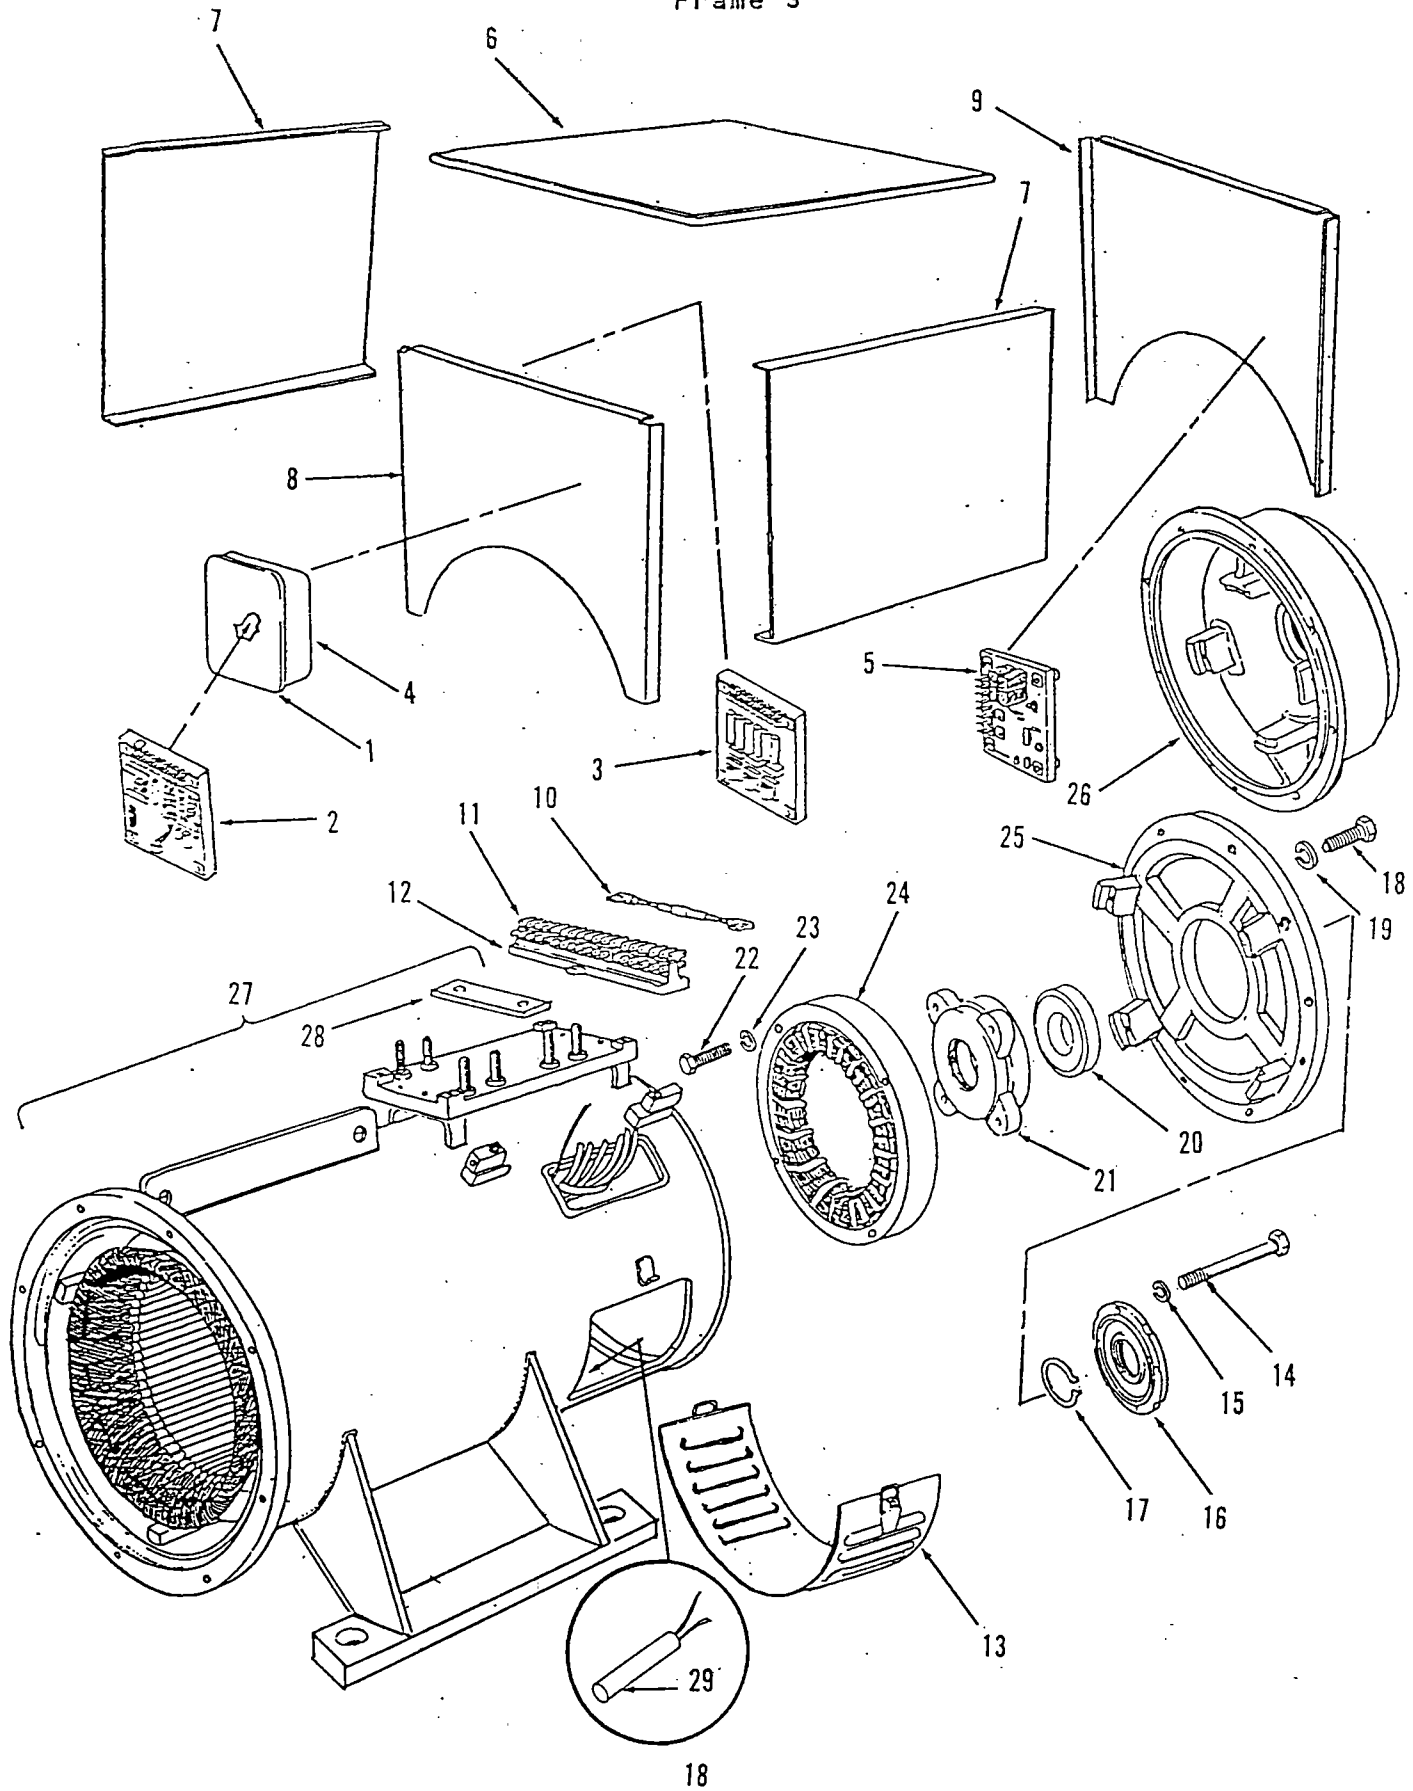


Generator
Stator Section
Frame 3

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0631	2	Lid, Electrical Box - Plain	14	249-0302	4	Screw, Cap - Hex Head (M10 x 65mm)
			Attaching Parts	15	249-0202	4	Washer, Lock - Spring (M10)
	249-0304	8	Screw, Captive	16	249-0362	1	Cap, Bearing - Outer
2			Regulator, Voltage	17	249-0444	1	Circlip
	305-0779	1	1 or 3 Phase, Series 4	18	249-0201	8	Screw, Cap - Hex Head (M10 x 35mm)
			Excitation(Non PMG)	19	249-0202	8	Washer, Lock - Spring (M10)
	305-0770	1	1 Phase (Used with PMG)	20	249-0312	1	Bearing, Ball
	305-0778	1	3 Phase (Used with PMG Exciter & 3 Phase Sensing Module)	21	249-0361	1	Cap, Bearing - Inner
			Manual	22			Screw, Cap - Hex Head (M6 x 55mm) Gen334AS, A or B
	305-0803	1	Attaching Parts		249-0297	4	(M6 x 70mm) Gen334C or D
	249-0398	4	Pillar, Threaded	23	249-0212	4	Washer, Lock - Spring (M6)
3	249-0564	1	Module, 3 Phase Sensing	24			Stator, Exciter
			Attaching Parts		249-0334	1	Gen334AS, A or B
	249-0398	4	Pillar, Threaded		249-0366	1	Gen334C or D
4	249-0395	1	Box	25	249-0354	1	Bracket, End
5	300-3209-02	1	Module, Frequency Detection	26	249-0355	1	Bracket, End
			Attaching Parts				Gen334C or D
	249-0295	4	Screw, Cap - Hex Head (M5 x 35mm)	27	Note 2	1	Stator, Generator (Includes Terminal Studs and Links)
	249-0288	4	Washer, Plastic (M5)				Attaching Parts Stator to Adapter
	249-0287	4	Nut, Hex - Nylon (M5)		249-0201	8	Screw, Cap - Hex Head (M10 x 35mm)
6	Note 1	1	Lid		249-0202	8	Washer, Lock - Spring (M10)
7	Note 1	2	Panel, Side	28	249-0404	4	Link, Terminal
8	Note 1	1	Panel, Front	29			Heater, Electrical - Replacement
9	Note 1	1	Panel, Rear		249-0621	1	70 Watt, 120 VAC
10	249-0428	1	Resistor (Voltage Code H Only)		249-0622	1	70 Watt, 240 VAC
11	249-0289	3	Block, Terminal - AUX				
12	249-0424	1	Base, Terminal - AUX				
13	249-0368	2	Grille, Inlet - Air				

Notes:

1. Parts NOT STOCKED for replacement; If needed supply complete Gen Set nameplate data.
2. Part NOT STOCKED; Replacement is by complete Generator Assembly; please supply the complete Gen Set nameplate and the Generator nameplate data.

 Generator
Rotor Section
Frame 3
SAE1/ SAE14

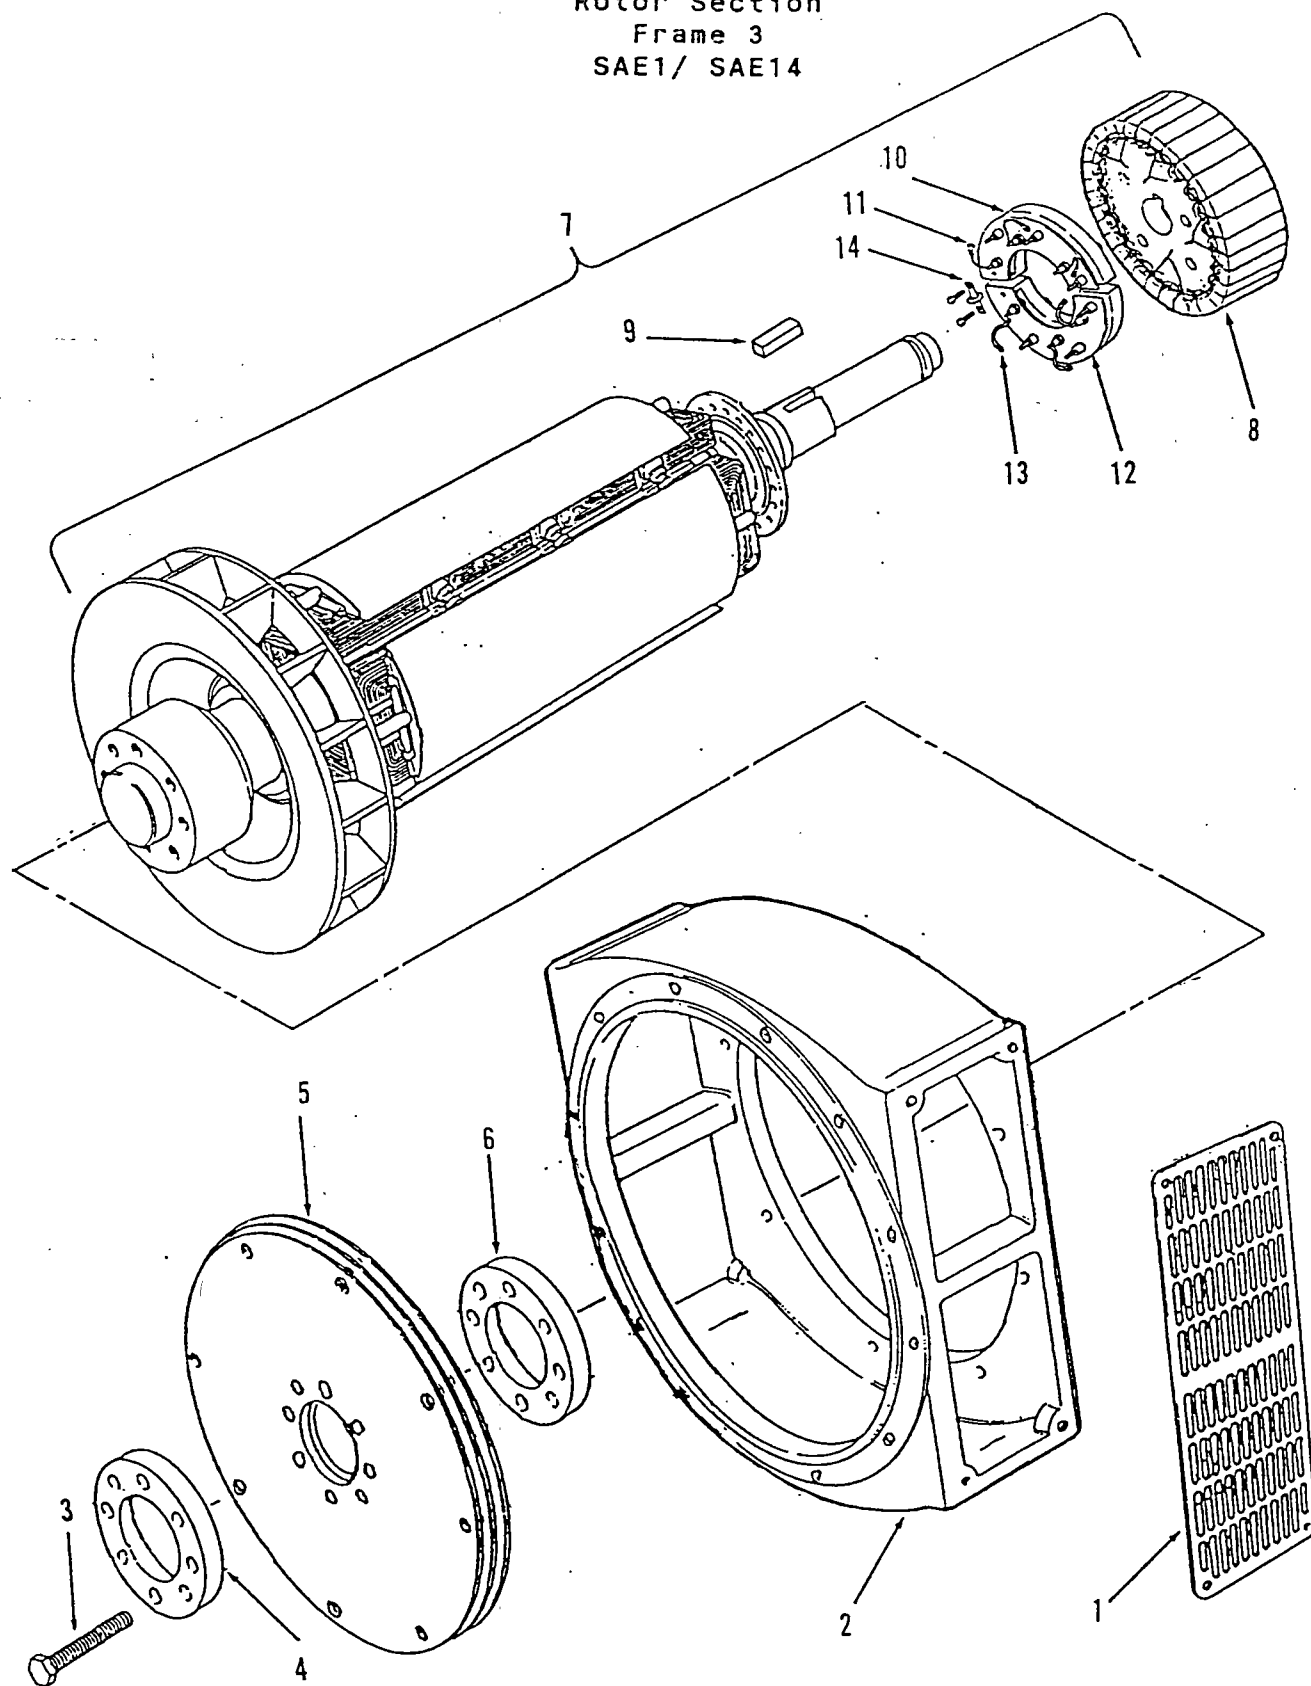


Generator
Rotor Section
Frame 3
SAE1/ SAE14

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0371	2	Screen, Air - Adapter	8			Rotor, Exciter (Does Not Include Rectifier Assy)
	249-0294	8	Screw, Cap - Hex Head (M5 x 12mm)		249-0336	1	Gen334AS
	249-0307	8	Washer, Lock - Spring (M5)		249-0367	1	Gen334A, B, C or D
	249-0308	8	Washer, Flat (M5)	9	249-0271	1	Key
2	249-0369	1	Adapter, Generator (SAE1)	10	249-0340	1	Rectifier Assy, Forward (Includes Item 11 Diodes)
3	249-0292	8	Screw, Cap - Hex Head (M16 x 60mm)	11	249-0281	3	Diode, Forward Polarity
4	249-0402	1	Plate, Pressure	12	249-0341	1	Rectifier Assy, Reverse (Includes Item 13 Diodes)
5	249-0328	3	Disc, Drive (SAE14)	13	249-0282	3	Diode, Reverse Polarity
6	249-0363	1	Spacer	14	249-0283	1	Varister
7	Notel	1	Rotor, Generator (Includes Exciter, Key, and Rectifier Assemblies)		249-0294	2	Attaching Parts Screw, Cap - Hex Head (M5 x 12mm)

Notes:

1. Part NOT STOCKED; Replacement is by complete Generator Assembly; please supply the complete Gen Set nameplate and the Generator nameplate data.

 
Generator Overspeed Switch

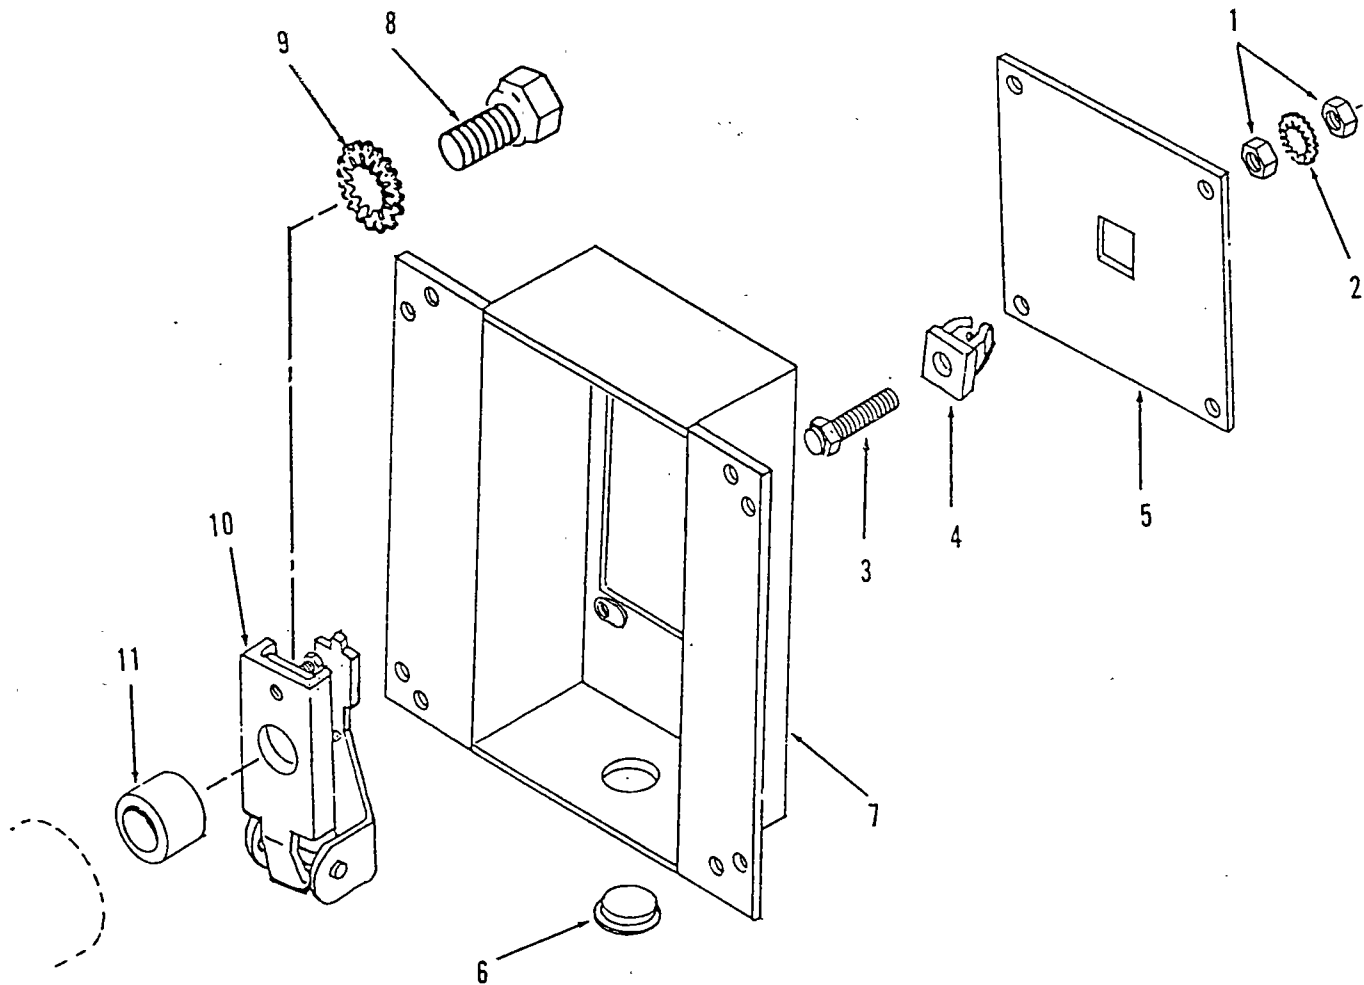

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	862-0001	2	Nut, Hex (1/4-20)
2	853-0013	1	Washer, Lock - EIT (1/4")
3	150-0723	1	Point, Overspeed
4	870-0250	1	Nut, Insulated
5	150-2206	1	Plate, Mounting
	821-0005	4	Screw, Self-locking - Hex (#10-32 x 1/2")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	517-0136	1	Plug, Plastic
7	150-2207	1	Cover, Overspeed Switch
8	718-1058	1	Screw, Cap - Hex Head (M10 x 1.5 x 45mm)
9	856-0010	1	Washer, Lock - EIT (3/8")
10	150-0956	1	Switch, Overspeed
11	370-4032	1	Spacer, Sleeve

 
Generator Overspeed Sensor

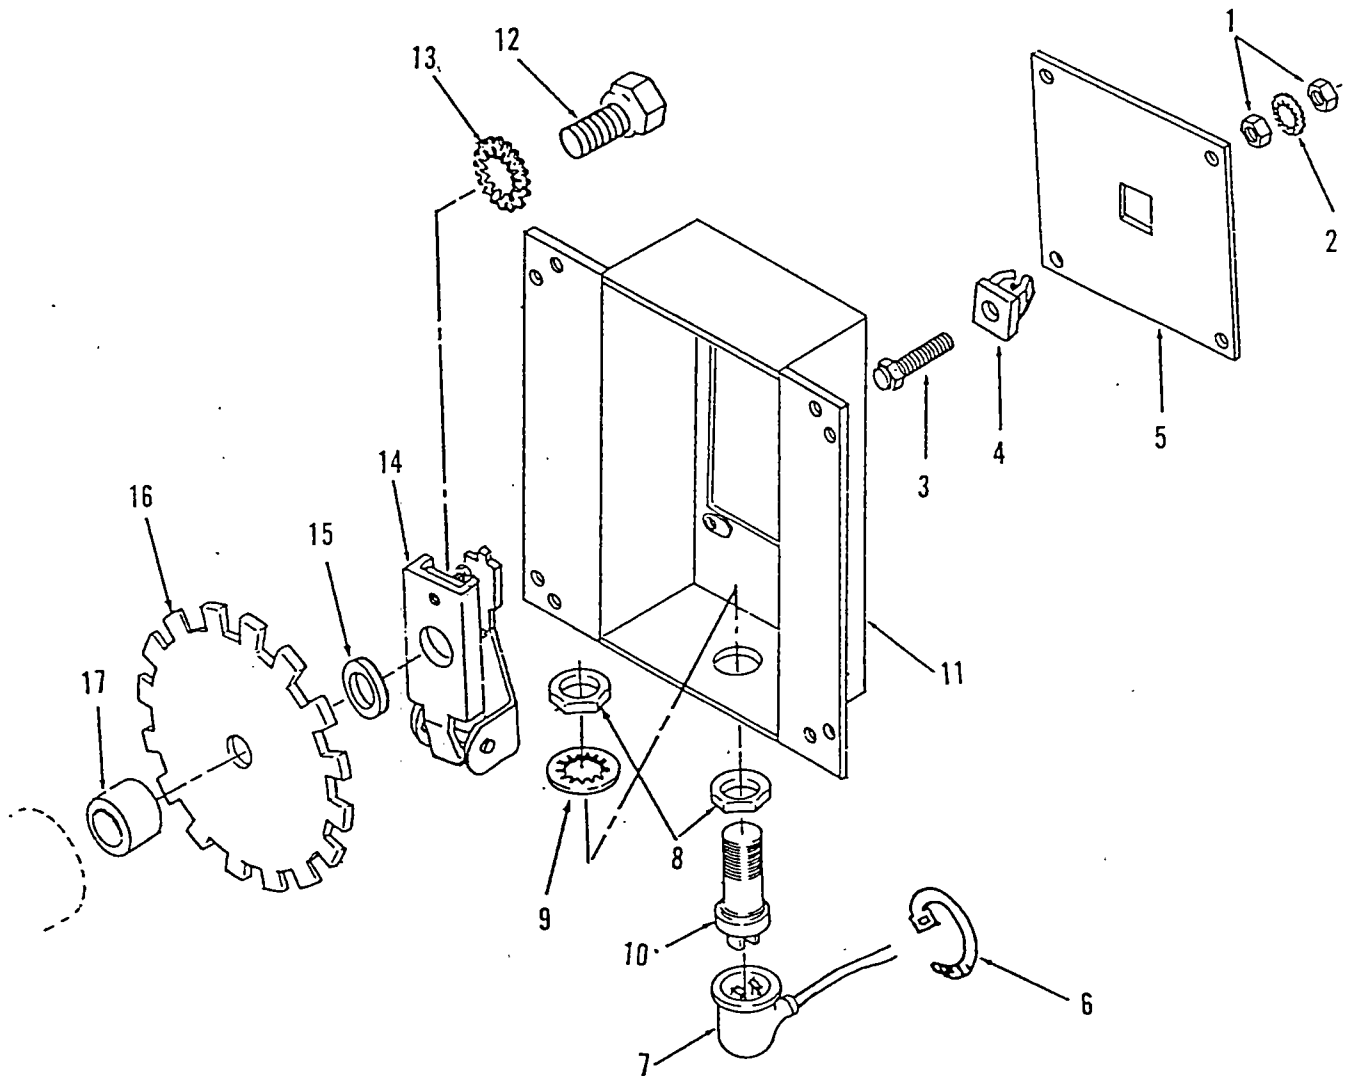

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	862-0001	2	Nut, Hex (1/4-20)	9	854-0031	1	Washer, Lock - IT (3/4")
2	853-0013	1	Washer, Lock - EIT (1/4")	10	150-1406	1	Sensor, Speed
3	150-0723	1	Point, Overspeed	11	150-2207	1	Cover, Overspeed Switch
4	870-0250	1	Nut, Insulated	12	718-1058	1	Screw, Cap - Hex Head (M10 x 1.5 x 45mm)
5	150-2206	1	Plate, Mounting	13	856-0010	1	Washer, Lock - EIT (3/8")
	821-0005	4	Screw, Self-locking - Hex (#10-32 x 1/2")	14	150-0956	1	Switch, Overspeed
6	332-1445	5	Tie, Cable	15	370-4031	1	Spacer, Sleeve
7	338-2189-02	1	Harness, Wiring	16	150-2204	1	Wheel - Speed Sensor
8	868-0011	2	Nut, Jam - Hex (3/4-16)	17	370-4032	1	Spacer, Sleeve

NOTES

 
Generator Permanent Magnet Exciter

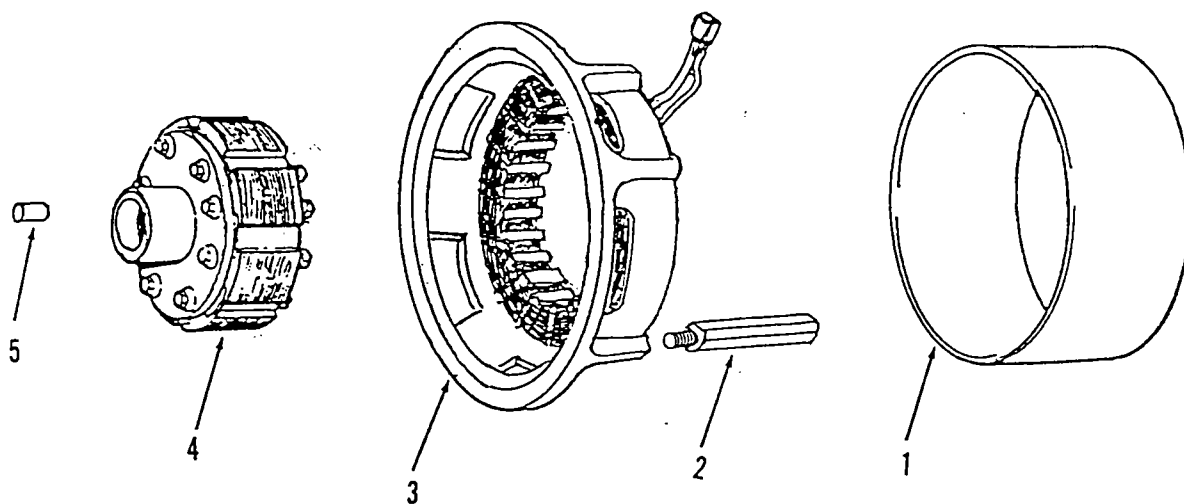

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	249-0497	1	Cover
	249-0294	3	Attaching Parts for Cover Screw, Cap - Hex Head (M5 x 12mm)
	249-0307	3	Washer, Lock (M5)
2	249-0496	3	Pillar, Threaded
3	249-0426	1	Stator, Exciter with Frame

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
4			Rotor, Exciter
	249-0427	1	Frame 2, 3, 4 Generators
	249-0644	1	Frame 5, 6, 7 Generators
			Attaching Parts for Rotor
			Bolt - Select as Required
	249-0399	1	Frame 2, 3, 4 Generators
	249-0495	1	Frame 5, 6, 7 Generators
	249-0202	1	Washer, Lock (M10)
5	249-0313	1	Pin, Dowel

 Generator Set Control

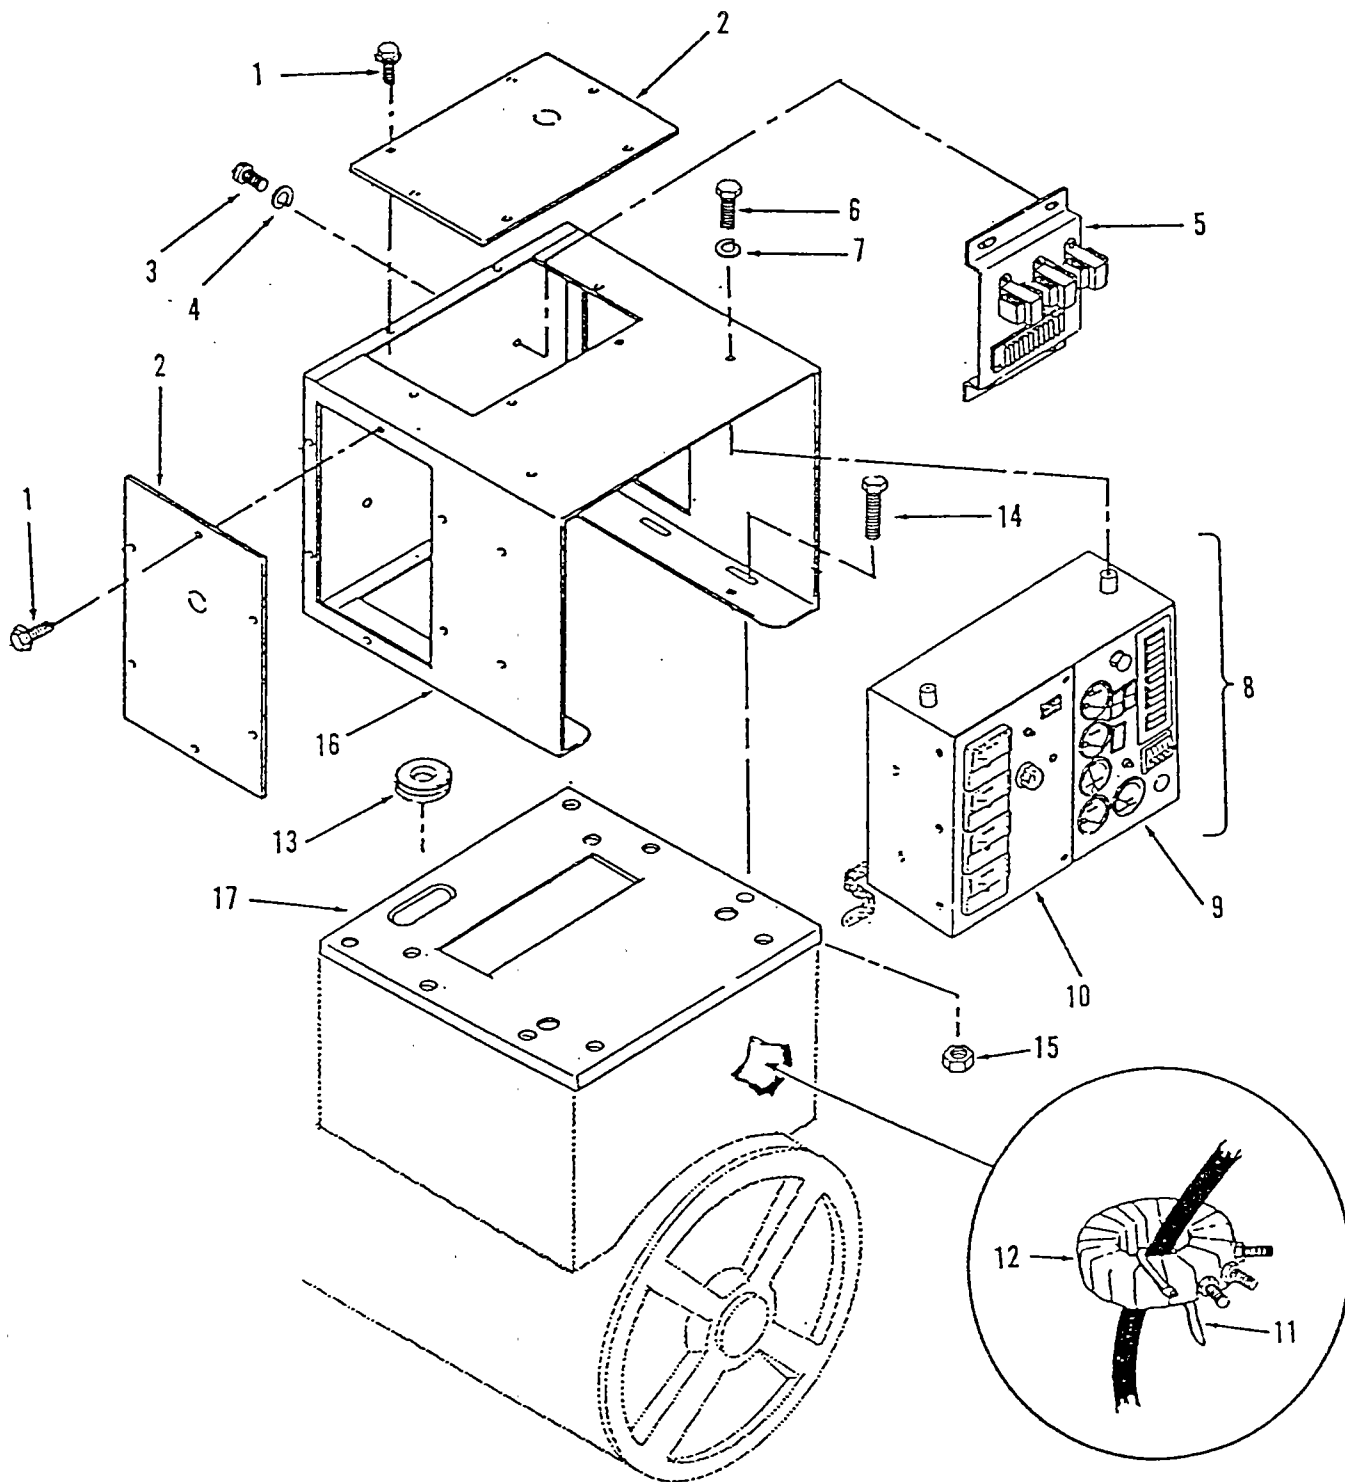


Generator Set Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0005	18	Screw, Self-locking - Hex (#10-32 x 1/2")	12			Transformer, Current - Reconnectible
2	319-0077	3	Panel, Box - Control	302-1794-02	3		Ratio 100/5 or 200/5
3	812-0156	4	Screw, Machine - Round Head (1/4-20 x 1/2")	302-1794-04	3		100 & 150kW Voltage Code H
4	850-0040	4	Washer, lock - Spring (1/4")	302-1794-05	3		Ratio 200/5 or 400/5
5	Note 1	1	Transformer Assy, Potential (See Separate Page for Components)	302-1794-07	3		100kW Voltage Code Z.
6	800-0051	4	Screw, Cap - Hex Head (5/16-18 x 1/2")				Ratio 250/5 or 500/5
7	850-0045	4	Washer, Lock - Spring (5/16")	13	508-0051	1	125kW Voltage Code L
8	Note 1	1	Control, Set (See item 9 & 10 for Components)	14	821-0018	6	Ratio 375/5 or 750/5
9	Note 1	1	Control, Engine (See Separate Page for Components)	15	870-0212	6	135kW Voltage Code Z
10	Note 1	1	Control, Generator (See Separate Page for Components)	16	301-3155	1	150kW Voltage Code L
11	332-0941	6	Tie, Cable	17	319-0011	1	Grommet
							Screw, Self-locking - Hex Head (1/4-20 x 5/8")
							Nut, Self-locking - Hex (1/4-20)
							Housing, Control
							Adapter, Housing to Terminal Box (Frame 3 Generators)

Notes:

1. Components for Controls located on separate pages, consult Table of Contents for page number.

 Engine Control

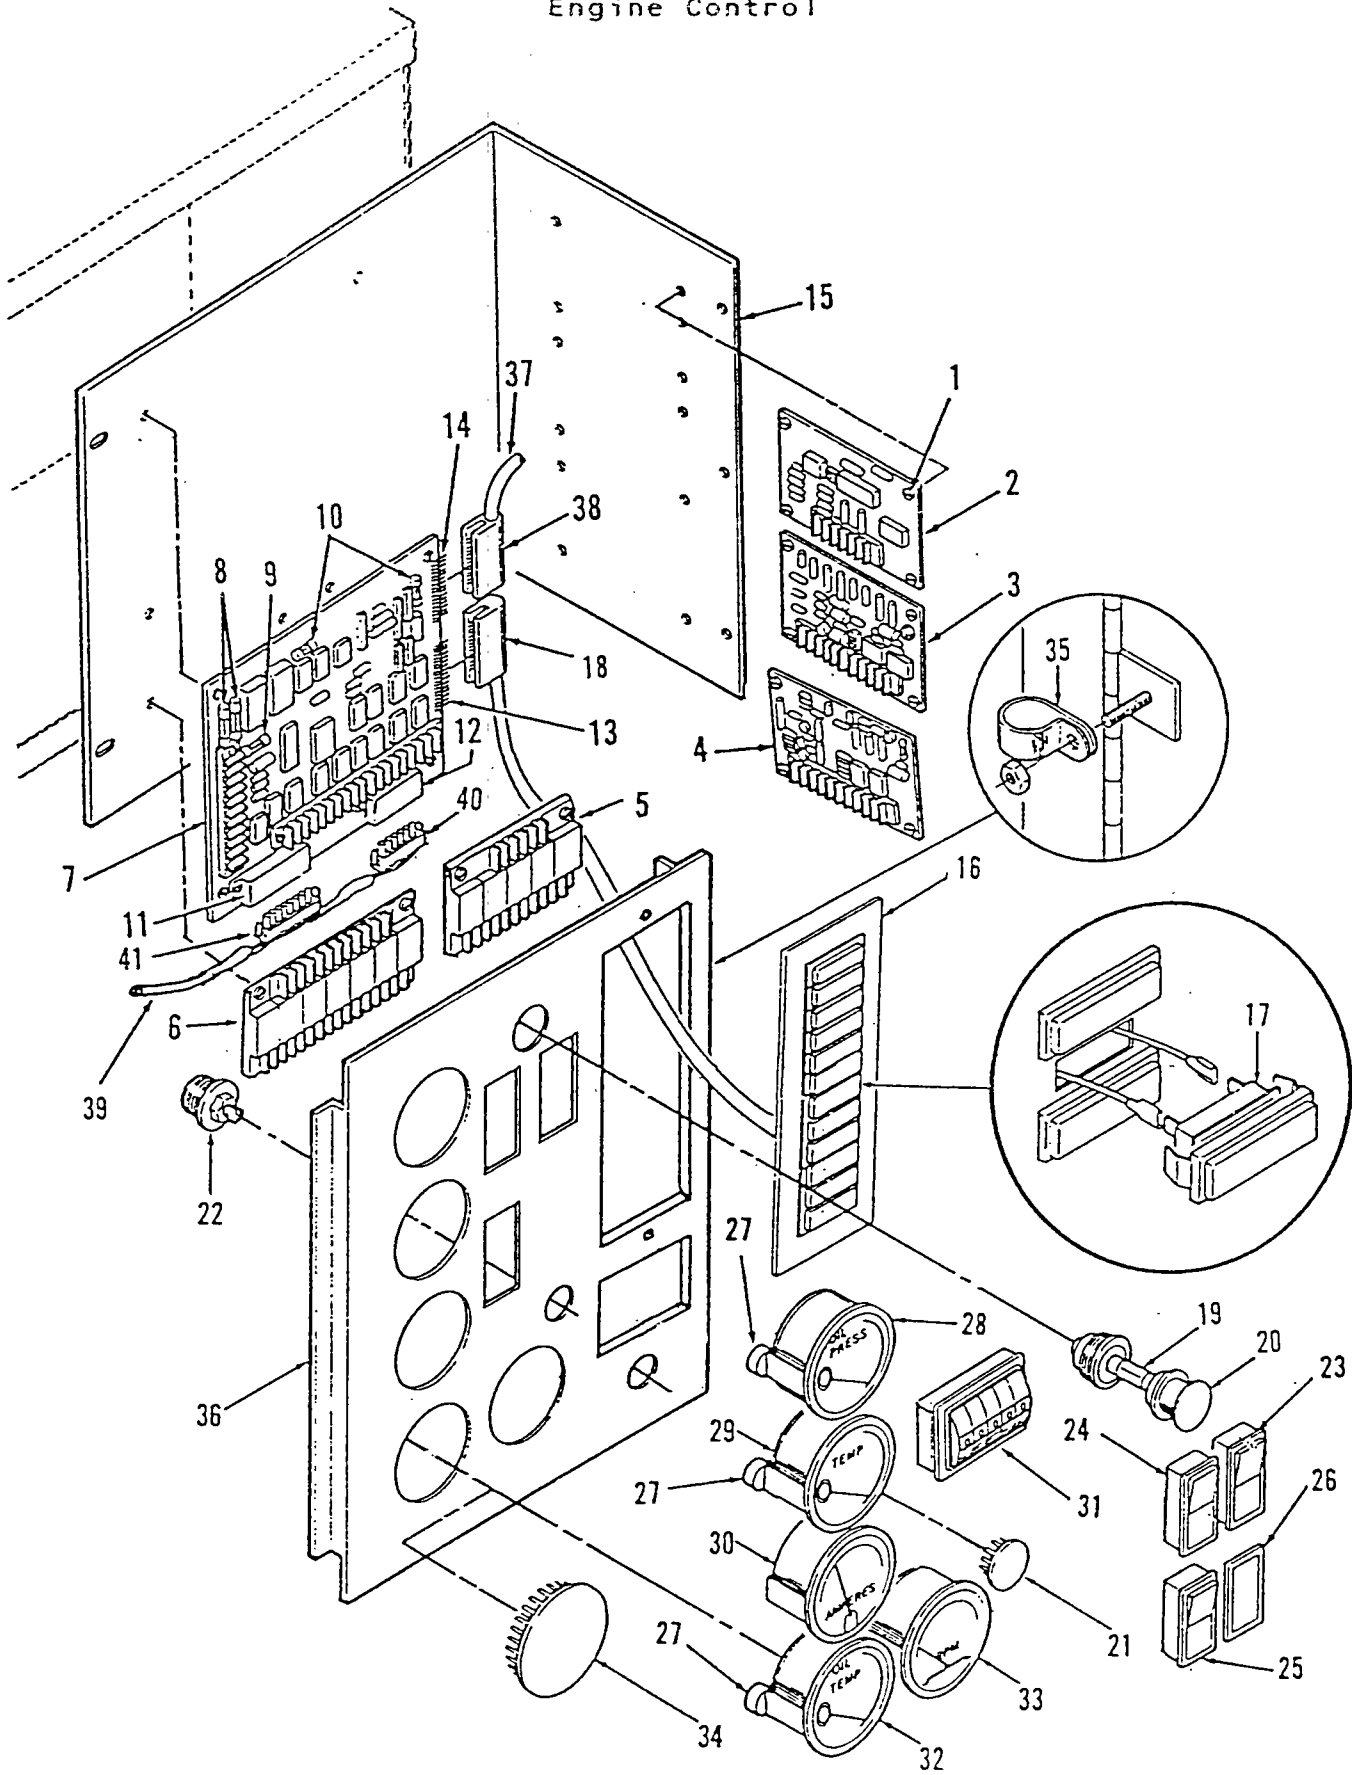


Engine Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	815-0544	24	Screw, Machine - Round Head With IT Lock Washer (#6-32 x 1/2")	17	322-0369-02	12	Lamp, Incandescent - 1/3 Watt 28 VDC
2	300-2899	1	Board, Time Delay, Start/Stop - 24 VDC (A15)	18	323-1310	1	Housing, 13 Pin (J3)
3			Board, Magnetic Sensor, Start Disconnect/Over Speed Sensor (A16)	19	322-0017	1	Contact, Pin
	300-2903	1	Standard	20	322-0361	1	Lamp, Incandescent - 28 VDC (DS11)
	300-2904	1	Precision	21	517-0131	1	Holder, Lamp
4	300-2906	1	Board, Over-Under Voltage Sensor - 24 VDC (A17)	22	303-0280	1	Plug, Button
5	300-2856	1	Board, Relay - 24 VDC (A13)	23	308-0785	1	Potentiometer (R11)
5A	338-1836	1	Harness (A13 to A11) Note 2	24	308-0784	1	Switch, Push (S11)
6	300-2863	1	Board, Relay - 24 VDC (A14)	26	301-6257	1	Switch, Push (S12)
6A	338-1835	1	Harness (A14 to A11) Note 2	27	193-0250	3	Cover
7			Board, Engine Monitor (A11) (Includes Fuses and Connectors)	28	193-0352	1	Resistor, Gauge (R12)
	300-2808	1	24 VDC, 2 Light	29	193-0351	1	Gauge, Pressure - Oil (M11)
	300-2812	1	24 VDC, 12 Light	30	302-1790	1	Gauge, Temperature - Water (M12)
8	321-0270	2	Fuse, Cartridge - 20 Amp (F1, F2)	31	302-0885	1	Ammeter (M13)
9	321-0231	1	Fuse, Cartridge - 15 Amp (F3)		815-0385	2	Meter, Totalizing - Time (M14)
10	321-0094	2	Fuse, Cartridge - 5 Amp (F4, F5)		870-0183	2	Screw, Machine - Round Head (#6-31 x 1/2")
11	323-1305	1	Connector, 8 Pin (P1)	32	193-0330	1	Nut, Hex with ET Lockwasher (#6-32)
12	323-1303	1	Connector, 6 Pin (P2)	33	302-1873-01	1	Gauge, Temperature - Oil (M15)
13	323-1309	1	Connector, 13 Pin (P3)	34	517-0221	1	Tachometer (M16)
14	323-1307	1	Connector, 12 Pin (P4)	35	332-0052	1	Plug, Button
15	301-8851	1	Bracket, Mounting		870-0131	1	Clamp, Loop
	821-0004	4	Screw, Self-locking - Hex Hd (#10-32 x 5/16")	36	Note 1	1	Nut, Hex with ET Lockwasher (#10-32 x 1/2")
16			Module, Indicator - Fault (Includes Replaceable Lamps, Harness with Connector Housing & Contact Pins)(A12)	37	338-1817	1	Door, Control
	322-0358-02	1	24 VDC, 2 Light	38	323-1308	1	Harness, Wiring - DC Meter (Includes Connector & Pins)
	322-0360-02	1	24 VDC, 12 Light	39	323-1302	12	Housing, 12 Pin (J4)
	815-0385	2	Screw, Machine - Round Head (#6-32 x 1/2")		338-2369	1	Contact, Pin
	870-0183	2	Nut, Self-locking - Hex (#6-32)		338-2171	1	Harness, Wiring - Control to Engine (Includes Connectors and Pins)
					323-1304	1	Use with 2 Fault Light Cont.
					323-1200	6	Use with 12 Fault Light Cont.
					323-1306	1	Housing, 6 Pin
					323-1200	8	Contact, Pin

Notes:

- Selection required do to the varations in cutouts for meters, switches, etc; Contact nearest Authorized Distributor, provide configuration data for panel required. Distributor will consult with the Parts Technical Information Center for the replacement panel.
- Not Illustrated.

 Generator Control

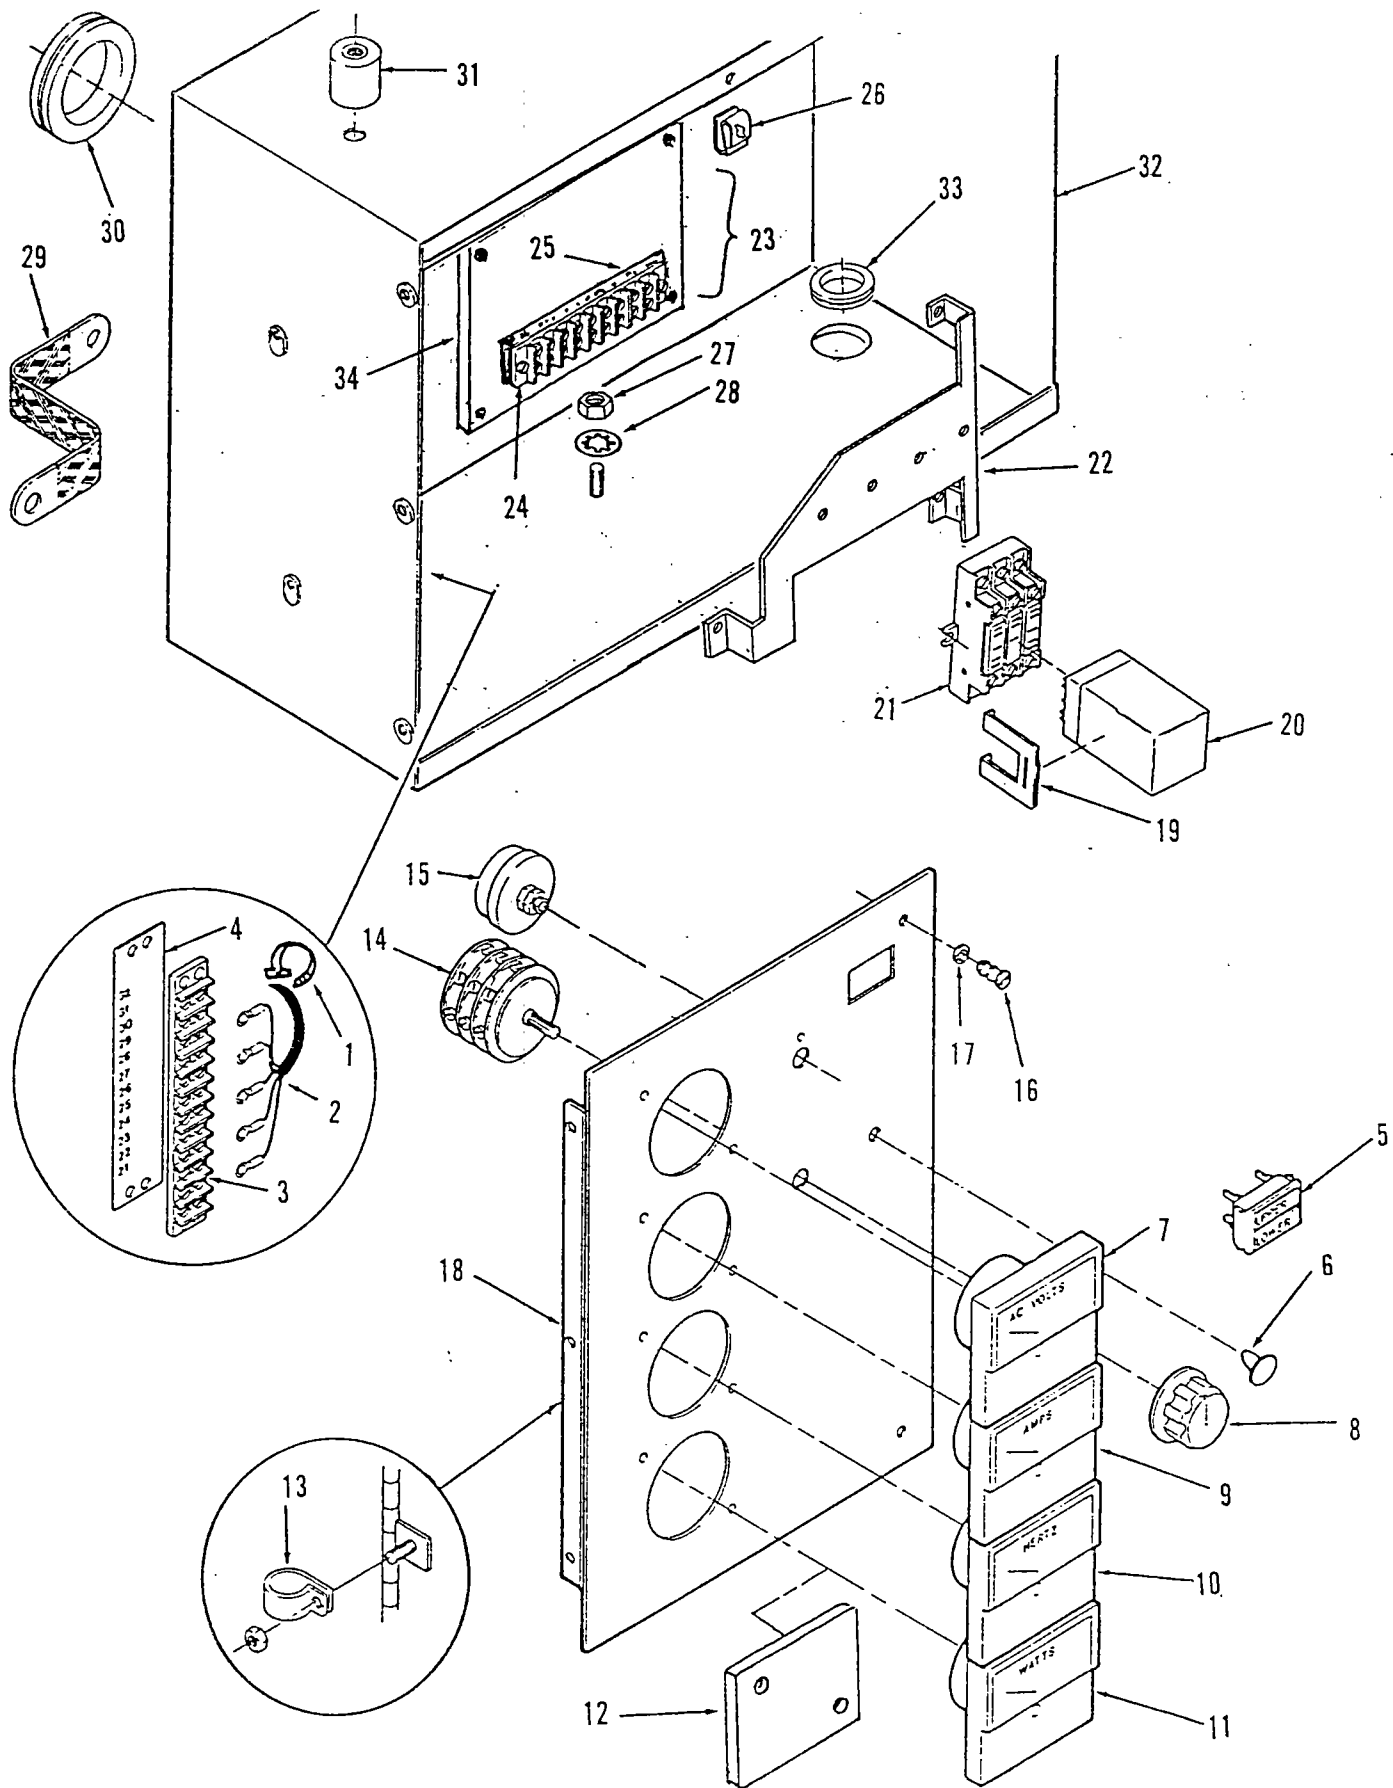


Generator Control

REF NO.	PART NO.	QTY USED	PART DESCRIPTION	REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	332-1445	2	Tie, Cable	18	Note 2	1	Door, Control
2	338-2375	1	Harness, Wiring		821-0004	3	Screw, Self-locking - Hex (#10-32 x 5/16")
	812-0065	2	Screw, Machine - Round Head (#6-32 x 5/8")	19	307-1987	6	Clip, Relay
3	332-0607	1	Block, Terminal (TB1)	20	307-1056	3	Relay, 24 VDC (K21)
4	332-2723	1	Strip, Marker	21	323-0804	3	Socket, Relay
5	322-0363	1	Light, Indicator - Dual (DS21, DS22)		815-0544	6	Screw, Machine - Round Head with IT Lock Washer (#6-32 x 1/2")
6	517-0131	1	Plug, Button				Bracket, Mounting - Relay
7			Voltmeter (M21)	22	319-0447		
	302-1148	1	Dual Scale 0-300/0-600V		812-0065	4	Screw, Machine - Round Head (#6-32 x 5/8")
	302-1753	1	Single Scale 0-750V	23	301-9856	1	Terminal Board Assembly
8	303-0032	1	Knob	24	332-0751	1	Block, Terminal
9			Ammeter (M22)		812-0066	2	Screw, Machine - Round Head (#6-32 x 3/4")
			Single Scale	25	332-0853	1	Strip, Marker
	302-1176	1	0-200 Amp	26	406-0332	2	Receptacle, Fastener
			Dual Scale Volt. Codes L & Z	27	871-0015	1	Nut, Hex (1/4-20)
	302-1724	1	250/500 Amp	28	853-0013	1	Washer, Lock - ET (1/4")
	302-1725	1	375/750 Amp	29	337-0049	1	Strap, Electrical (Ground)
10	302-1720	1	Meter, Frequency (M23)		800-0024	1	Screw, Cap - Hex Head (5/16-18 x 1/2")
11	Note 1	1	Wattmeter (M24) (See Separate page for Components)		856-0008	1	Washer, Lock - EIT (5/16")
12	301-9993	1	Cover, Meter Hole	30	508-0051	1	Grommet
	815-0385	2	Screw, Machine - Round Head, Black (#6-32 x 1/2")	31	402-0527	2	Mount, Vibration
	870-0183	2	Nut, Hex with ET Lockwasher (#6-32)		800-0051	4	Screw, Cap - Hex Head (5/16-18 x 1/2")
13	332-0052	1	Clamp, Loop		850-0045	4	Washer, Lock - Spring (5/16")
	870-0131	1	Nut, Self-locking - Hex with ET Lock Washer (#10-32)	32	301-8065	1	Box, Control
14	308-0284	1	Switch, Rotary (S21)	33	508-0001	1	Grommet
15	303-0287	1	Rheostat (R21)	34	301-9855	1	Plate
16	406-0334	2	Clip, Fastener				
17	406-0333	2	Stud, Fastener				

Notes:

- Components for Modules located on separate pages, consult Table of Contents for page number.
- Selection required do to the variations in cutouts for meters, switches, etc:
Contact nearest Authorized Distributor, provide configuration data for panel required. Distributor will consult with the Parts Technical Information Center for the replacement panel.

 
Potential Transformer

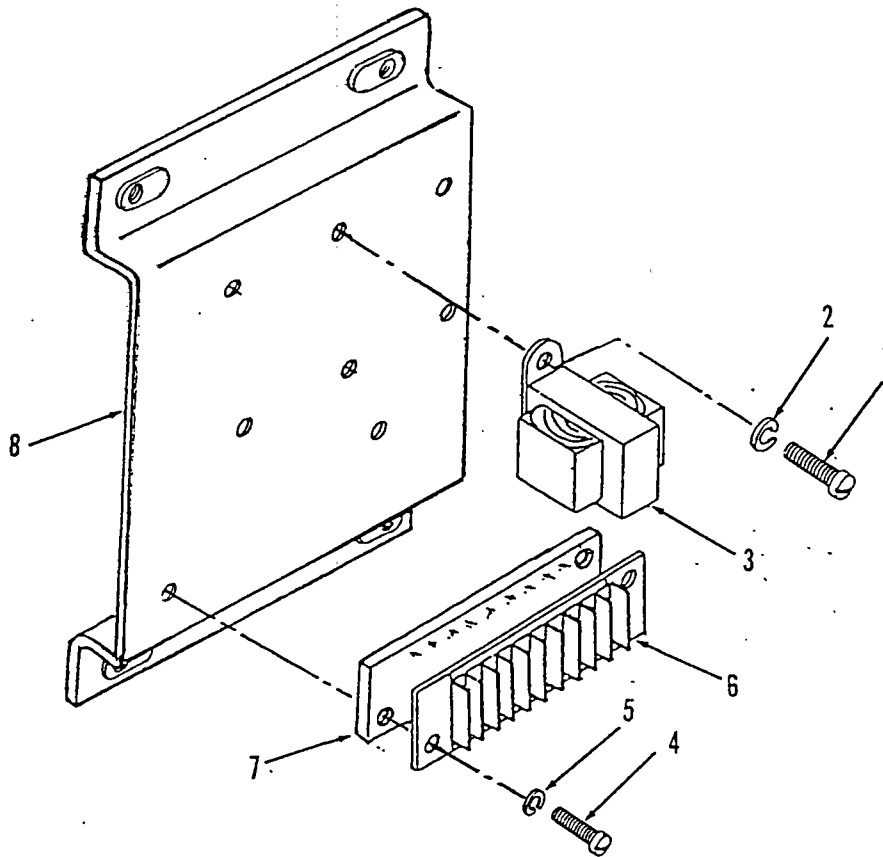

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	812-0079	6	Screw, Machine - Round Head (#8-32 x 1/2")
2	850-0025	6	Washer, Lock - Spring (#8)
3	315-0642	3	Transformer, Potential
4	812-0082	2	Screw, Machine - Round Head (#8-32 x 3/8")
5	850-0025	2	Washer, Lock - Spring (#8)

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
6	332-2562	1	Block, Terminal (10 Place)
7	332-2563	1	Strip, Marker
8	319-0032	1	Bracket, Mounting
	812-0156	4	Attaching Parts for Bracket
	850-0040	4	Screw, Machine - Round Head (1/4-20 x 1 1/2")
		4	Washer, Lock - Spring (1/4")

 
Wattmeter

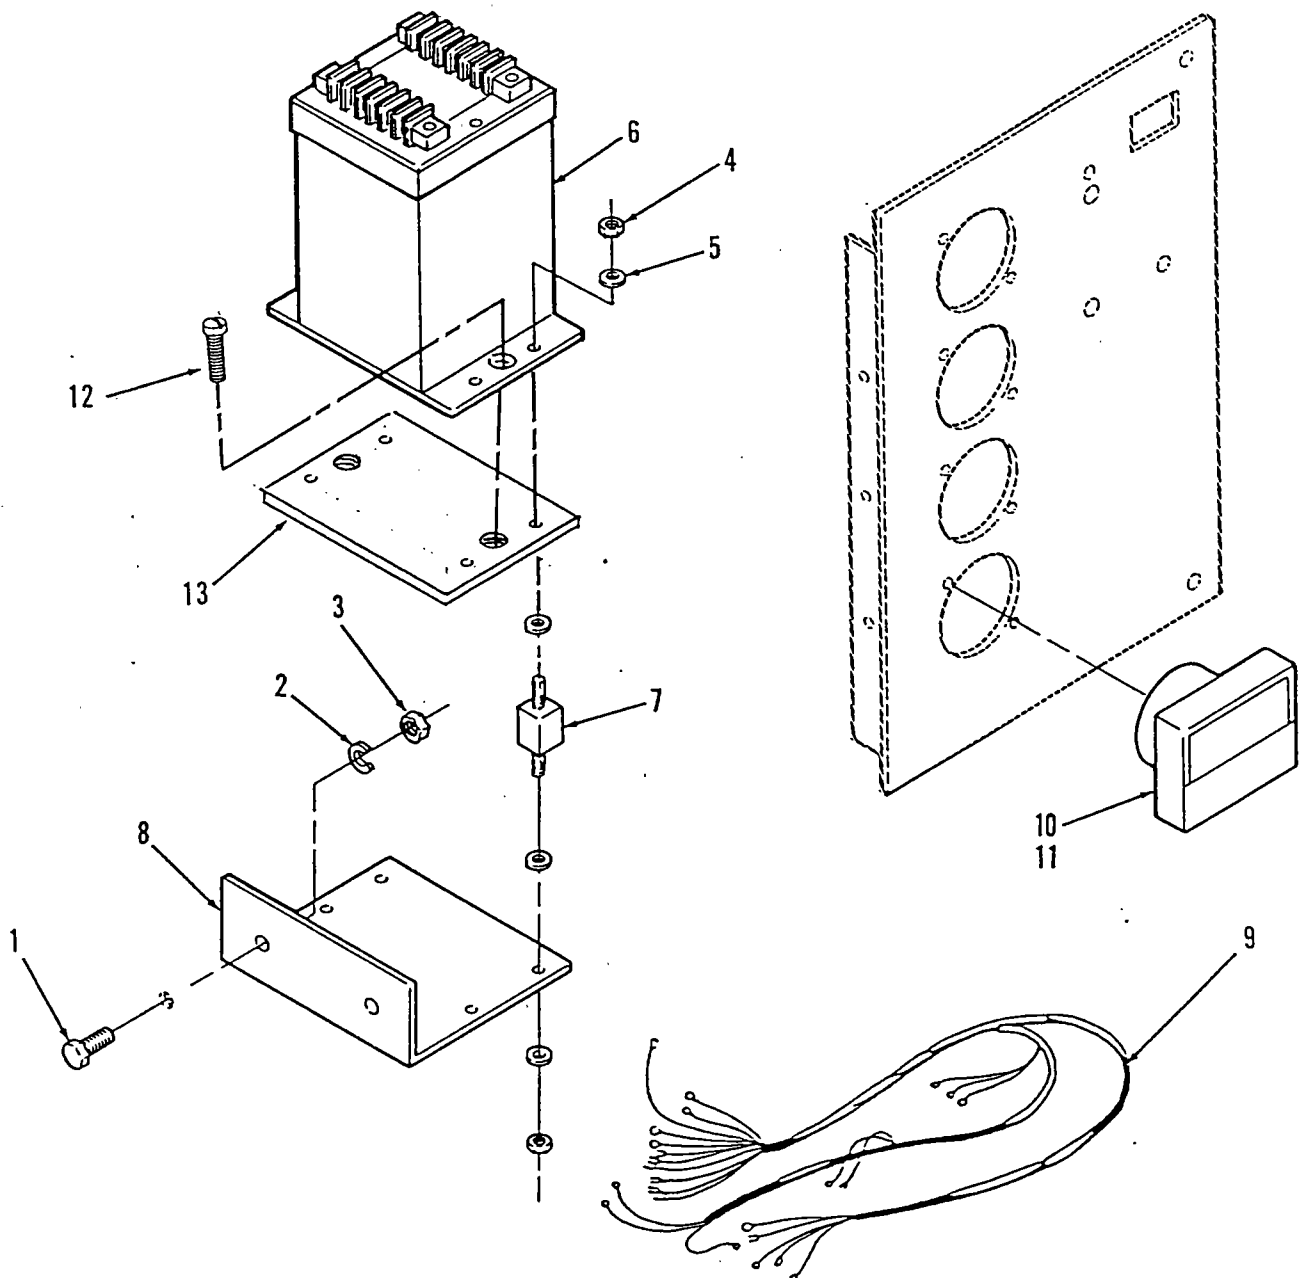

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	821-0017	2	Screw, Cap - Hex Head (5/16-18 x 1/2")
2	850-0045	2	Washer, Lock (5/16)
3	862-0014	2	Nut, Hex (5/16-18)
4	860-0008	8	Nut, Hex (#8-32)
5	856-0002	16	Washer, Lock - ET (#8)
6	302-1833-01	1	Transducer, Watt
7	402-0354	4	Mount, Shock
8	301-6987	1	Bracket, Mounting

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
9	338-1936	1	Harness, Wiring
10	302-1722	1	Wattmeter (Less Dial)
11	302-1721-06	1	Dial, Wattmeter
	302-1721-07	1	Scale 0-160kW
	302-1721-08	1	Scale 0-180kW
		1	Scale 0-200kW
12	813-0102	2	Screw, Machine - Round Head (#10-32 x 3/8")
13	319-0030	1	Plate, Support - Transducer

 Control Heater

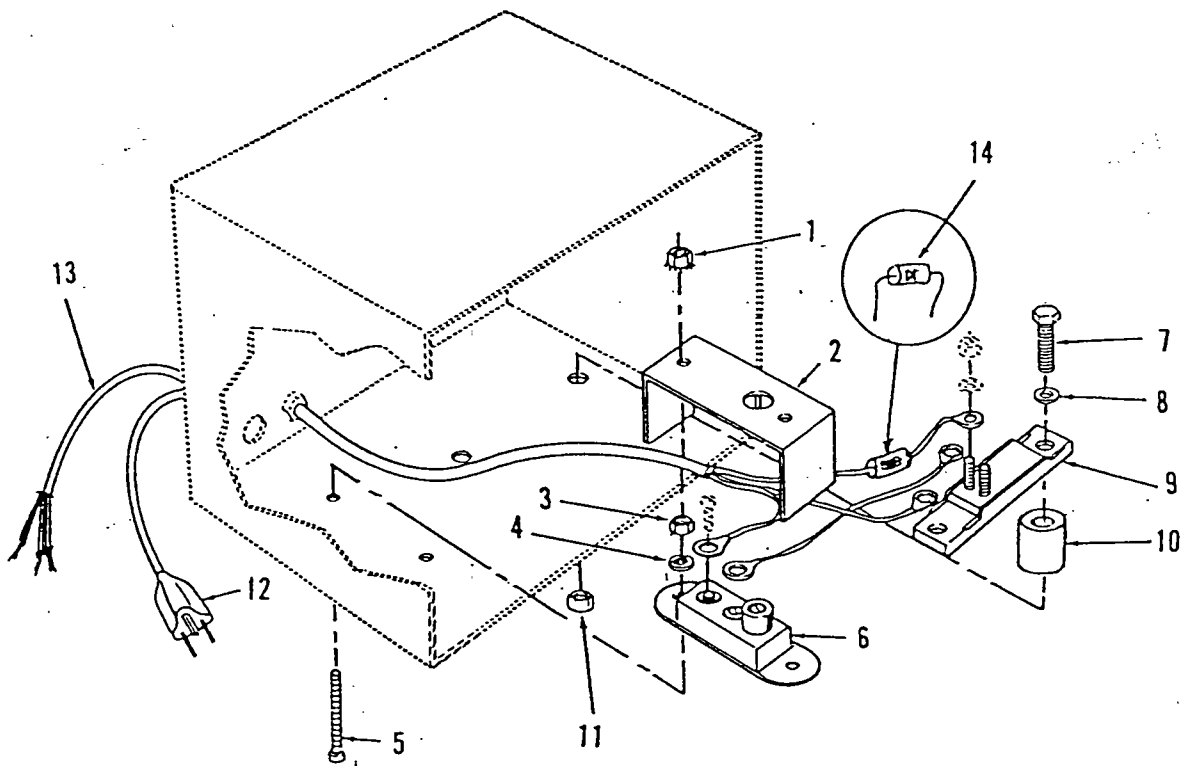

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
1	870-0183	2	Nut, Self-locking - Hex (#6-32)
2	301-1886	1	Cover
3	860-0006	1	Nut, Hex (#6-32)
4	854-0006	2	Washer, Lock - IT (#6)
5	812-0070	2	Screw, Machine - Round Head (#6-32 x 1-1/4")
6	309-0128	1	Thermostat, Adjustable
7	800-0034	2	Screw, Cap - Hex Head (5/16-18 x 2-1/4")
8	526-0113	2	Washer, Flat (5/16")

REF NO.	PART NO.	QTY USED	PART DESCRIPTION
9	333-0151	1	Heater, Electrical 120VAC
	333-0378	1	240VAC
10	130-1107	2	Spacer
11	870-0257	2	Nut, Self-locking - Hex (5/16-18)
12	335-0161	1	Cable, Electrical (120VAC Application)
13	338-2121	1	Harness Wiring with Diode, less plug (240VAC Application)
14	357-0013	1	Diode
15	98-3232	1	Decal, Warning - Shock Hazard (Not Illustrated)